 
## LEFTON


# **Shower System Installation**
 
## **INSTALLATION MANUAL**

Tools You Will Need:







Model: SS2203

Adjustable wrench

Hexagon wrench

Philips Screwdriver

#### Before the Installation

- 1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
- 2.Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 3. Shut off the main water supply prior to beginning installation.
- 4.Do flush the water supply lines to remove any dirt and debris before installation (IMPORTANT).
- 5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
- 6. After the installation, check for leaks and make sure every joint is safely sealed.

## **Cleaning and Maintenance**


Parts List

- 1.Rinse with clean water and dry with a soft cloth.
- 2.Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
- 3.Do not use cloth with a coarse surface.


F BB O C C BAA BB P P E
-------------------------

Part	Name	Quantity
Α	S-union	2
В	Escutcheon A	2
С	Valve body	1
D	Riser	1
Е	Hose A	1
F	Handshower	1
G	Showhead	1
Н	Escutcheon B	1
I	Screw	1
J	Set screw	1
K	Alley key	1
L	Mounting plate	1
М	Anchor	1
N	Teflon tape	1
0	Handheld sprayer	1
Р	Hose B	1
AA	Rubber washer A	2
BB	Rubber washer B	4
CC	Rubber washer C	1


## **Installation Guide**

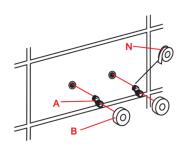


1. Wrap the threads of the s-union (A) with Teflon tape (N). Screw the s-union (A) into the female fittings of water suppliers. Make sure that the s-union (A) are level. Install the escutcheon A (B) to the s-union (A).

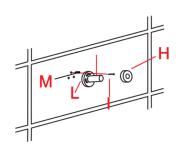


2. Drill the hole and install the anchor (M). Fix the mounting plate (L) to wall with screw (I), then put on the escutcheon B (H) to the mounting plate (L).

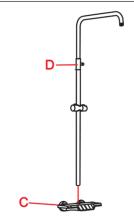


3.Screw the riser (D) into the valve body (C).

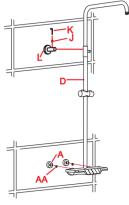

4. Fix the rubber washer A (AA) into the inlets on the valve body (C). Install the connecting threads on the s-union (A). Then, locate the riser (D) assembly into the mounting plate (L) and tighten the ser screw (J) with the Alley Key (K).

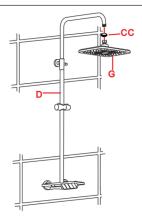

 5. Put on the rubber washer C (CC) to the showerhead (G) and thread the showerhead (G) into the riser (D).



6.Install the handshower (F). Place rubber washer B (BB) in both ends of the hose A (E). Screw one end into the bottom of the valve body (C) and the other end into the handshower (F). Install the handheld sprayer (O). Place rubber washer B (BB) in both ends of the hose B (P). Screw one end into the bottom of the valve body (C) and the other end into the handheld sprayer (O).

### **Troubleshooting**

Problem	Possible Cause	Corrective Action
Water does not shut	1.O-ring is not seated correctly or worn.	1.Reseat or replace O-ring.
off completely.	2.Cartridge may be defective.	2.Replace cartridge.
Leaks at waterline	1.Worn or broken washer.	1.Reseat washer.
connection.	2.Faucet body may be defective.	2.Replace faucet (contact us for the replacement).
Leaks from handle.	1.Cartridge may come loose.	1.Reseat cartridge tight.
	2.Cartridge may come defective.	2.Replace cartridge.
Leaks at hose	1.Hose connection is loose.	1.Tighten hose.
connection.		2.Replace hose.
Leaks at shower valve	1.Connection may come loose or not	1.Check connections.
connection.	sealed completely.	2.Replace valve body.
	2.Defective shower valve inlet or outlet	
	connector.	
Diverter knob does not	1.Diverter cartridge may be defective.	1.Replace cartridge.
work.		
LED light does not	1.Diverter LED generator.	1.Replace LED spray head (for kitchen faucet).
Light or noisy LED		2.Replace LED threaded pipe (for separate faucet spout).
showerhead.		3.Replace LED generator (for others).
Low flow.	1.Check for water pressure problems.	1.Clean or replace the aerator.
	2.Aerator may be dirty or clogged.	2.Remove waterflow restrictor if available.
		3.Install booster or pump (if applicable).