


## **RED PANDA TRIGGER ADJUSTMENT**


### **First Stage Trigger Force Adjustment**

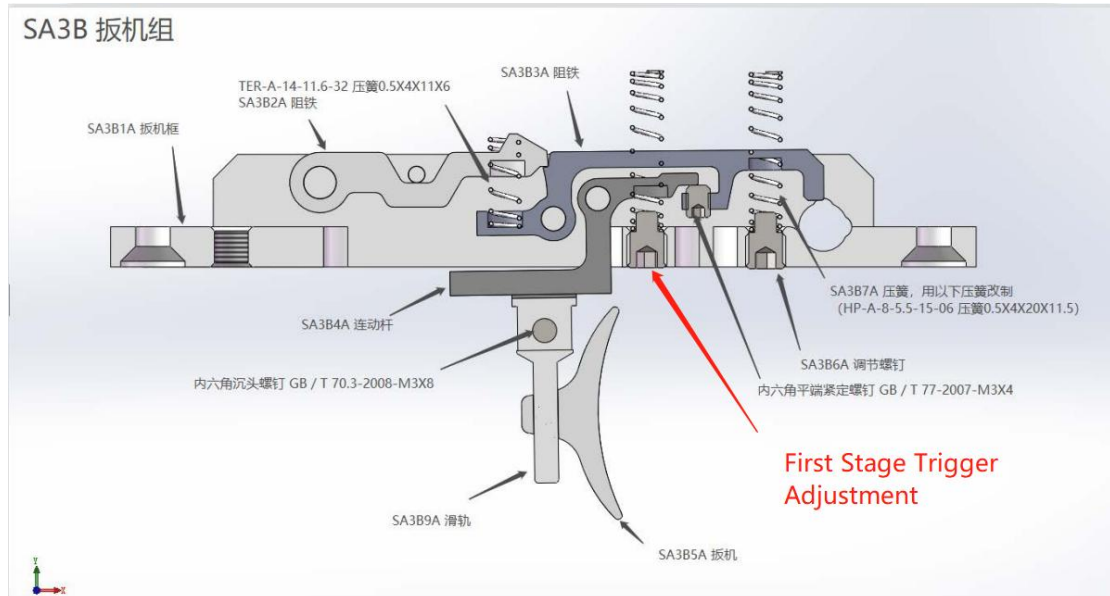

**Clockwise tighten the screw to increase the trigger force of the first stage of the trigger.**

**Counterclockwise loosen the screw to decrease the trigger force of the first stage of the trigger.**

## 2 Stage Trigger Travel Distance Adjustment

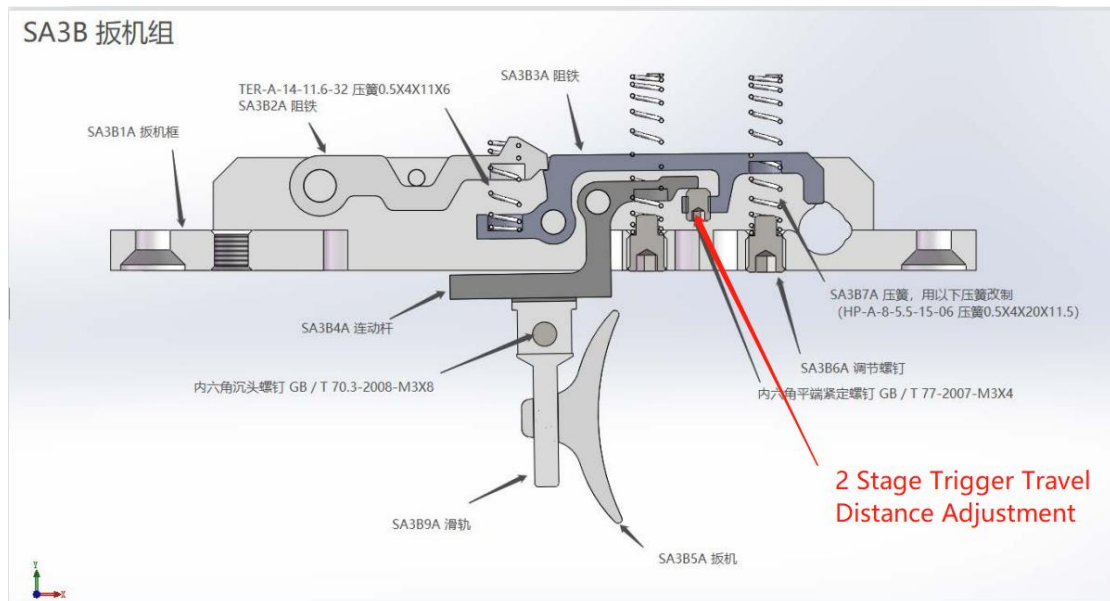


**Clockwise tighten the screw to reduce the travel distance from the first stage to the second stage of the trigger.**

**Counterclockwise loosen the screw to increase the travel distance from the first stage to the second stage of the trigger.**

**Second Stage Trigger Force Adjustment**

## Second Stage Trigger Force Adjustment

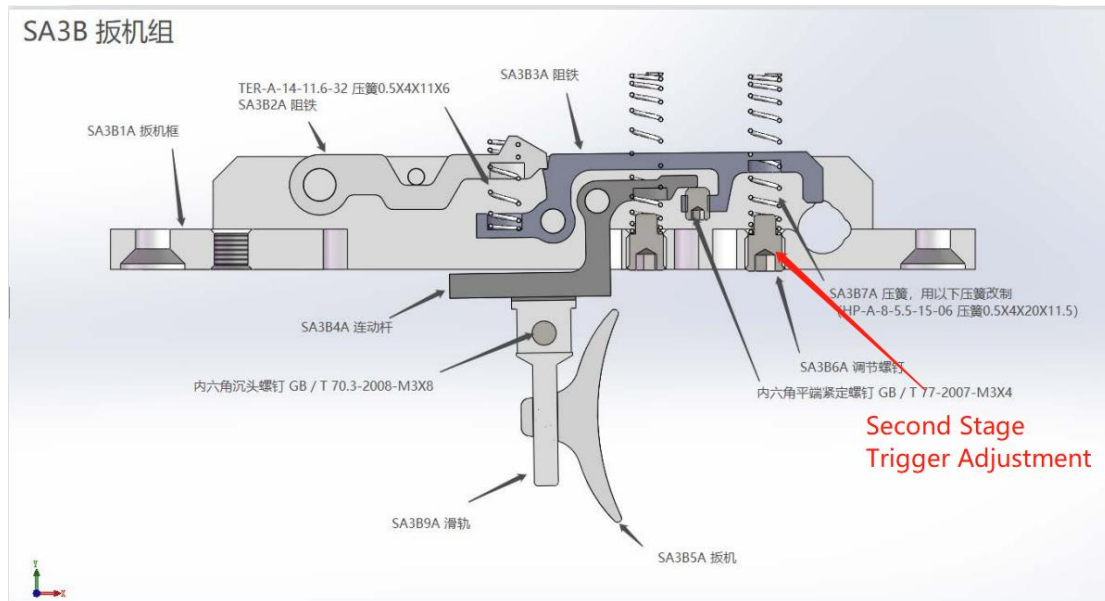

**Clockwise tighten the screw to increase the trigger force of the second stage of the trigger.**

**Counterclockwise loosen the screw to decrease the trigger force of the second stage of the trigger.**