

Ceramic Tower Heater



Instruction Manual

Model:TPH1107R-L

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

Safety Precautions

When using this appliance, below safety precautions should always be followed.

- To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
- Dangerous high voltages are present inside this enclosure. To avoid electric shock, DO NOT open the enclosure, refer servicing to qualified personnel only.
- To protect against fire, electrical shock and injury to persons, do not immerse the unit, plug or cord in water or spray with liquids.
- The heater shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed near the product. Dry location use only.
- No naked flames sources, such as candles, should be placed on the product.
- Any ventilation holes should not be impeded by covering with items, such as newspaper, table paper, tablecloths, curtains etc. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. Never obstruct the air inlet and outlet. Do not use any object to cover this appliance.
- Only connect to a suitable AC 240V~50Hz mains wall outlet. Do not overload the wall outlet.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system. Other use not recommended may cause fire, electric shock or injury.
- This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Keep out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
- To disconnect, grip the plug and pull it from the wall outlet. Never pull by the cord. Do not use with wet hands or in damp environments.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside. Repairs should only be performed by qualified personnel.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use this appliance outdoors. This appliance is for household use only and not for commercial or industrial use.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater if it has been dropped.

WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Warning: In order to avoid overheating, DO NOT COVER the appliance.

Warning: Do not place the heater on LONG PILE CARPET OR FLOKATI RUGS. Use a heat board if necessary.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

WARNING: FIRE RISK EXISTS IF THE HEATER IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS.

Always

1. Always position the heater in accordance with the instructions.
2. Always make sure the electrical socket is accessible and located adjacent to, but not above the heater.
3. Always use a fireguard around the heater in the presence of Children, Animals or Elderly/ Persons with reduced/ impaired physical, sensory or mental capabilities in the absence of adequate supervision.
4. Always turn the appliance OFF and unplug it from the mains wall outlet when it is not in use, when moving the appliance from one location to another and before cleaning.

Never

1. Never leave the appliance unattended when it is in use. Never leave children unsupervised in a room where the heater is ON and unguarded.
2. Never obstruct or cover the air outlet or force items into the heater openings, this could cause overheating and consequent risk of fire. Never insert or allow foreign objects to enter the air outlet as this may cause damage to the appliance.
3. Never position or use the heater in the immediate vicinity of water, such as bathtub, shower, washbowls, swimming pool etc.
4. Never use aerosols or steam cleaners on or around the heater.
5. Never use the fan heater in rooms with explosive gas or while using flammable solvents, varnish or glue.
6. Never route the power supply cord under carpet etc.
7. Never use the heater to dry clothes, etc.
8. Never operate the appliance with a damaged cord or plug, after a malfunction or if it is not working normally, dropped or damaged in any way.
9. Never let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.
10. Never move the appliance by pulling the cord.
11. Never immerse the product in water or any other liquid for any reasons.

12. Never use accessories that are not recommended or supplied by the manufacturer.

Position Instructions

This heater must be placed on a hard, level, heat resistant surface. When positioning, please keep the following points in mind:

- The heater requires no installation. It should be used solely as a portable appliance. The heater must always be used and stored in an upright position.
- This heater must not be located immediately below an electrical outlet.
- The heater MUST only directly be plugged in to a fixed Domestic Power outlet, DO NOT use in conjunction with Extension cords, Power Boards or Double Adaptors, as these can overheat when overloaded.
- Do not use the appliance in rooms less than 4m² areas.
- Keep the air inlet and outlet free from objects at least 100cm in front and 50cm behind the heater. Do not hang anything on or in front of the fan heater.
- Never position the heater close to curtains or combustible materials such as furniture, cushions, bedding, paper, clothes, curtains etc. Keep the appliance at least 100cm (1m) from walls and any other combustible materials.
- Never position or use the heater in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Keep hearthrugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of hot air and damage both soft furnishings and heater.

Cautions:

 
Do not operate the appliance on an inclined place. Do not move the appliance while the appliance is switched on.

In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.


This heater is hot when in use or directly after use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains well away from the heater. Do not drape laundry or any other items over the heater.

At the end of the product's serviceable life it should be disposed of carefully and safely in accordance with local authority regulations.


Features of Your Ceramic Tower Heater

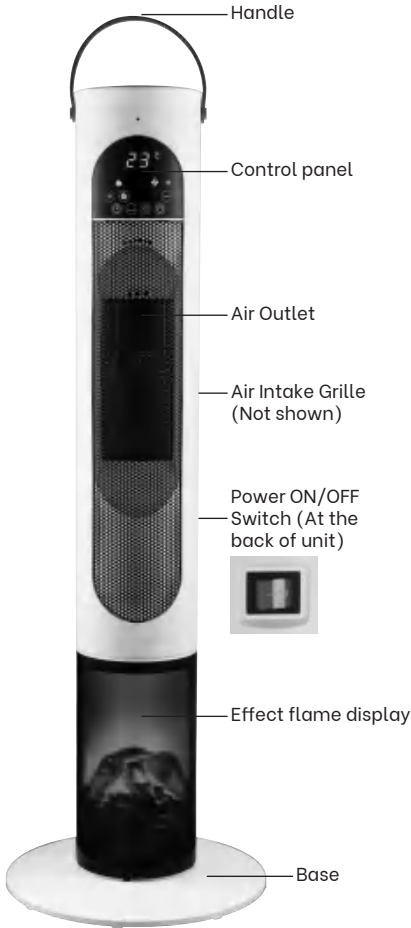

Control panel

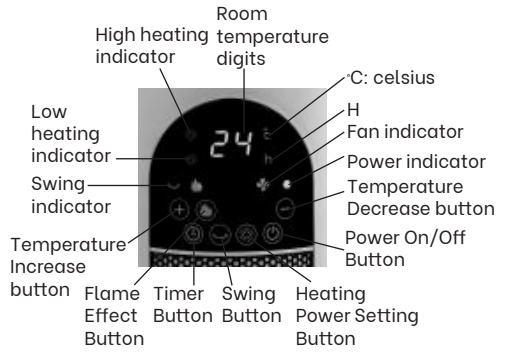 

Remote control

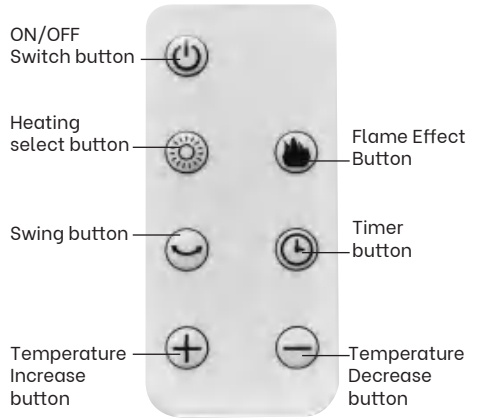 

Your Ceramic Tower Heater

Congratulations on the purchase of your new Heater.

Before first using your Heater, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are quite familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with **IMPORTANT SAFEGUARDS**. Find a place and keep this booklet handy for future reference.

Designed to function quietly and safely under normal circumstances.

This quality Heater is fully portable, with sturdy base and a modern design.

Assembly

Before using the heater, the base plate (supplied separately in the carton), must be fitted to the unit. Remove the heater and the base plate from the carton, base plate mounting screws are contained in the satchel with the Instruction Manual.

1. The base plate consists of two halves that need to be assembled and secured to the heater, fit the half that has the cable channel incorporated first, clip supply cord into the cable channel as show in (Fig.1)

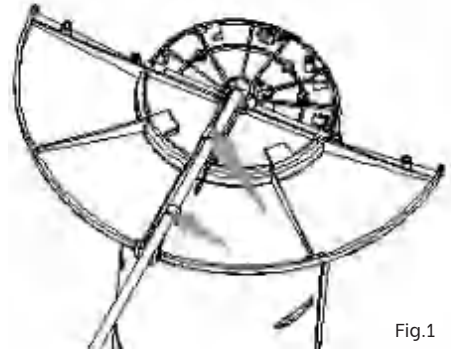 


Fig.1

2. Fit the the other half of the base plate and align with corresponding screw holes of the matching half and push down as shown in (Fig.2)

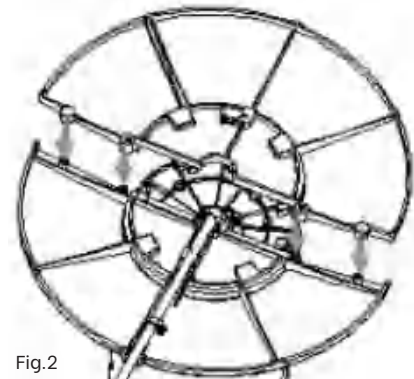 


Fig.2

3. Rotate the assembled base plate counterclockwise to engage the base plate locking tabs with the heater as shown in (Fig 3)

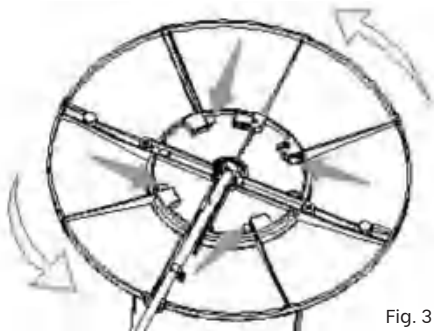 


Fig. 3

4. Secure the base plate to the heater with 3 x ST3.5 x 10mm screws as shown in (Fig.4)


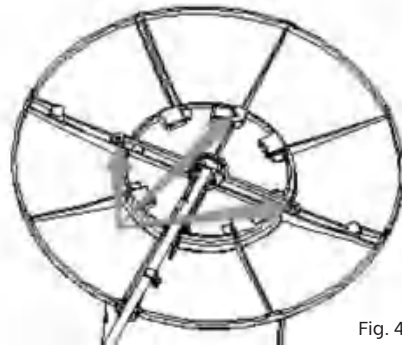 


Fig. 4

 Operation

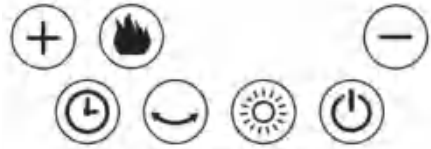

When operated for the first time, the unit may emit an unpleasant burning type smell. This is normal, and will disappear after a short period of use.

1. Carefully remove the heater from the plastic bag and carton. Place the heater on a level surface in a stable upright position. Make certain the power switch is in the "OFF" position.
2. Unwind the power cord and plug your Heater into a socket outlet. Ensure that the voltage on the specifications plate is the same as in your home.
3. Turn the power switch (located at the back of the heater) to on ('I' position). The heater is in standby Mode. The appliance emits a beep (if "beep" sound is ON), the LED display shows the room temperature.
 - a. Press to "⊙" button access the rest of the control panel. The heater is in low heat power(1400W).
 - b. Press to "⊕" button to select , Low heat power(1400W), High heat Power: 2000W.
 - c. TIMER: Press "⌚" button, then choose "+" or "-" button to fix the timer from 0-12 hours, repeatedly to set a period after which the heater will turn itself off (From 0 hour -12 hours). After the setting is completed , the setting time flashes 4 times, the setting is completed and memorized, and the current actual temperature is restored to display.
 - d. Press the "↻" button to activate swing. Press it again to cancel.
 - e. Press the "☀️" button to to activate the flame effect display, Press it again to cancel

- f. Press the + or - buttons to increase or decrease to select the desired room temperature setting, ranging from 10-35C

When actual room temperature is 4C or lower than the selected temperature the heater will engage the high heating mode, if 2C lower it will activate heating at Low mode.

When room temperature reaches selected temperature the heating will switch Off.

Heating will automatically resume at low heating mode when room temperature reaches 2C lower than selected temperature and cycle On/Off to maintain selected temperature,

Note: The heater will only activate when the selected temperature is 2C higher than the ambient room temperature and will turn Off when the set temperature is less than or equal to the ambient temperature.

- g. Press to "🔌" turn off the heater, Please note: the unit will take approx 30 seconds to stop blowing out air. Turn the switch off at the back of the unit.

WARNING: Allow the heater to cool down for 30-60 seconds before switching on again and before turning off at the power outlet. This will protect the inner parts.

NOTE: It is normal when the heater is turned on for the first time or when they are turned on after having not been used for a long period of time to emit some smell and fumes. This will disappear when the heater has been on for a short while.

Overheat protection

This heater is fitted with a safety overheat protection device. If overheating occurs, ensure the appliance is switched 'Off' and turn off the power supply. Unplug the appliance and let it cool for 30 minutes. If something is obstructing the grille, ensure the object is removed. After 30 minutes has passed, turn the heater on again as described above.

WARNING: In order to avoid a hazard due to inadvertently resetting the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Tip over switch

 
The heater comes equipped with a safety tip over switch. It will cut off the power due to accidental knocking over.

Infrared Remote control





Battery Replacing (For Remote Control)

1. The remote control requires one “CR2025” type 3-volt lithium battery (included). If the operation of the remote control becomes unsatisfactory, replace with a new 3-volt lithium battery.
2. Place the remote control with the control buttons facing downward.
3. Loosen the cover screw, Press the locking arm of the battery cover and pull out the tray. (Push tab “A” towards the middle first. See the Fig.1).



4. Place one new 3V CR2025 battery into the battery tray with the positive “+” side facing up, observing the polarity markings. If the battery is placed incorrectly, the remote control will not work. CAUTION: There is danger of malfunction if the battery is replaced incorrectly. Replace only with the same or equivalent type of battery.
5. Insert the battery holder into the battery compartment and ensure it is secured. tighten the cover screw.

THIS PRODUCT CONTAINS A BUTTON BATTERY

 WARNING	
KEEP OUT OF REACH OF CHILDREN Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.	

Note: If swallowed, immediately call the 24-hour Poison Information Centre on 13 11 26 (in Australia) or 24-hour National Poisons Centre on 0800 764 766 (in New Zealand) for fast, expert advice. Dispose of used batteries in an environmentally friendly manner in accordance with local council regulations immediately.

This product has been designed so that the coin/button cell battery is not accessible to young children, as the battery compartment cover is secured with a screw or mechanical fastener. Always ensure that the compartment is secured before use.

6. Tell others about the risk associated with button batteries and how to keep their children safe.

Technical Specifications

Power Supply: AC 220-240V~ 50Hz

Power Consumption: 2000W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

Care and Cleaning

- Before cleaning, ensure that the heater is switched in the off position and is unplugged from the socket.
- Clean the exterior surfaces of the heater with a dry, soft cloth.
- Never use any form of detergents or solvents to clean the heater.
- Never spray with liquids or submerge in liquids or water.
- DO NOT attempt to clean the interior of the heater.
- DO NOT ATTEMPT TO OPEN THE CASE OF THIS HEATER at any time. There are no consumer serviceable parts inside this unit.
- When the heater is stored during the off season, neatly wind the power cord around the base of the heater to prevent any damage to the power cord.

Note: If the power cord of the appliance becomes damaged discontinue use.

Disposal

Do not dispose of packaging or the product through your household waste!

The product and packaging are made from recyclable materials (plastics, metals, paper). If the product is no longer suitable for use dispose of it in an environmentally friendly manner in accordance with your local council regulations.