



www.gillathletics.com  
800-637-3090

## 79400 - STANDARD SETTINGS INDICATOR ASSEMBLY INSTRUCTIONS


The PV Standard Setting Indicator stands 5'-8" tall, with two large 9 numerals and the display rotates 360° for visibility.

Display frame and upright are aluminum with powder coat finish.

The powder coated steel base is 18" square with tip and roll wheels.

### Parts:

- 700105 - Base Assembly
- 79320 - Upright Post & Bell
- 79310 - Display Frame

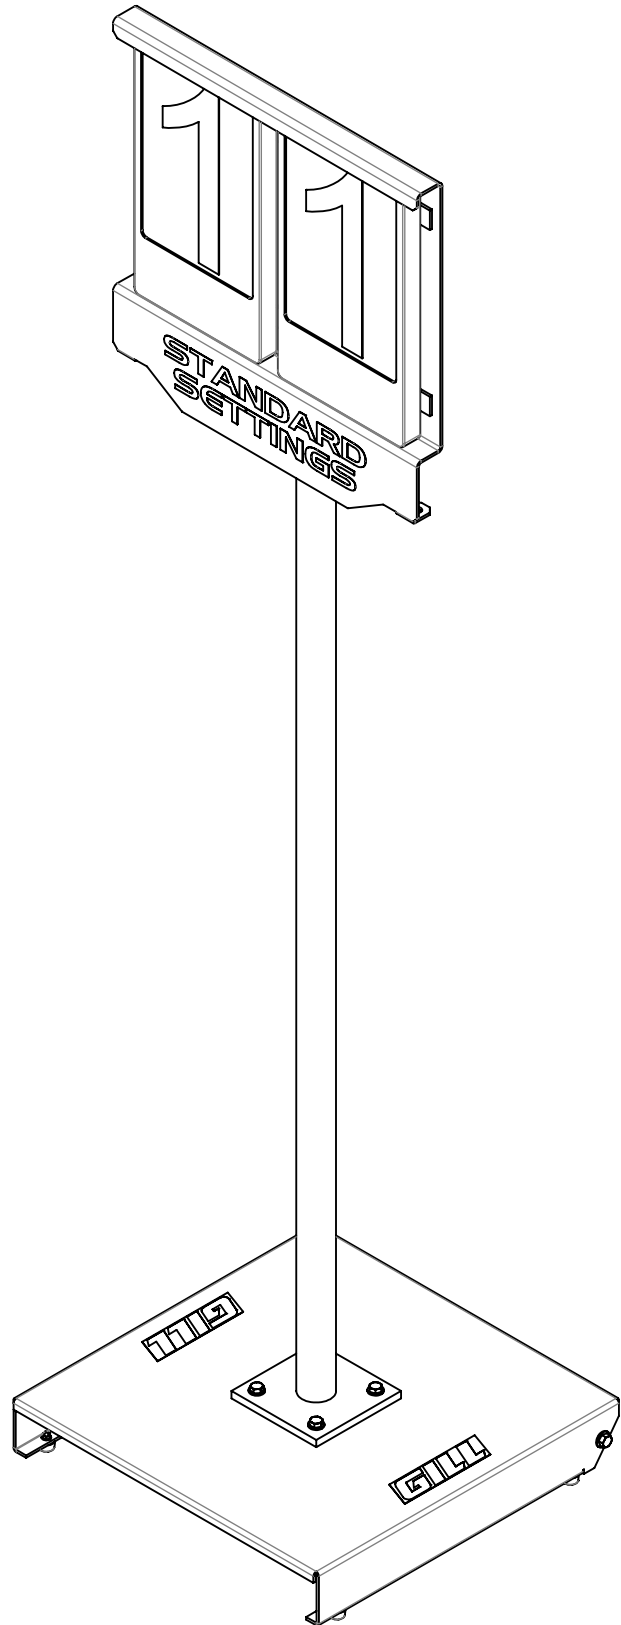



www.gillathletics.com  
800-637-3090

## 79400 - STANDARD SETTINGS INDICATOR ASSEMBLY INSTRUCTIONS

Assemble the base and fasten it to the upright as shown below.

**Do not over tighten the nylock nut that holds the skate wheel in place. The wheel must be able to spin.**


Check equipment for loose connections and re-tighten once per year.

### Tools Required:

- (2) 1/2" Wrench
- (1) Flat Head Screwdriver

### Hardware:

- (4) M726 Black Rubber Foot
- (4) M2229 #6-32 x 5/8" Truss Head Screw
- (4) M2228 #6-32 Flange Whiz-nut
- (2) M718 61mm Skate Wheel
- (4) M717B Bearing (2 per skate wheel)
- (2) M2834 5/16"-18 x 2" Full Thread Hex Bolt, Zinc Plated
- (4) M2207 5/16"-18 x 1 1/2" Hex Bolt, Zinc-Plated
- (8) M1254 5/16"-18 Nylock Hex Nut, Zinc-Plated
- (12) M2273 5/16" Flat Washer, Zinc-Plated

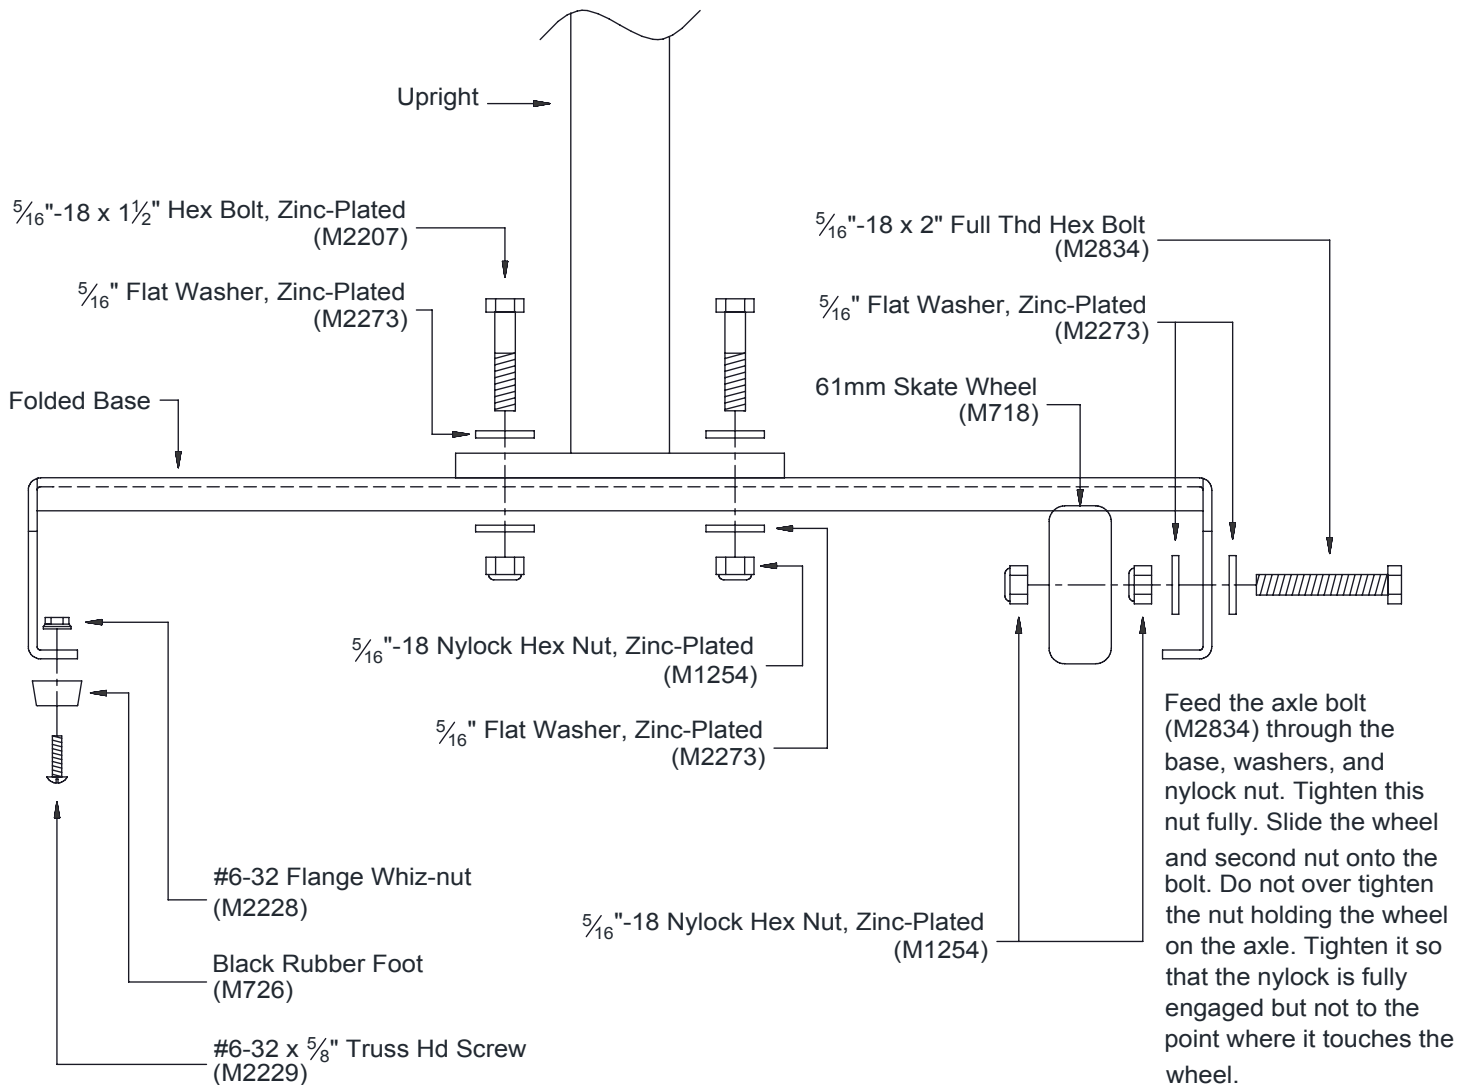



www.gillathletics.com  
800-637-3090

## 79400 - STANDARD SETTINGS INDICATOR ASSEMBLY INSTRUCTIONS

