



TITLE BOXING DIGITAL BOXING TIMER  
DGBXT

USER'S MANUAL

Dear Customer,

Congratulations on your choice of the world's unique **Title Boxing Digital Boxing Timer. (DGBXT)**

### SALIENT FEATURES

- HOUSING** - Timer is housed in Grey Powder coated Metal housing
- STAND** - 12" tall black powder coated foldable Metal stand
- DISPLAY** - Four Digital Displays in green colour for better viewing from all four directions. Red Displays show Round number in progress.  
(It shows **Round Time set, Time elapsed & Round number in progress**)
- SOUND** - Four kind of sounds viz. **AIR HORN, ALARM, BELL & WHISTLE** has been provided. Any one Sound can be chosen. Low/High sound volume can also be selected.
- CLAPPER** - Provided

### FUNCTIONS

- Power ON/OFF
- 30 Sec/1 Minute Rest
- 1 Minute/ 1.5 Minute/ 2 Minute/ 3 Minute Round length
- Number of Round in progress
- PAUSE at any instance

### INSTALLATION

- STAND** - Assemble the stand and place the **TIMER BOX** on the top platform firmly
- CLAPPER** - Place the **CLAPPER** in the stand clips

## **POWER**

- Switch on the Power by ON/OFF switch and Red LED will come on.

## **OPERATION**

### **Power Supply**

- Check the power supply suitable for the Timer and plug in the cord.

**Set Round Time** - 1 min & 1.5 min setting switch has centre OFF position while 2 min & 3 min setting switch has only two positions.

For 1 Min Round - Place upper switch at 1 Min position

For 1.5 Min Round - Place upper switch at 1.5 Min position

**(2/3 Minute switch position will not interfere)**

For 2 Min Round - Place the lower switch at 2 Min position

**(1/1.5 Minute switch should be in OFF position)**

For 3 Min Round - Place lower switch at 3 Minute position

**(1/1.5 Minute switch should be in OFF position)**

**Rest Time** - Can be set at 30 second or 1 minute by setting the switch position accordingly

**Sound selection** - For Air Horn or Alarm sound set the button at Air Horn or Alarm position

**(Bell/ Whistle switch position will not interfere)**

- For Bell/Whistle sound set the button at Bell or Whistle position

**(Air Horn/Alarm switch should be in OFF position)**

**CAUTION** : Do not drop or mishandle the Timer as it can get damaged. Place it on a sturdy surface.