 


Quick Start Guide

# OontZ

## *Angle 3 BudZ*

Bluetooth Headphones

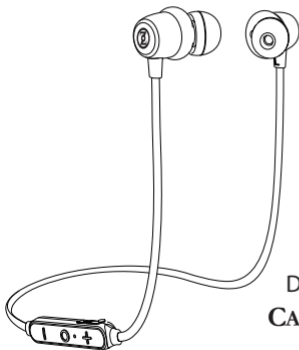

Designed and Engineered By  
**CAMBRIDGE SOUNDWORKS.**

# TheOontZ.com

# In the Package



OontZ Angle 3 BudZ Headphones



Quick Start Guide



- 1 Pair X-Large in-ear BudZ
- 1 Pair Large in-ear BudZ
- 1 Pair Medium In-Ear BudZ
- 1 Pair Small In-Ear BudZ




Micro USB  
Charging Cable



1 Pair Iso-Fit Cushions  
(The Iso-Fit Cushions have already  
been placed onto the earbuds)


Table of Contents	Pages
Getting to Know Your OontZ Angle 3 BudZ .....	1
Multi-Function Buttons .....	2
Phone Call Controls .....	3
Lights .....	4
Connectors & Built-In Mic .....	5
Battery Features .....	6
Charging the Battery .....	7-8
Pair and Connect Your Device .....	9-10
Comfort Fit with Iso-Fit Cushions .....	11
Select the Best Fitting In-Ear BudZ .....	12
Wearing Your OontZ Angle 3 BudZ Under-Ear .....	13
IPX7 Waterproof .....	14
Troubleshooting .....	15-16
Customer Support .....	17
Safety and Precautions .....	18-19
 
# Getting to Know Your OontZ Angle 3 BudZ

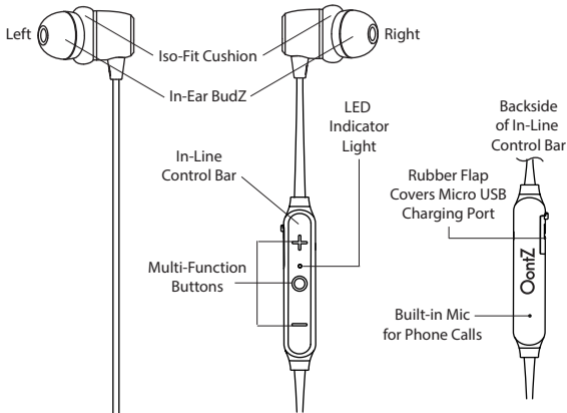


Note: The In-Line Control Bar will be on your right side when you are wearing the OontZ Angle 3 BudZ.

# Multi-Function Buttons

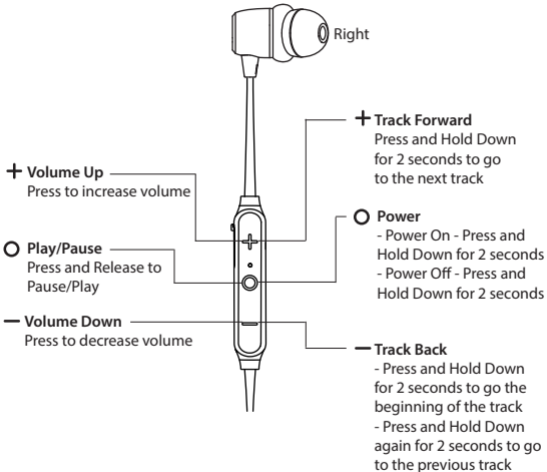 

# Phone Call Controls

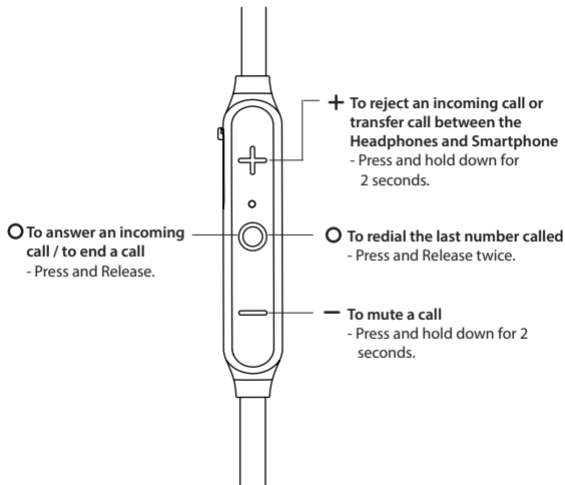 

# Lights

 
## **Blue Light lit when Headphone is on**

- **Flashing Blue**  
Headphone is in Bluetooth pairing mode
- **Flashing Blue 3 times every 5 seconds**  
Headphone is connected

## **Red Light lit when Headphone is charging**

- **Slowly flashing Red**  
battery is charging
- **Solid Red**  
battery is fully charged
- **Rapidly flashing Red**  
indicates battery charge is low

## **Red Light will flash rapidly twice when powered Off**

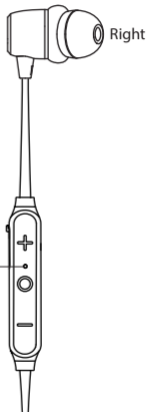


# Connectors & Built-in Mic

## Rubber Flap

- covers Micro USB Charging Port
- pull gently from the top to access the Micro USB Charging Port, it is a snug fit as part of the waterproofing

## Important:

 - The Headphone is not water-resistant or waterproof when the flap is open.
- The rubber flap needs to be closed before the Headphone is exposed to water or sweat.

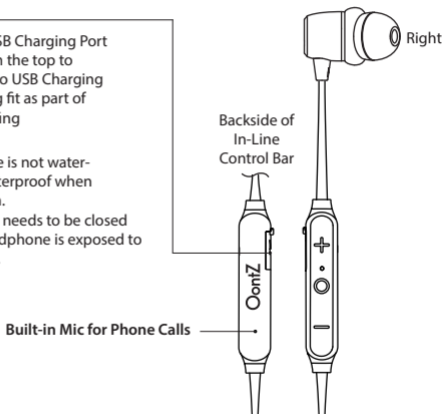



# Battery Features

- The rechargeable battery comes with a partial charge and the Headphones are ready to play.
- For maximum playtime, fully charge the battery.

## **Low Charge Remaining**

- When the battery charge has less than 10% remaining the Red Light will begin flashing rapidly.

## **Music Play Time**

- Up to 8 hours on a full charge, at 2/3 volume. Louder volumes will reduce the battery play time.

## **Charging Time**

- Up to 2 to 3 hours to fully charge a low battery.

## **Power Saving Feature**

- The Headphones will turn off 15 minutes after being disconnected from your device.

 
# Charging the Battery

- The Rubber Flap covers the Micro USB Charging Port.
- Pull gently from the top to access the Micro USB Charging Port, it is a snug fit as it is part of the waterproofing.

- Insert the small end of the Micro USB Charging Cable into the Micro USB Charging Port as shown.
- Insert the larger end of the Micro USB Charging Cable into a USB wall charger for a Smartphone or iPhone, or a USB port on your laptop/computer to charge the battery (see illustrations on page 8).

 
## Red Light lit when Headphones are charging

- **Slowly flashing Red**  
battery is charging
- **Solid Red**  
battery is fully charged

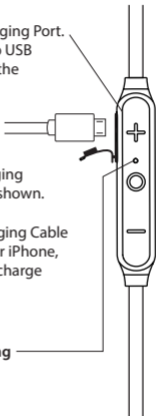


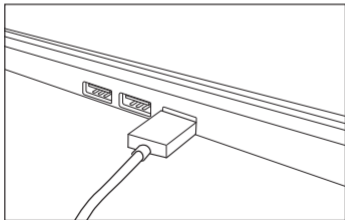 
Note: When the Headphones are turned on and they are not charging, the red light will flash rapidly when the battery charge is low with about 10% charge remaining.

## Charging the Battery (continued)

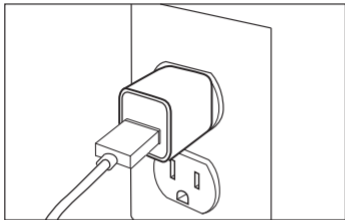

Insert the larger end of the Micro USB Charging Cable into a USB wall charger for a Smartphone or iPhone (USB wall charger \* that is 5V  $\overline{\text{---}}$  1A up to 5V  $\overline{\text{---}}$  2.4A maximum), or a USB port on your laptop/computer to charge the OontZ Angle 3 BudZ battery.

\* Only use a USB wall charger that is UL listed and on the USB wall charger the  logo will be printed.



\* Using a non UL listed USB wall charger or a USB wall charger supplying more than 5V  $\overline{\text{---}}$  2.4A could cause damage to the Headphones.

# Pair & Connect with Your Device - Step 1

## Turn ON your OontZ Angle 3 BudZ Headphones

Power On - Press and Hold Down  for 2 seconds.



### Flashing Blue Light

- The Headphones are ready to pair and connect.

### Blue Light flashing 3 times every 5 seconds

- Your device has connected to the Headphones and is ready to play
- The OontZ Angle 3 BudZ allow the last device it was connected with to automatically reconnect with the Headphones each time the Headphones are turned on and that device is within range.\*

### The OontZ Angle 3 BudZ can be connected to one device at a time.

- To connect to a different device, you need to first disconnect the currently paired device.
- To disconnect the current device, press and hold down the  button and the  button for 3 seconds.
- The Blue Light will begin flashing and the Headphones are ready to pair and connect to the next device.

\* Your device needs to be within 30 unobstructed feet of the OontZ Angle 3 BudZ to pair and connect. If there is an issue when connecting please move your device closer to the Headphones, then pair and connect.

\* When the battery charge is too low indicated by a rapidly flashing red light on the Headphones, your device will not be able to connect with the Headphones.



# Pair & Connect with Your Device - Step 2

## **- With your Phone, iPad or iPod**

- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'OontZ Angle 3 BudZ' when it appears under DEVICES
- Your device will connect in a few seconds
- The Blue Light on the OontZ Angle 3 BudZ will flash 3 times every 5 seconds
- You can now play your audio wirelessly to your OontZ Angle 3 BudZ

## **- With your Smartphone, Tablet & Mobile Devices**

- Go to Settings > Bluetooth, check Bluetooth is on
- Scan or Search and Select 'OontZ Angle 3 BudZ' when it appears under AVAILABLE DEVICES
- Your device will connect in a few seconds
- The Blue Light on the OontZ Angle 3 BudZ will flash 3 times every 5 seconds
- You can now play your audio wirelessly to your OontZ Angle 3 BudZ
- Note: Your Smartphone or Tablet instructions may vary

 
## **- With your Apple Mac or Windows Laptop/Computer**

For pairing and connecting guide for your Apple Mac or Windows laptop/computer, please visit:  
[TheOontZ.com/pairing](http://TheOontZ.com/pairing)


## Comfort Fit with Iso-Fit Cushions

The Iso-Fit Cushions help provide a comfortable secure fit, perfect for listening during sports and physical activity.

Note: The Iso-Fit Cushions have already been placed onto the earbuds. The steps below show you how to place the Iso-Fit Cushions on to the earbuds in the case you remove them.

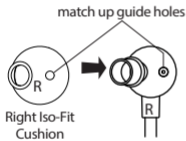

 **Step 1:** With the In-Ear BudZ removed, slide the right Iso-Fit Cushion over the shaft of the right earbud. Match up the guide holes, as shown in the illustration to the left.

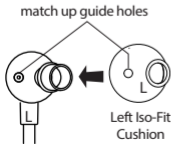


**Step 2:** Repeat Step 1 to fit the left Iso-Cushion on the left earbud.

# Select the Best Fitting In-Ear BudZ


 
To hear the best sound and best bass from your OontZ Angle 3 BudZ  
A comfortable snug fit of the In-Ear BudZ provides the highest quality listening experience. We suggest starting with the medium (M) sized In-Ear BudZ to learn if they are secure and comfortable. If they do not feel secure try the large (L) or X-Large (XL) In-Ear BudZ, or if the medium are too tight try the small (S) In-Ear BudZ. The largest size In-Ear BudZ that are comfortable will provide the best overall sound experience.




**Step 1:** Select the best fitting In-Ear BudZ



  **Step 2:** Slide an In-Ear BudZ onto the right earbud shaft



 
**Step 3:** Slide an In-Ear BudZ onto the left earbud shaft



**Step 4:** Your OontZ Angle 3 BudZ are now ready to insert into your ears

## Wearing Your OontZ Angle 3 BudZ Under-Ear

 The Iso-Fit Cushion should fit comfortably and snugly in your ear, allowing for the best sound quality.

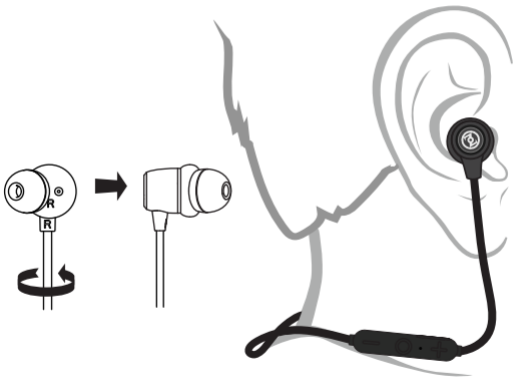



# IPX7 Waterproof

The OontZ Angle 3 BudZ are Waterproof and are IPX7 certified.

The perfect headphone for listening to your favorite music while exercising or outdoors.

Perfect for taking to the beach or listening by the pool.

A little sweat or a lot of sweat are fine for the OontZ Angle 3 BudZ.

IPX7 means the OontZ Angle 3 BudZ are WaterProof and can handle sweat, water spray or being splashed and can handle being partially or fully submerged in water up to a maximum of 3 feet deep, for up to a maximum of 30 minutes. Do not keep the Headphones in a wet environment for an extended period of time.

The rubber flap needs to be closed to keep the Headphones waterproof.


**Important Safety Precaution:** When the OontZ Angle 3 BudZ are plugged in to a charging source with the Micro USB Charging Cable, keep the Headphones away from the shower, bath, or near water, to prevent the risk of electric shock.

# Troubleshooting

## **OontZ Angle 3 BudZ will not power on**

- The battery may have become fully drained. Charge the battery using the Micro USB Charging Cable by inserting the larger end of the Micro USB Charging Cable into a USB wall charger for a Smartphone or iPhone, or a USB port on your laptop/computer to charge the OontZ Angle 3 BudZ battery. Please see instructions on Page 7 and 8.

## **I am having trouble pairing and connecting with my mobile device**

- Your mobile device may be out of range and you will hear a double beep every 15 seconds. Move back within 30 unobstructed feet of your mobile device. The OontZ Angle 3 BudZ will reconnect, there will be a voice prompt 'connected'. Press the  button to start playing again.
- Check that your OontZ Angle 3 BudZ have a sufficient battery charge, the Headphones may not connect when the battery has a low charge. Connect the OontZ Angle 3 BudZ to a charging source and try again to pair and connect.
- Check the LED light to make sure it is flashing Blue rapidly. If the LED is flashing blue 3 times every 5 seconds the Headphones are already connected to another mobile device. The OontZ Angle 3 BudZ can be connected to one device at a time. You need to disconnect the connected device, then you can connect to the next device. Please see instructions on page 9.
- Your mobile device may have a temporary Bluetooth connection issue. Please try the following steps which can help resolve this.

### **For iPhone, iPad and iPod**

- Turn off the OontZ Angle 3 BudZ, go to the Bluetooth device list on your iPhone, iPad or iPod and check if the OontZ Angle 3 BudZ are listed. If it is listed press the icon next to the OontZ Angle 3 BudZ and then select 'forget this device'. With the OontZ Angle 3 BudZ removed from the list or if it was not listed, do a hard reset on your iPhone, iPad or iPod by pressing and holding down the Home and sleep buttons at the same time for about 10 seconds until the Apple icon appears and it restarts. When it restarts, turn on the OontZ Angle 3 BudZ and then try again to pair and connect.

# Troubleshooting (continued)

## I am having trouble pairing and connecting with my mobile device (continued)

### For iPhone, iPad and iPod

- Turn off the OontZ Angle 3 BudZ, go to the Bluetooth device list on your Smartphone or Tablet and check if the OontZ Angle 3 BudZ are listed. If it is listed press the icon next to the OontZ Angle 3 BudZ and then select 'Unpair this device'. With the OontZ Angle 3 BudZ unpaired from the list or if it was not listed, do a hard reset on your Smartphone or Table. When it restarts, turn on the OontZ Angle 3 BudZ and then try again to pair and connect.

## No audio from your device

- Make sure the volume is up on your OontZ Angle 3 BudZ.
- Remove the OontZ Angle 3 BudZ from the Bluetooth device list on your device, restart your device, and then re-pair and connect to the OontZ Angle 3 BudZ.
- Make sure your device is playing audio, not paused and the volume is turned up.
- Your device may be out of range, move closer to your device, to within 30 unobstructed feet.
- Turn your OontZ Angle 3 BudZ off and back on.
- Some devices have a default volume when they connect to a new device, try turning up the volume on the OontZ Angle 3 BudZ and the device after connecting.

## Poor sound quality from my device

- Your device may be out of range, move closer to within 30 unobstructed feet.
- If your iPhone, iPad or iPod has an option to select Stereo or Mono, select Stereo.
- Try another track or music app.
- Turn your OontZ Angle 3 BudZ off and back on.
- It may be that you need to re-pair the OontZ Angle 3 BudZ with your device. Remove it from your paired devices list, restart the device and then follow the steps to re-pair and connect the Headphones.

## OontZ Angle 3 BudZ won't fit or stay in place

- Try one size larger In-Ear BudZ.
- Make sure you have the Iso-Fit Cushions in place.
- Be sure the OontZ Angle 3 BudZ are being worn correctly by checking on each earbud for which side it should be worn on.

# Customer Support

If you have a question about your OontZ Angle 3 BudZ or experience an issue with the Headphones, our Customer Support Team wants to assist you.

For online troubleshooting tips please visit:

**[TheOontZ.com/troubleshooting](https://TheOontZ.com/troubleshooting)**

and select the OontZ Angle 3 BudZ

Contact us at:

**[TheOontZ.com/support](https://TheOontZ.com/support)**

and fill in our customer support form

# Safety and Precautions

1. When the OontZ Angle 3 BudZ is plugged in to a charging source with the Micro USB Charging Cable, never use the Headphones in the shower, bath, or near water, to prevent risk of electric shock.
2. Read and follow all instructions - All operating and use instructions should be followed.
3. Protect the Micro USB Charging Cable from being pinched, particularly at the connectors.
4. Unplug the Micro USB Charging Cable during lightning storms or when unused for long periods of time.
5. Do not place the Headphones near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Refer all servicing to qualified personnel. Servicing is required when the Headphones have been damaged in any way.
7. Do not make alterations to these Headphones.
8. The battery in the Headphones is not replaceable. Do not attempt to change it.
9. Use these Headphones only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
10. Do not place near naked flame sources, such as lit candles, or near the Headphones.
11. Do not expose these Headphones to excessive heat.  
(e.g. from storage in direct sunlight, fire or the like)
12. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.

## PLEASE LISTEN RESPONSIBLY

Avoid listening at excessive volume levels or for prolonged periods.  
Do not use near traffic.

## Safety and Precautions (continued)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following reasons.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.

Note 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Apple, iPhone, iPad, iPod, and Mac are registered trademarks of Apple Inc.  
Windows is a registered trademark of Microsoft Corporation  
Bluetooth is a registered trademark of Bluetooth SIG, Inc  
UL is a registered trademark of UL.