 




JUST ASK
amazon alexa

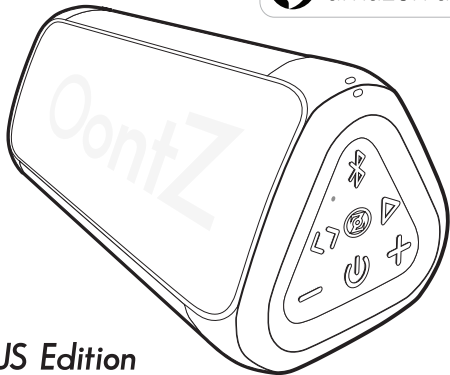

PLUS Edition

Quick Start Guide

OontZ

Angle 3 Shower

 
Waterproof Portable Bluetooth Speaker

Designed and Engineered By
CAMBRIDGE SOUNDWORKS.

TheOontZ.com

In the Package

OontZ Angle 3 Shower

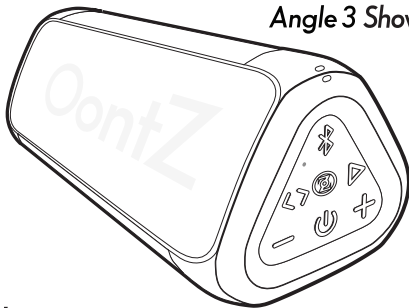

PLUS Edition



Quick-Start Guide



Micro USB Charging Cable




Lanyard

Note: The cable and lanyard are packed below the insert in the box. Slide out the insert to locate them.

Table of Contents

	Pages
Buttons, Lights, Connectors and Built-in Mic	1 - 3
Attaching the Lanyard	4
Battery Features and Charging the Battery	5 - 7
Turning On and Off	8
Pair & Connect with Your Device	9 - 10
Using the OontZ app for Alexa	11-14
Using the OontZ app for Speaker Updates	15-16
Amazon Alexa App	17
IPX7 Water Resistance	18
Talk to Siri Wireless Hands Free Personal Speakerphone	19
To Play with Non-Bluetooth Devices Use a 3.5mm Stereo Audio Cable	20
Reset Function	21
Contacting Customer Support	22
Safety and Precautions	23 - 24

 Buttons

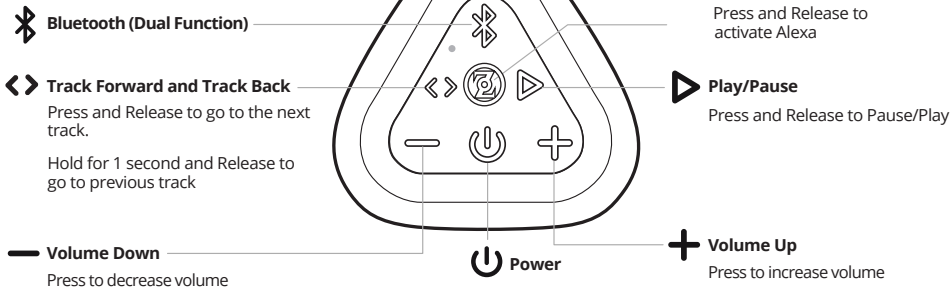


Important - The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

Important - Some apps may not support track back, track forward, or play/pause

Lights

Blue Light lit when speaker is on:

 
- **Flashing Blue**
speaker is in Bluetooth pairing mode
- **Solid Blue**
speaker is connected
- **Blue Light will turn to Solid Green**
when a 3.5mm audio cable is plugged into the AUX IN Jack

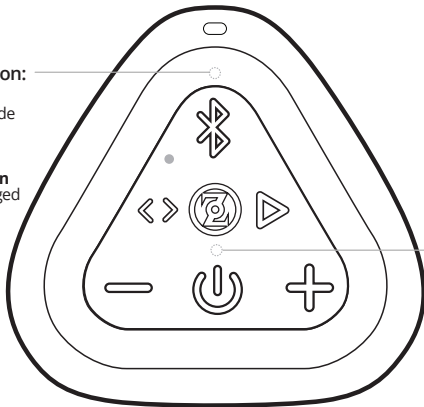

Red Light lit when charging:

- **Slowly flashing Red**
battery is charging
- **Solid Red**
battery is fully charged
- **Rapidly flashing Red when playing**
indicates battery charge is low

 
Connectors & Built-in Mic

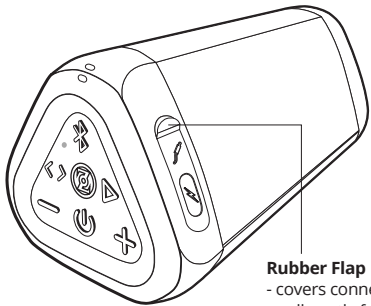

Rubber Flap

- covers connectors
- pull gently from the top to access connectors, it is a snug fit as part of the waterproofing

 Built-in Mic for Alexa, Siri and Speakerphone

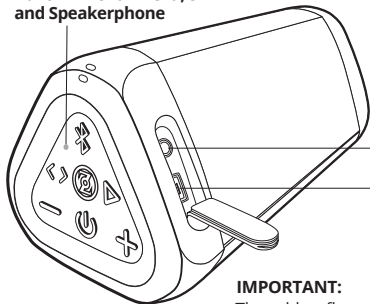


AUX IN Jack

Micro USB
Charging Connector


IMPORTANT:

The rubber flap needs to be closed before the speaker is exposed to water. The speaker is not water-resistant or waterproof when the flap is open.

 
Attaching the Lanyard

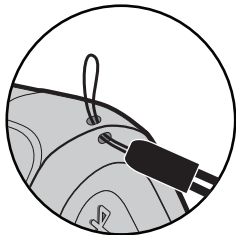

 - Slide the smaller lanyard loop through one of the lanyard attachment holes at the top of the speaker

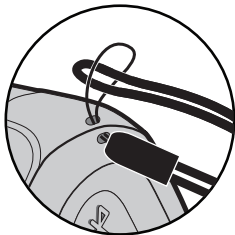

 - Slide the larger lanyard loop through the smaller lanyard loop that has passed through the other attachment hole

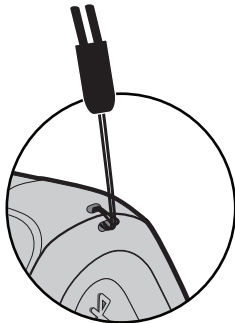

- Pull the larger lanyard loop completely through the smaller lanyard loop to fasten the lanyard to the speaker

- The lanyard is not for use by children under 6 years of age. Small parts can present a choking hazard.

Battery Features

- The rechargeable battery comes with a partial charge and the speaker is ready to play.
- For maximum playtime, fully charge the battery.
- You can play while charging.

Low Charge Remaining

- When the battery charge has less than 15% remaining the Red Light will begin flashing rapidly.
- The volume will decrease to preserve the remaining battery charge.

Music Play Time

Up to 14 hours on a full charge, at 2/3 volume.
Louder volumes will reduce the battery play time.

Power Saving Feature

 
- When playing from battery power the OontZ Angle 3 Shower - PLUS Edition will turn off after 30 minutes of not playing audio to conserve the battery charge. *
- When plugged into a charging source the OontZ Angle 3 Shower - Plus Edition will remain on until you turn the power off.
- You can continue to keep the speaker plugged into a charging source even when it is fully charged, keeping the speaker turned on and available

* Exception: certain devices, including the Amazon Echo Dot and Amazon Echo, disable the Power Saving Feature and the speaker will remain on until you turn the power off.

Charging the Battery

Red Light lit when charging:

- **Slowly flashing Red** battery is charging
- **Solid Red** battery is fully charged

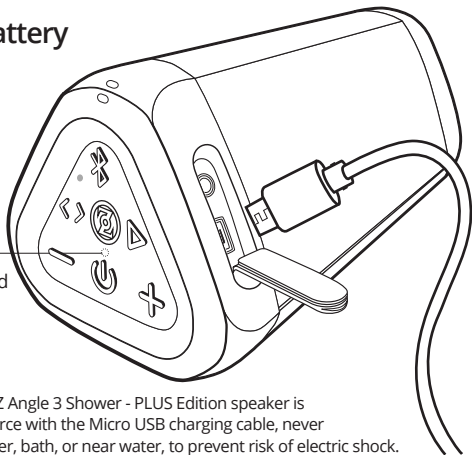


Important: When the OontZ Angle 3 Shower - PLUS Edition speaker is plugged in to a charging source with the Micro USB charging cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.

- Insert the small end of the Micro USB Charging Cable into the Charging Connector as shown. DO NOT force when inserting, the small end will only insert in one direction. Inserting with too much force in the wrong direction will damage the Charging Connector on the speaker.
- Insert the larger end of the Micro USB Charging cable into a USB wall charger for a Smartphone or iPhone, or a USB port on your laptop/computer to charge the battery (see illustrations on page 7).


Charging Time:

- Up to 5 hours to fully charge a low battery.

 Charging the Battery (continued)

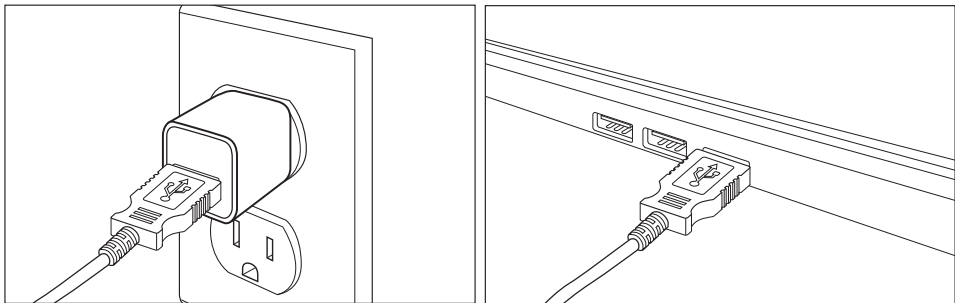


Insert the larger end of the Micro USB charging cable into a USB wall charger for a Smartphone or iPhone (USB wall charger* that is 5V $\overline{\text{---}}$ 1.0A up to 5V $\overline{\text{---}}$ 2.4A maximum), or a USB port on your laptop/computer to charge the OontZ Angle 3 Shower - PLUS Edition battery.

 
* Only use a USB wall charger that is UL listed. A UL listed USB wall charger will have the logo  printed on it.

Turning On and Off

Turn ON

Press and Release
the Power Button 

Red Light will turn
on for 3 seconds
and then turn off

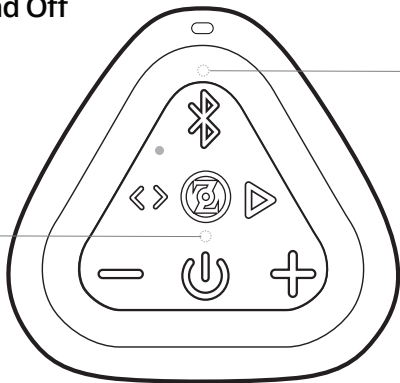

Blue Light will turn on
after Red Light turns off


- Flashing Blue

The speaker is in pairing mode

- Solid Blue

Your device has connected with the OontZ
Angle 3 Shower - PLUS Edition and is ready to
play

Turn OFF

Press and Hold Down the Power Button 
for 2 Seconds

Blue Light will turn off

Pair & Connect with Your Device – Step 1

Turn ON your OontZ Angle 3 Shower - PLUS Edition


Flashing Blue Light

- The OontZ Angle 3 Shower - PLUS Edition is ready to pair and connect.

Solid Blue Light

 
- Your device has connected to the OontZ Angle 3 Shower - PLUS Edition and is ready to play.
- The OontZ Angle 3 Shower - PLUS Edition allows the last device it was connected with to automatically reconnect with the speaker each time the speaker is turned on and that device is within range.*

The OontZ Angle 3 Shower can be connected to one device at a time.

- To pair and connect to a different device, you need to first disconnect the currently paired device.
- To disconnect the current device, press and hold down the **Bluetooth button**  for 5 seconds.
- The **Blue Light** will begin **flashing** and the OontZ Angle 3 Shower - PLUS Edition is ready for the next device to pair and connect.

*Exception: certain devices may not automatically reconnect. When connected to an Amazon Echo device it will not automatically reconnect. You will need to say to your Amazon Echo device, "Alexa, connect my speaker".

- Your device needs to be within 100 unobstructed feet of the OontZ Angle 3 Shower - PLUS Edition to pair and connect.
If there is an issue when connecting please move your device closer to the speaker, then pair and connect.
- When the charge is too low indicated by a flashing red light on the speaker, your device will not be able to connect with the speaker.

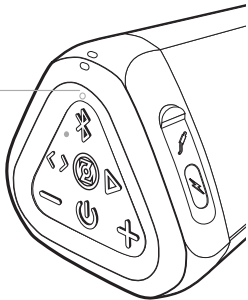

Pair & Connect with Your Device -- Step 2 --

-- With Your iPhone, iPad, or iPod

- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'OontZAngle3Showerxxx' when it appears under DEVICES (xxx: 3 characters which are unique to your speaker)
- Your device will connect in a few seconds
- The **Blue Light** will turn solid blue and there will be a quiet chime
- You can now play your audio wirelessly to your OontZ Angle 3 Shower - PLUS Edition

-- With Your Smartphone, Tablet & Mobile Devices

- Go to Settings > Bluetooth, check Bluetooth is on
- Scan or Search and select 'OontZAngle3Showerxxx' when it appears under AVAILABLE DEVICES (xxx: 3 characters which are unique to your speaker)
- Your device will connect in a few seconds
- The **Blue Light** will turn solid blue and there will be a quiet chime
- You can now play your audio wirelessly to your OontZ Angle 3 Shower - PLUS Edition

Note: Your Smartphone or Tablet instructions may vary

Important - The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

-- With Your Apple Mac or Windows Laptop/Computer

 
For the pairing and connecting guide for your Apple Mac or Windows laptop/computer, please visit: TheOontZ.com/pairing.

Note: The Alexa function is only available on your iPhone or Smartphone running the Android operating system.

Using the OontZ App for Alexa

To Talk to Amazon Alexa Download the OontZ App from the Apple App Store® or Google Play™ Store

- - 1) Open the Apple App Store® or Google Play™ Store on your iPhone or Smartphone running the Android operating system.
 - 2) Search for the “Oontz” app and install.
 - 3) After the app has been installed the “Oontz” app will appear on your iPhone or smartphone.

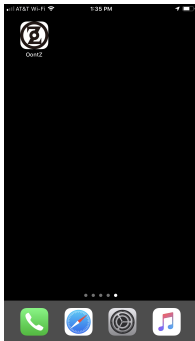

Using the OontZ App for Alexa

To enable the OontZ app with your OontZ Angle 3 Shower - PLUS Edition

 
- Turn on your OontZ Angle 3 Shower - PLUS Edition speaker and connect to the device with the OontZ app installed. (For Pair and Connect instructions please see page 9)

- Launch the OontZ app and the Home screen will appear searching for the OontZ Angle 3 Shower - PLUS Edition speaker.


- Press the 'OontZ Angle 3 Shower' Grey speaker icon on the app to enable the OontZ app with the OontZ Angle 3 Shower - PLUS Edition.

- Select 'Confirm' from the message displayed.

- See next page for continued instructions.

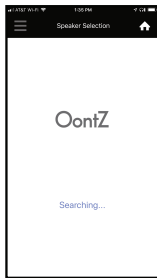





Home screen

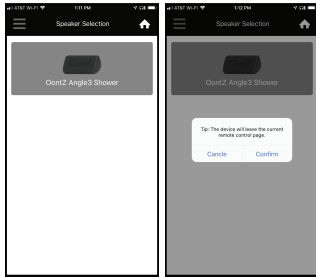 

Speaker screen

Using the OontZ App for Alexa

    4) Select 'Amazon Alexa Login' and follow the instructions in the app.

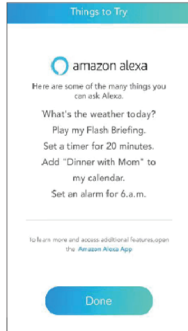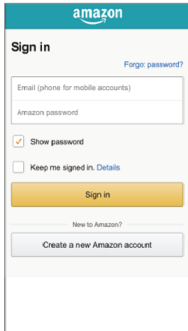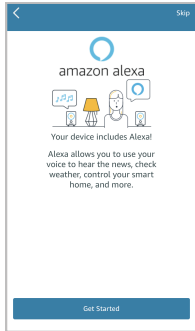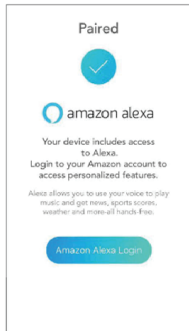


Using the OontZ App for Alexa

You can talk to Amazon Alexa on the OontZ Angle 3 Shower - PLUS Edition.

With Alexa, you can ask to play music, hear the news, check weather, control smart home devices, and more. Alexa lives in the cloud, so it's always getting smarter, adding new capabilities that are delivered to your device automatically.

Using Amazon Alexa

- With the OontZ Angle 3 Shower - PLUS Edition connected to your iPhone or smartphone launch the OontZ app.
- Then just press and release the  button and talk to Alexa. Alexa will respond instantly.

Use Alexa to play your music on the OontZ Angle 3 Shower - PLUS Edition, adjust the volume of your music, check the weather and much more.

"Alexa, play country music"

 
"Alexa, turn up the volume"

"Alexa, what's the weather?"

Using the OontZ app for Speaker Updates

Select the Menu ☰ in the upper left hand corner of the app.

Select 'Device Information' from the menu to check the version of the current firmware version on the OontZ Angle 3 Shower - PLUS Edition and whether there is a new version available.

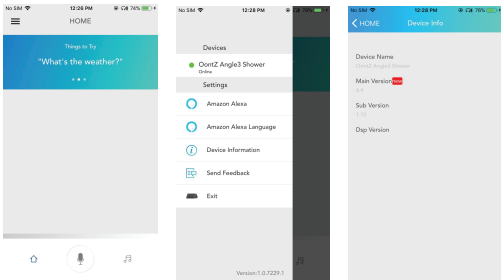

The firmware version of the OontZ Angle 3 Shower - PLUS Edition is shown under 'Main Version'.

If there is a new version of firmware for the OontZ Angle 3 Shower - PLUS Edition a red 'New' will be displayed next to 'Main Version' label.

Important Note: During the update make sure the OontZ Angle 3 Shower - PLUS Edition is plugged into power and the iPhone or Smartphone is not interrupted by a phone call during the update of the OontZ Angle 3 Shower - PLUS Edition.

Using the OontZ app for Speaker Updates

Before Starting the Update

 
 
 
- Connect the OontZ Angle 3 Shower - PLUS Edition to a Power Source. Insert the small end of the Micro USB charging cable into the OontZ Angle 3 Shower - PLUS Edition charging port and insert the larger end of the Micro USB charging cable into a USB wall charger.

Starting the Update

- Press the red 'New' and follow the instructions in the OontZ app.

After the Update is Successful

- After the update is successful the red light on the speaker will turn off.
- **Important:** The speaker needs up to an additional 30 seconds to install the update. Before disconnecting the Micro USB charging cable or turning on the speaker, wait for approximately 30 seconds until the red light turns on and is lit red on the speaker.
- After the red light turns on and is lit red the Micro USB charging cable can be disconnected from the speaker and the speaker can be turned on.



Amazon Alexa App

Use the Amazon Alexa App to discover more Alexa skills, manage Alexa-enabled devices, create shopping lists, get news updates, and much more. The more you use Alexa, the more she adapts to your voice, vocabulary, and personal preferences.

1) Open the Apple App Store® or Google Play™ Store on your iPhone or Smartphone running the Android operating system.

2) Search for the “Amazon Alexa” app from the Apple App Store® or Google Play™ store and install.

3) Launch the Amazon Alexa app and follow the instructions in the Amazon Alexa app.

- Connect to music services like Amazon Music, Pandora, Spotify, TuneIn, and iHeartRadio. Choose a song or playlist and listen on your OontZ Angle 3 Shower - PLUS Edition.
- Discover and enable recommended Alexa skills
- View and edit shopping and to-do lists on the go, get weather and news updates, manage timers and alarms, and more.
- Create routines to automate your smart home devices

For assistance with the Amazon Alexa app, contact Amazon's Customer Service.

Open the Alexa app and select Help & Feedback > Email Customer Service

IPX7 WaterProof

The OontZ Angle 3 Shower - PLUS Edition is Waterproof and it is IPX7 certified

The perfect speaker for listening to your favorite music in the shower

Perfect for taking to the beach and listening by the pool

IPX7 means the OontZ Angle 3 Shower - PLUS Edition is WaterProof and can handle water spray from the shower or being splashed and can handle being partially or fully submerged in water up to a maximum of 3 feet deep, for up to a maximum of 30 minutes


The rubber flap needs to be closed for the speaker to be waterproof and dustproof.

Important Safety Precaution: When the OontZ Angle 3 Shower - PLUS Edition speaker is plugged in to a charging source with the Micro USB charging cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.

Talk to Siri on your iPhone or iPad through the OontZ Angle 3 Shower - PLUS Edition

This feature works when connected to an iPhone or an iPad over Bluetooth.

To talk to Siri through the OontZ Angle 3 Shower - PLUS Edition

- Press and Release the Bluetooth Button  on the OontZ Angle 3 Shower - PLUS Edition
- The blue light will turn to green and flash 3 times
- Wait for about two seconds until you hear a "chime"
- After the "chime" talk to Siri through the mic on the OontZ Angle 3 Shower - PLUS Edition
- The response from Siri will then play through the OontZ Angle 3 Shower - PLUS Edition, and may display information on your iPhone or iPad

Your iPhone or iPad needs to be on the latest version of iOS


Wireless Hands Free Personal Speakerphone

The Wireless Hands Free Personal Speakerphone feature works over Bluetooth with Smartphones and iPhones only; this feature is not supported when connected to other types of devices.


To answer an Incoming Call / To End a Call

- Press and Release the Bluetooth Button 

To Reject an Incoming Call

- Press and Hold Down the Bluetooth Button  for 3 Seconds
- Please keep the speaker close in front of you so you may be heard clearly by the listener.
- You can use your Smartphone or iPhone to switch between using Hands Free Speakerphone and your phone.

To Play with Non-Bluetooth Devices Use a 3.5mm Stereo Audio Cable

Turn ON your OontZ Angle 3 Shower - PLUS Edition 

- Plug one end of a 3.5mm stereo audio cable into the **AUX IN Jack** on the speaker.
- The Blue Light will turn solid Green.
- Plug the other end of that 3.5mm stereo audio cable into the headphone jack on your device.
- Make sure both ends of the cable are fully inserted
- You are now ready to play.



3.5mm stereo audio cable is sold separately and is available at:

TheOontZ.com/accessories

Important: The Bluetooth on the OontZ Angle 3 Shower - PLUS Edition is disabled when a 3.5mm stereo audio cable is connected to the speaker.

Important Notes:

- The Alexa function will only work when connected over Bluetooth to your iPhone or Smartphone running the Android operating system. It will not work when connected with the 3.5mm Stereo Audio Cable.
- Note: The rubber flap needs to be closed before the speaker is exposed to water. The speaker is not water-resistant or waterproof when the flap is open.
- The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

Reset Function



Step 1: Remove the Micro USB charging cable and 3.5mm Audio cable, if connected.

Step 2: With the OontZ Angle 3 Shower - PLUS Edition off press and hold down the **Power button**  for 8 seconds, then release.

Step 3: The speaker has now been reset and you can turn it on.

Customer Support

If you have a question about your OontZ Angle 3 Shower - PLUS Edition or experience an issue with the speaker, our Customer Support Team wants to assist you.

For online troubleshooting tips please visit:

TheOontZ.com/troubleshooting

and select the OontZ Angle 3 Shower - PLUS Edition

For latest version of this manual please visit:

TheOontZ.com/pages/manuals

and select the OontZ Angle 3 Shower - PLUS Edition

Contact us at:

TheOontZ.com/support

and fill in our customer support form

For assistance with the Amazon Alexa App

Contact Amazon's Customer Service

**Open the Alexa App and Select
Help & Feedback > Email Customer Service**

Safety and Precautions

- 1. When the OontZ Angle 3 Shower - PLUS Edition speaker is plugged in to a charging source with the Micro USB charging cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.**
2. Read and follow all instructions – All operating and use instructions should be followed.
3. Protect the Micro USB charging cable from being pinched, particularly at the connectors.
4. Unplug the Micro USB charging cable during lightning storms or when unused for long periods of time.
5. Do not place speaker near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way.
7. Do not make alterations to this speaker.
8. The battery in the speaker is not replaceable. Do not attempt to change it.
9. Use this speaker only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
10. Do not place near naked flame sources, such as lighted candles, on or near the speaker.
11. Do not expose this speaker to excessive heat
(e.g. from storage in direct sunlight, fire or the like)
12. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.

Safety and Precautions (continued)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Apple, iPhone, iPad, iPod, Mac and Siri are registered trademarks of Apple Inc.

Amazon, Alexa, Amazon Echo and Amazon Echo Dot are registered trademarks of Amazon.com, Inc.

Windows is a registered trademark of Microsoft Corporation

Bluetooth is a registered trademark of Bluetooth SIG, Inc

UL is a registered trademark of UL.

OontZ Carry Case

Sold separately

- Lightweight neoprene rubber with reinforced zipper
- Includes a durable aluminum carabiner for easily attaching to backpacks, luggage, laptop bags, coolers, camera bags, purses, belts, and other clippable items



OontZ Bluetooth Speaker Official Mounting Strap

Sold separately

- Securely strap your OontZ speaker quickly to take with you
- Perfect for strapping an OontZ Portable Bluetooth Speaker to bicycles, scooters, golf carts, boats, and other mountable object
- Made of stretchable durable rubberized material for a secure fit



OontZ Angle 3 BudZ

Sold separately

- Totally Waterproof & Sweatproof
- Ultra-Comfortable and Secure Fit
- Superior Sound with Deep Bass
- Noise Cancellation of Background Noise
- Listen All Day with Playtime up to 8 hours
- Perfect For Any Activity



Available at TheOontZ.com