


BALDR

QUICK SETUP GUIDE

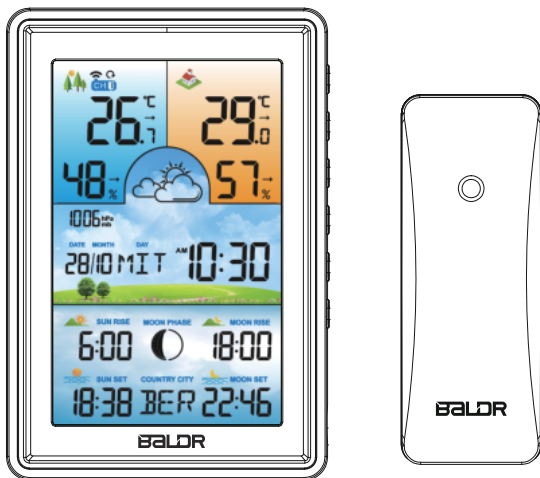


MODEL: B0360WST2H2PR-V2

**COLOR RADIO- CONTROLLED
WEATHER STATION**


POWER ON

1.Main Unit Installation

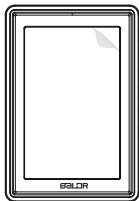


Step 1, Peel off the protecting mask of main unit.

Powered by AC Adaptor

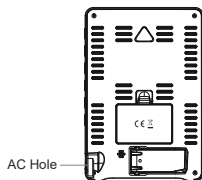


Powered by Batteries

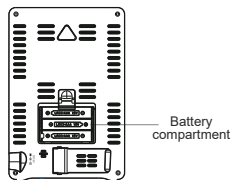


or

Step 2, Plug the AC Adaptor to a powered outlet or insert 3xAAA batteries matching the polarity(+/-)

2.Sensor Installation

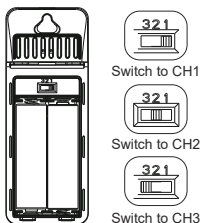


Step 1, Select the channel on sensor you desired to use

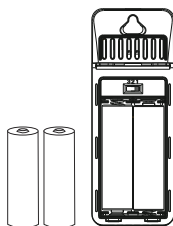

Step 2, Load the 2xAA batteries in 3 minutes to ensure RF signal received in time.

NOTE:

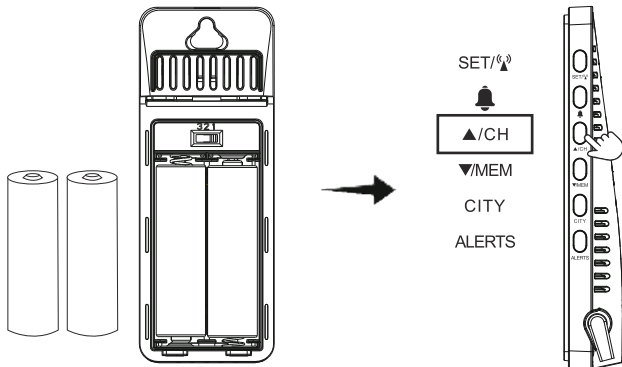


If not powered on within 3 minutes from the main unit powered on Press and hold “▲/CH” button for 3 seconds to search RF signal again.

MAIN UNIT SETUP

1. After Power On


LCD will full display for 3 seconds with “BI” sound.

After 3 seconds, the LCD will display the datas as below

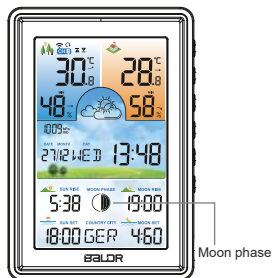


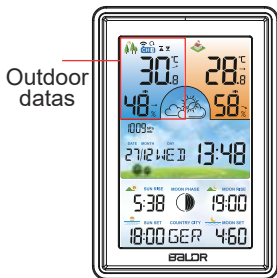
2.RF Signal Searching

The receiving antenna signal  is flashing.

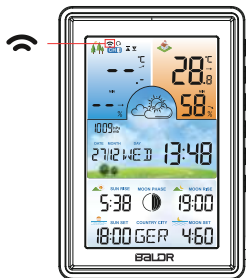

3.RF Signal Received

Automatically display, and the antenna signal  will stop flash.



4.RCC Atomic Radio Signal Receiving Mode Automatically starts after powering up



The antenna symbol is flashing.
The screen will go dark for 7 minutes. No buttons except “SET/▲” button will function during the period.

SET/▲



▲/CH

▼/MEM

CITY

ALERTS




Press “SET/▲” button will allow exiting the Atomic mode to continue manual setup.

No RCC Radio Signal Received


The antenna symbol ▲
will disappear



Press “SET/▲” button to search
RCC signal radio signal again.

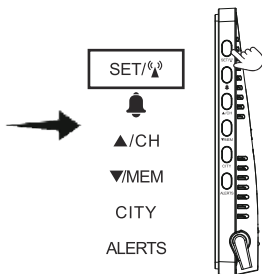


Manual setup

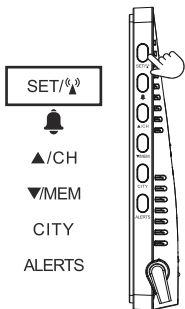


- Press and hold “SET/▲” button to enter into setup (3 seconds).
- Press and release “SET/▲” button to skip setting or go to next setting option(1 second).

SETUP ORDER

<u>1</u>	<u>2</u>	<u>3</u>
Key Tone ON/OFF	Weekday Language	RCC ON/OFF
<u>4</u>	<u>5</u>	<u>6</u>
Time Zone	Year	Month
<u>7</u>	<u>8</u>	<u>9</u>
Date	12/24 Hour Display Mode	Hours
<u>10</u>	<u>11</u>	<u>12</u>
Minutes	Temperature Unit(C / F)	Weather

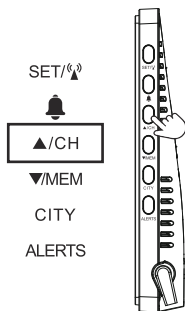

Press “▲/RCC” button to increase the values.

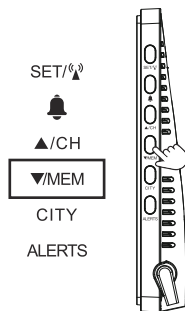

Press “▼/MEM” button to decrease the values.

*Tips: press and hold “▲/RCC” or “▼/MEM” button will quickly change the value.

This Qucik Start is to help you quickly set up the product. For detailed settings, please refer to the user manual, or scan the QR code below for relevant product information and operation video link. Thank you.

BALDR



www.baldr.com
service@baldr.com