


BALDR

QUICK SETUP GUIDE

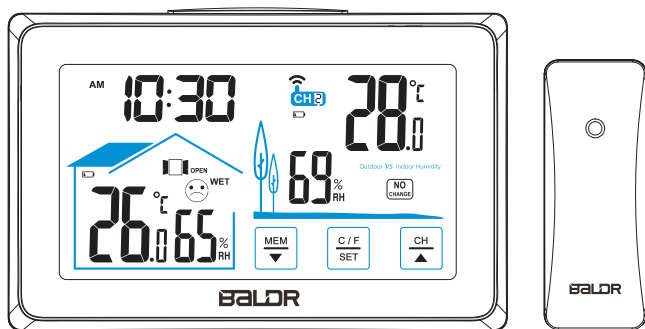


MODEL: B0340ST2H2

WIRELESS WEATHER STATION WITH BACKLIGHT

POWER ON


1. Main Unit Installation

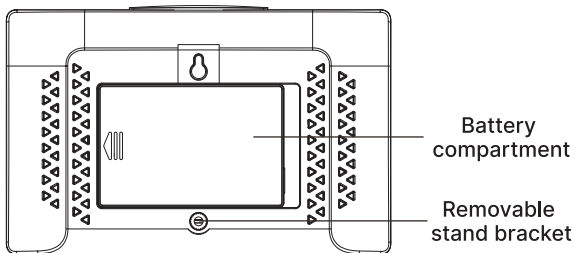

Step 1, Remove the battery compartment cover and insert 2xAAA batteries.

Step2: Take the metal stand out of the compartment and install it on the back of the uni.


2. Sensor Installation

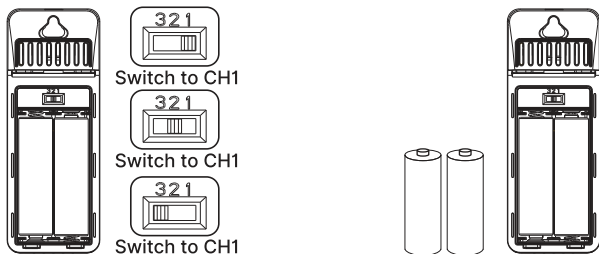

Step 1, Select the channel you desired to use.

Step 2, Load the 2xAA batteries in 3 minutes to ensure RF signal received in time.



NOTE:

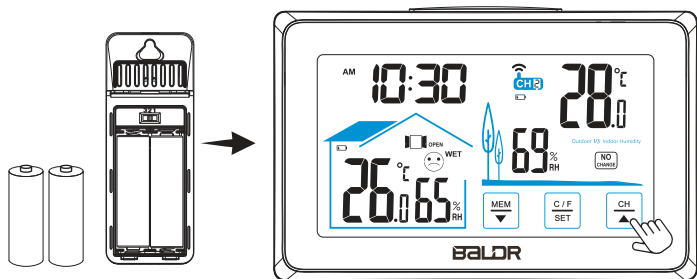

If not powered on in 3 minutes from the main unit powered on



Press and hold "  " button for 3 seconds to search RF signal again.


MAIN UNIT SETUP

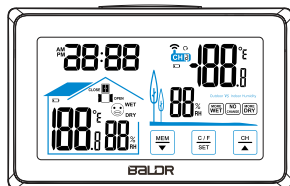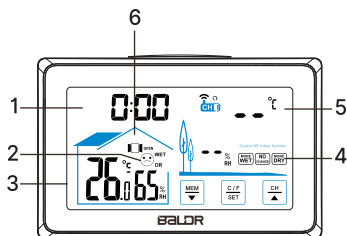

- 1.Current time
- 2.Comfort level indicator
- 3.Indoor temperature and humidity
- 4.Ambient change indicator
- 5.Outdoor temperature and humidity
- 6.Window indicator

  LCD will full display for 3 seconds

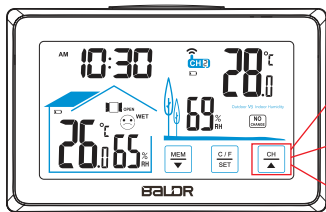


Press “  ” button to select the channel on main unit you desire to use (Default in CH1)


Select the same channel number for both the sensor and the main unit in order to synchronize.


2.RF Signal Searching

The receiving antenna signal  is flashing.

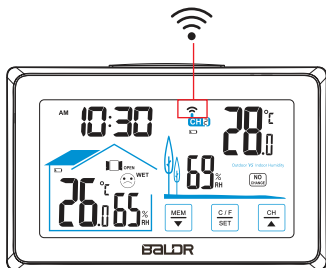

3.RF Signal Received


The receiving antenna signal  will stop flashing.

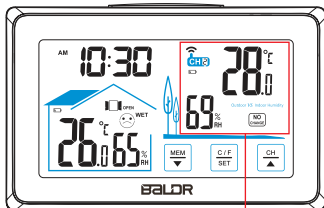

Outdoor Data will display automatically.

4.Manual Setup


SETUP ORDER

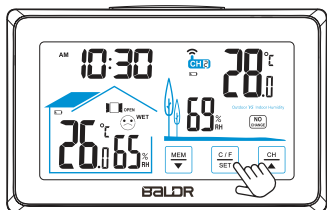


- 1 Hour
- 2 Minute
- 3 12/24 hours select
- 4 OFF/ON (Memory mode 24 hour or all the time)
- 5 Exit

Press and hold "SET/C/F" button to enter into setup (3 seconds).

Press and release "SET/C/F" button to skip setting or go to next setting option (1 second).

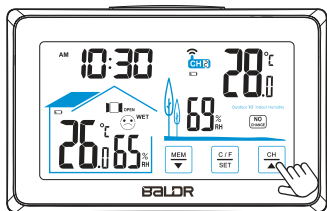

Press "CH/▲" button to increase the values.

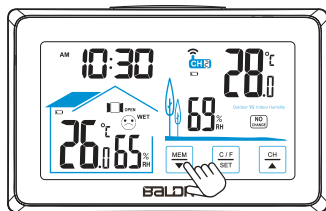

Press "MEM/▼" button to decrease the values.

*Tips: press and hold "CH/▲" or "MEM/▼" button will quickly change the value by 8 steps.

This Quick Start is to help you quickly set up the product. For detailed settings, please refer to the user manual, or scan the QR code below for relevant product information and operation video link. Thank you.



BALDR

www.baldr.com
service@baldr.com