 


QUICK SETUP GUIDE






MODEL:B0341WST2H2-V3

WIRELESS WEATHER STATION WITH BACKLIGHT

POWER ON

1.Main Unit Installation

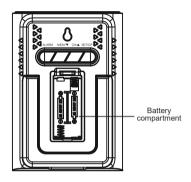


Step 1, Remove the battery compartment cover and insert 2xAAA batteries.

2.Sensor Installation




 Step 1, Select the channel you desired to use.



Step 2, Load the 2xAA batteries in 3 minutes to ensure RF signal received in time.

NOTE:

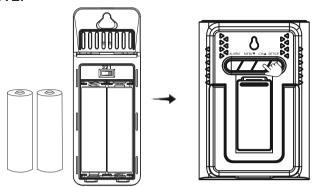

If not powered on in 3 minutes from the main unit powered on

Press and hold "CH/▲" button for 3 seconds to search RF signal again.

MAIN UNIT SETUP

1.After Power On

LCD will full display for 3 seconds with "BI" sound.




After 3 seconds, the LCD will display as below



5. Indoor temperature and humidity

 Outdoor temperature and humidity

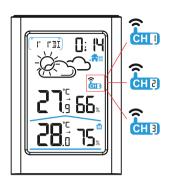



Press "CH/▲"button to select the channel on main unit you desire to use (Default in CH1)

Select the same channel number for both the sensor and the main unit in order to synchronize.

2.RF Signal Searching

The receiving antenna signal ? is flashing.




3.RF Signal Received

The receiving antenna signal ? will stop flashing.




Outdoor Data will display automatically.

4.Manual Setup

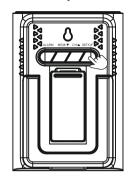

- Press and hold "SET/C/F" button to enter into setup (3 seconds).
- Press and release "SET/C/F" button to skip setting or go to next setting option (1 second).

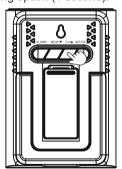


Press "CH/▲" button to increase the values.

SETUP ORDER

<u>1</u>	2	3
12/24 hours select	Hour	Minute
4 Year	<u>5</u> DM/MD select	6 Month
7 Date	<u>8</u> Weekday	9 Key tone

language

ON/OFF

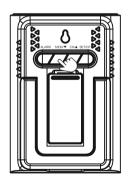

Press "MEM/ ▼ " button to decrease the values.

^{*}Tips: press and hold "CH/▲" or "MEM/▼" button will quickly change the value by 8 steps.

This Qucik Start is to help you quickly set up the product. For detailed settings, please refer to the user manual, or scan the QR code below for relevant product information and operation video link. Thank you.



www.baldr.com service@baldr.com