






ORIGINAL INSTRUCTIONS POWERCOUP **THD**



1 HANDLE = 8 TOOLS

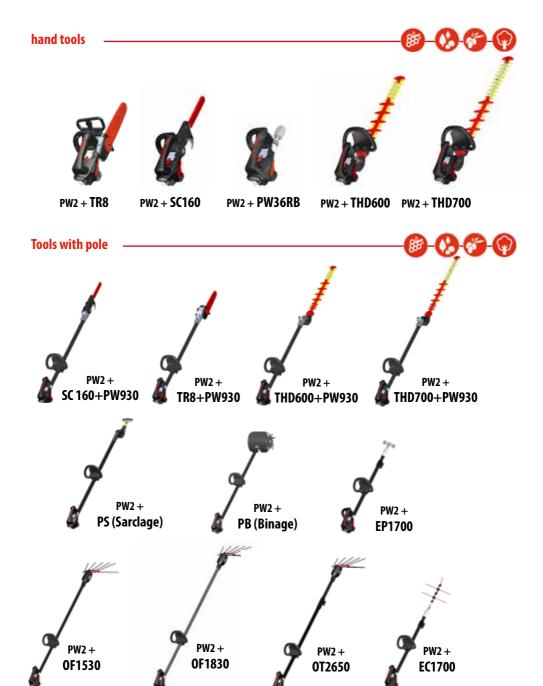

Reference	Description
PW2	Universal handle for the POWERCOUP PW2 range.
THD600	Double hedge trimmer, length of the cutting bar 600mm.
THD700	Double hedge trimmer, length of the cutting bar 700 mm.
TR8	Reciprocating saw, max cutting capacity max. Ø150mm.
SC160	Reciprocating saw, max cutting capacity Ø100mm.
PW 930	Carbon extension pole, length 930mm.
PW1830	Carbon extension pole, length 1830mm.
PWT1650	Carbon extension pole, length 1650mm.
P1	Weeder with pole 1480mm.
P2	Cultivator with fixe pole 1430mm.
PWP36RB	Canker kit with rotary burr (cylindrial cutter 36mm).
PWP25RB	Canker kit with rotary burr (cylindrial cutter 25mm).
EP1700	Desuckering tool, telescopic pole 1200mm > 1600mm.
EC1700	Flower Thinner, telescopic pole 1500mm > 1900mm.
0F1530	Olive harvester, fixed pole 2200mm.
0F1830	Olive harvester, fixed pole 2500mm.
OT2650	Olive harvester, telescopic pole 2200mm > 2800mm.

CONTENT

SAFETY INSTRUCTIONS	5
PERSONAL PROTECTIVE EQUIPMENT	5
ENVIRONMENTAL PROTECTION	5
GENERAL OVERVIEW	6
CHARACTERISTICS	6
VIEWS OF ACCESSORIES	6
USER'S MANUAL	7
Installation and power connection	7
USING THE MACHINE	7
Mounting and disassembly of the handle	7
Storage-Transportation	8
Hedge trimmer	9
Hedge trimmer with extension pole	12
Setting clearance	13
SAFETY PRECAUTIONS	16
Warning	
CARE AND MAINTENANCE	18
Care - greasing	19
Sharpening	21
SAFETY INSTRUCTIONS	22
WARRANTY CONDITIONS	23
RECOMMANDATIONS	24
REPAIR	25
WARRANTY CARD	29 - 30
CARACTÉRISTIQUES TECHNIQUES	31
DECLARATION OF INCORPORATION	32

SAFETY INSTRUCTIONS





WARNING. Read all safety warnings and all instructions. Failure to abide by warnings and instructions could lead to an electric shock, fire and/or serious injury.

Keep all safety warnings and instructions so that you can refer to them at a later date.

The term "tool" in the warnings refers to your electrical tool run off the main supply (with supply power cord) or your electrical battery-operated tool (without a supply power cord).

PERSONAL PROTECTIVE EQUIPMENT

÷ 📗	Read the user manual carefully, especially the safety instructions.
#	You MUST wear a helmet, eye protection and hearing protection
W. T.	Hand protection, for work gloves.
	Foot protection by closed toed shoes.
F	Face protection, or visor.
	Note: The extensions poles are made of carbon, which conducts electricity. Do not use the extensions poles near electricity supply points or electrical wires.
A	Note: Do not place any part of your body close to the blade. Do not remove cut material or hold the material you wish to cut while the blades are moving

ENVIRONMENTAL PROTECTION



Follow the specific instructions for waste elimination in your country.



Electrical appliances should not be thrown in the garbage.

The device, accessories and packaging should be recycled.

Ask your specialist INFACO retailer for the latest information on eco-compatible waste elimination.

GENERAL OVERVIEW



CHARACTERISTICS

Reference THD600		THD700		
Alimentation	48V	CC		
Power	1000W Max			
Weight	3440g	3650g		
Blade length	570mm	700mm		
Size	28mm			
Height	Height 21mm			
Blade speed	3200 cuts/min			

VIEWS OF ACCESSORIES (PW2)



PW2 handle Ref : PW2





Power cord Ref: PW225S





Li_ion battery 500Wh 10,4Amp. Ref: L810B





NiMH battery 150Wh 3,1Amp. Ref: 731B





Li-ion battery 120Wh 2,5Amp. Ref: 831B





Extension pole 930 Lenght: 93cm Ref : PW930





USER'S MANUAL

Installation and power connection



Only use INFACO brand batteries with a supply voltage 48 volts.



If it is raining, the battery vest must be worn underneath waterproof clothing so that the battery unit and control box remain dry.

USING THE MACHINE

Mounting and disassembly of the handle




Storage - transportation



For transportation, storage, maintenance, tool maintenance or any other operation outside of using the tool **you must unplug the tool.**



Hedge trimmer

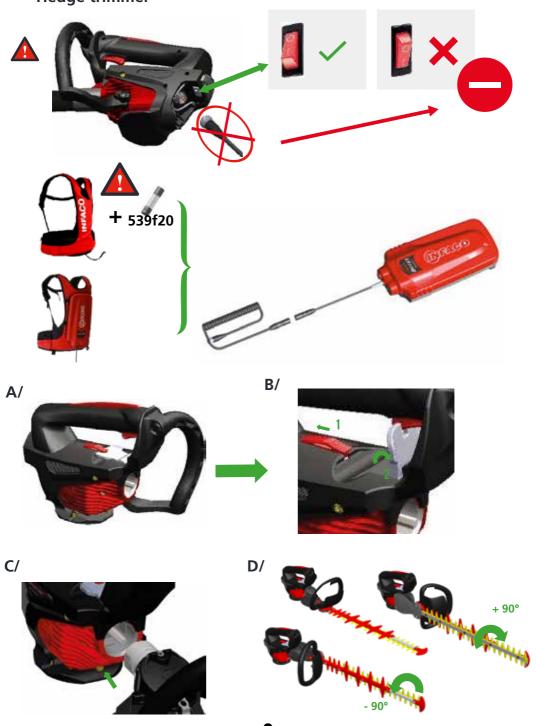



1 Start: 2 short pulls of the trigger = ON **Standby output:** 2 short pulls of the trigger = ON **Normal operation:** 1 long pull of the trigger = ON

Releasing the trigger = OFF


Must keep both hands





The tool is fitted with an electronic protection system. As soon as the tool becomes blocked due to meeting strong resistance, the electronic system causes the motor to stop. Restart the tool by carrying out operation «k» in "Using the machine" on page 7.

Hedge trimmer with extension pole

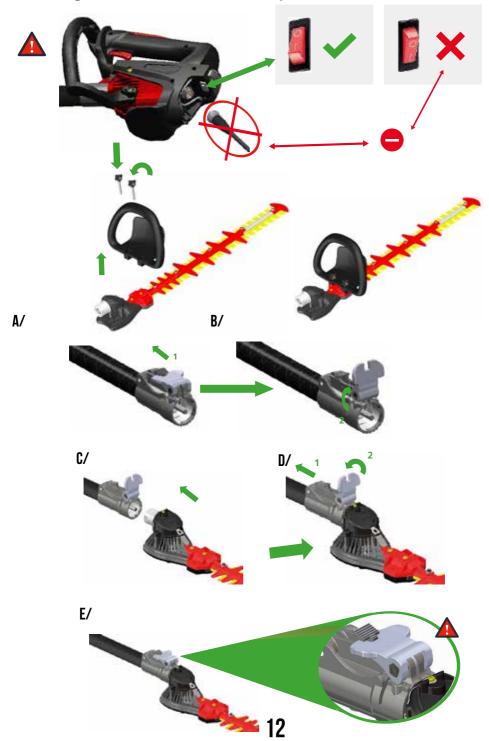

SETTING CLEARANCE



Unplug the tool. Do not connect the PW2 handle on the extension.













If no movement = clearance is OK
If movement = adjust the clearance

EC1700 - EP1700 - TR8 - SC160 - THD



The setting clearance should be IMPERATIVELY with an accessory mounted and locked on the handle.

Applies to all accessories.









If no movement = clearance is OK If movement = adjust the clearance





1 Start: 2 short pulls of the trigger = ON **Standby output:** 2 short pulls of the trigger = ON **Normal operation:** 1 long pull of the trigger = ON Releasing the trigger = OFF




SAFETY PRECAUTIONS





For transportation, storage, maintenance, tool maintenance or any other operation outside of using the tool **you must unplug the tool.**

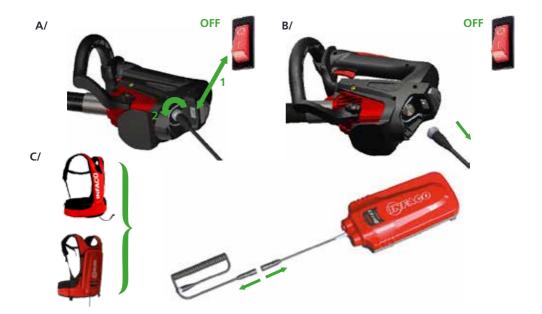

Warning







Warning concerning work at height using a ladder **This configuration is risky and not recommended.**





It is **imperative** to put the machine to the ground. Unplug the cable from the battery before moving from A to B.



We advice using an extension pole (optional) for all work at height. It can avoid risks from falling and other accidents. (see VIEWS OF ACCESSORIES Page 6)

CARE AND MAINTENANCE

All maintenance operations or maintenance must be performed after disconnecting the tool from all power sources. Maintenance of the tool depends on frequency of use. Occasional use, space out intervals. Intensive use, more frequent intervals.		Before starting work	At the end of work daily	Each time the battery is changed	Weekly	Monthly	Yearly	If faulty	If damaged	As required
	Visual inspection	х	х							
Complete tool	Cleaning		х							х
	Have checked by dealer							х	х	
Accessories	Cleaning and greasing				Х					Х
	Adjust clearance	Х		Х						Х
Blade clearance	Check		Х							
	Visual inspection	х								
Blade	Cleaning and greasing		х							
	Sharpening					х				
	Change							х		х
	Check the adjustment		х							
Hedge trimmer head	Greasing				х					х
	Have checked by dealer							х	х	
Power cord	Visual inspection					х			х	х
Battery	Visual inspection			х	х				х	х
Vest	Visual inspection						х		х	х
Handle	Visual inspection	х	х							

Care - greasing



BLADE

Recommended products: Lithium grease ref: 352B

+

Cleaner ref: B500N

+

Lubricant ref: B500L





Clean **B500N**

Lubricate **B500L** or **LUB**

Greasing


Recommended products:

Grease ref: B400G

or

Lithium grease ref: 352B (supplied with PW2 handle)



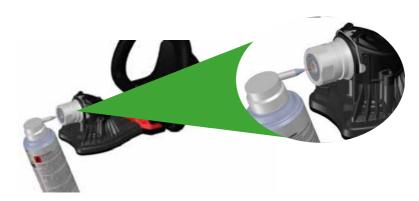



Sharpening

If you have no experience sharpening blades, it is highly recommanded to ask your local retailer for assistance. They are authorized and trained to sharpen your Hedge trimmer.


Recommended equipment:

- Flat file for hard steel



Recommended sharpening:

- Place the fine, respect the existant sharpening angle. Please follow the movement as shown.

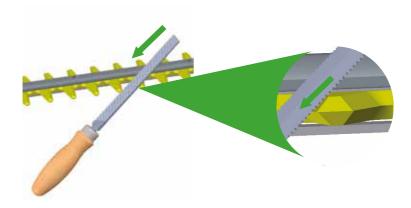

SAFETY INSTRUCTIONS

BEWARE! In order to reduce the risk of electrical discharge, injury and fire during the use of electrical tools, please observe the following basic safety measures. Read and follow these instructions before using the tool, and keep these safety instructions!

When not in operation, the POWERCOUP PW2 handle and its accessories must be disconnected and stored in their case.



PW2 POWERCOUP handle must always be disconnected from all power sources to the following: servicing, charging the battery, maintenance, transport.- Storage.

While the tool is in operation, always remember to keep hands away well away from the accessory being used.

Do not use the tool if you are tired or feeling unwell.

Wear recommended safety equipment specific to each accessory.

Do not leave the tool within the reach of children or visitors.



Do not use the tool if there is any risk of fire or explosion- for example in the presence of flammable liquids or gas.

Never carry the charger by its power cord, and so not pull on the power cord to unplug it.



Keep the power cord away from heat sources, oil or sharp edges.

Never use the tool at night or in poorly lit conditions without setting up extra lighting.

While using the tool, make sure you keep both feet on the ground and stay well-balanced.



Be careful – the extension poles and rake are made out of carbon – a conductive material. Do not use near electrical wires or other power sources.

Do not let any part of the body come close to the blade.

Do not remove the cut material or hold the material to be cut while the blades are moving.

Make sure the switch is closed when removing jammed material. When working, one second of distraction can cause an accident leading to serious injuries.

Carry the machine by its handle, with the cutting blade stopped. Always cover the cutting system with its protective casing during transport or storage. The correct handling of the saw will reduce the risk of injury from the cutting blades.

Keep the cord away from the cutting zone. When in use, the cord can be hidden in the shrubs and accidentally cut by the blade.

WARRANTY CONDITIONS

The POWERCOUP PW2 handle is covered under warranty for a period of two years against all manufacturing faults and defects.

This warranty corresponds to recommended use of the tool and excludes:

- Damage due to poor maintenance or a lack of maintenance,
- Damage due to inappropriate usage,
- Damage due to normal wear and tear,
- Tools which have been dismantled by unauthorized repairers,
- External forces (fire, flooding, lightning, etc.),
- Damage from tool being dropped or from other impact,
- Tools with warranty cards not returned at the time of purchase,
- Tools used with a battery or charger other than those manufactured by INFACO.

INFACO shall not remit payment for any monetary loss incurred for the time the tool is unavailable during repairs.

All repairs made by a person other than an approved INFACO authorized service provider (ASP) will invalidate the equipment warranty.

In case of any breakdown, we strongly recommend that users of INFACO equipment either contact the retailer from whom they purchased the tool, or our after-sales service on (+33) 05 63 33 91 49 (France).

Please note our after-sales service shipping policy:

- For equipment submitted to us within the scope of the warranty, you pay to send it to us and we pay the return postage.
- For equipment which is not within its warranty period, you pay to send it to us and the return will be made at your cost, cash on delivery. We will send you an estimate

if the cost of the repair is more than \$80.

RECOMMANDATIONS

Keep your work area tidy.

Untidiness in the work area increases the risk of accidents.

Take the work area environment into account.

Don't expose electrical tools to the rain. Don't use electrical tools in a humid or wet environment. Make sure the work area is well lit. Don't use electrical tools if there are flammable liquids or gases in the vicinity.

Protect yourself against electrical discharge.

Avoid bodily contact with grounded surfaces, such as, for example: battery charger, multiway electrical sockets, etc.

Keep children away!

Don't allow other people to touch either the tool or the power cord. Keep others well away from your work area.

Store your tools in a safe place.

Tools not in use should be stored in a dry, enclosed place, in their original packaging and out of the reach of children.

Wear suitable working gear.

Do not wear flowing clothes or jewelry. These could get caught up by moving parts. When working outdoors, it is recommended that you wear rubber gloves and shoes with non-slip soles. Use a hairnet if you have long hair.

Wear protective goggles.

Use a mask as well if the work you are doing produces dust or debris.

Take care of the lead.

Never carry the charger by its power cord, and so not pull on the power cord to unplug it. Keep the power cord away from heat sources, oil or sharp edges.

Take good care of your tools.

Regularly check the condition of the power cord and plug, and have them changed by an approved specialist if they show any signs of damage. Keep the POWERCOUP PW2 material dry and free of oil and grease.

Remove the tool keys.

Remove any adjustment keys before switching on the tool.

Check whether your tool is damaged.

Before using the tool, carefully check that the safety features are in perfect working order and whether any parts have been even slightly damaged.

Have your tool repaired by a specialist.

This tool is compliant with the safety regulations in force. All repairs must be carried out by an authorized service provider (ASP) or by INFACO and exclusively using original parts. Parts which are not original may seriously risk the safety of the user.

REPAIR

Problem	Cause	Solution
Bad cuts	Manque de graisse	Lubricate the the hedge trimmer following the procedure
pau cuts	Blade wear	Contact your dealer
Noise in the pole	Deteriorated pole guide	Contact your dealer
	Battery drained	Recharge the battery
Tool does not start	No power to the tool	Reconnect to power source
	Others	Contact your dealer
Tool suddenly stops	Battery drained	Recharge the battery

note:	

Note:


Note:	
	•
	•••
	•
	••
	••
	••
	• •
	• •
	• •
	• •
	• •
	• •
	٠.
	٠.

RETAILER SECTIONTHE RETAILER TO KEEP THIS SECTION

Month / year of manufacture:	THD600	THD700
Last name:		
First name:		
Company name:		
Street address:		
City:		
Zip code:		
Phone:		CUSTOMER SIGNATURE
Purchase date:/		
Do you already own an ELECTROCOUP pruning she	ear:	
Yes No If yes, serial #		
Observation :		
Observation :		
WARRA RETURN this form IMMEDIATELY, filled in with C	NTY CARD	ensure full warranty coverage
Last name: First		
Company name:		
Street address:		
Zip code: City:		
Phone : Fax :	Portable :	
E-mail :	Fruit growing	
Purchase date://	Pruning	RETAILER STAMP
Serial #:		
THD600 THD700 Do you already own an ELECTROCOUP pruning shear:	Wine growing	
20 you alleady own all ELECTROCOOT pruning sheat.		
Voc No If yes sorial #	Landscaping	
Yes No If yes, serial # Observation:	Landscaping	

RETAILER

TO BE KEPT
BY THE RETAILER FOR THE
INFACO

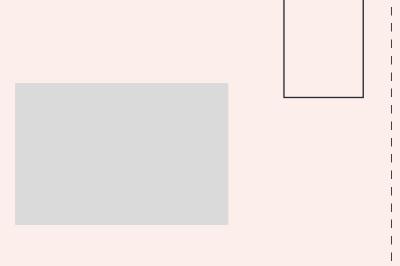



EQUIPMENT MANUFACTURED IN FRANCE



Manufacter: INFACO S.A.S. - 81140 CAHUZAC-SUR-VÈRE (FRANCE)

Type: TAILLE HAIE THD600 / THD700

Weight of POWERCOUP PW2 hedge trimmer: Modèle THD600 3300g / Modèle THD700

3400g

Max. power: 1000 W

Battery voltage: 48 Volts

This information is being given for informational purposes only. It is under no circumstances contractual, and is subject to modification for reasons of improvement, without prior notice.

Patented equipment.

Technical information or After-Sales:

The following pictograms are used in this user's manual:



Indicates a risk of bodily harm, danger of death or a risk of damage to the tool if the instructions given in this user's manual are not followed.



Indicates the presence of electrical voltage.

Read this user's manual carefully before using the tool. Make sure that you have understood how the tool works and is operated. Take good care of the tool in compliance with these instructions, so that it will always function correctly. Keep this user's manual and the attached documentation close to the tool.

NOTPW2THD_EN_01

DÉCLARATION D'INCORPORATION

DECLARATION OF INCORPORATION

INFACO s.a.s. déclare que la quasi-machine neuve désignée ci-après : INFACO S.A.S. declares that the new partly-completed machine designated below:

> Taille-haie électroportatif Electronic hedge-trimmer

De marque – Brand name : INFACO	Modèle - Model : THD600 / THD70			
N° de série – Serial no :	Année de fabrication – Year of manufactur			

Est conforme aux dispositifs des directives :

Complies with the provisions of the directives for:

- "Machines" (directive 2006/42/CEE).
 - "Appliances" (directive 2006/42/CEE)
- "Emissions sonores machines utilisées en extérieur" directive 2000/14/CE (arrêté du 18 mars 2002) modifiée par la 2005/88/CE (arrêté du 22 mai 2006).
 - Directive 200/14/EC « on the noise emission by equipment for use outdoors » (order of 18 march 2002) modified by the directive 2005/88/EC (order of 22 may 2006).
 - directive 2005/88/EC (order of 22 may 2006).
- La personne autorisée à constituer le dossier technique au sein d'INFACO est M.ALVAREZ Grégory. The person authorized to compile the technical file within the company INFACO is Mr. Gregory ALVAREZ.

POWERCOUP PW2 - THD600 / THD700

Niveau de pression acoustique pondéré A au poste de travail, LpA (NF EN 60745-2-11 : 2009) Sound pressure level LpA

THD600 83 dB(A) / THD700 84 dB(A)

Valeur mesurée d'émission vibratoire, ah (EN12096)

Measured value of vibratory emission, ah

THD600 4.4 m/s² / THD700 3.7 m/s²

Fait à - Signed in : CAHUZAC SUR VÈRE

M. DELMAS Daniel, Président de la Société INFACO - INFACO President

Le - Date: 27/03/2020

Salar

Signature - Signature :

La quasi-machine ne doit pas être mise en service avant que la machine finale dans laquelle elle doit être incorporée ait été déclarée conforme aux dispositions pertinentes de la présente directive.

The partly-completed machine must not be put into service until the final machine into which it is to be incorporated has been declared in conformity with the relevant provisions of this Directive.

INFACO s'engage à fournir aux autorités nationales les informations pertinentes concernant la machine. INFACO undertakes to provide national authorities with all relevant information concerning the machine.