

800.258.8511 www.spiritfitness.com



USER'S GUIDE

The New SPIRITFIT APP is designed to monitor and record your workout data through an integrated Bluetooth 4.0 module that is compatible with most iOS and Android mobile devices.

Simply download the SPIRITFIT APP, set up the account, pair with your SPIRIT FITNESS equipment, then you're ready to track your workout schedule, design your workout plan, and set your workout program.

All of your personal profile and exercise data will be stored in your mobile device.

During your workout you can watch a movie, catch up on news, and check your email while the SPIRITFIT APP continues to record your exercise data in the background.

The SPIRITFIT APP also communicates with Fitbit, iHealth, RECORD, MapMyFitness, MyFitnessPal and other open source training apps so you can continue using the fitness apps that you are familiar with and keep all your workout history in one safe place.

TABLE OF CONTENTS


APP Download	I
Language Selection	2
Turning on Bluetooth	3
Connecting Devices	5
Selecting Users	7
Choosing Programs	10
Workout Views	12
Completing Your Workout	13
Calendars	4
Exporting to 3rd Party Apps	16

APP DOWNLOAD



The SPIRITFIT App is compatible with iOS and Android devices. Download the SPIRITFIT APP from the Apple App Store or Google Play Store.

Once downloaded it will show up on your device.

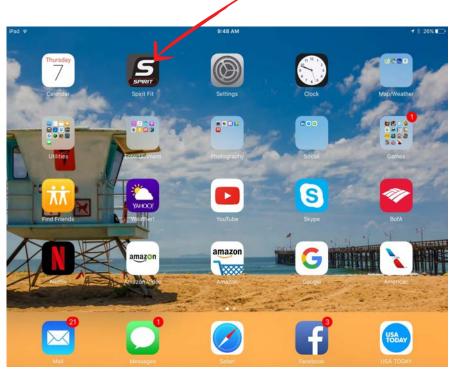

Note: Please make sure to download the APP that matches your equipment.



SPIRIT**FIT** APP





Spirit Fitness App: Used only with App Console (shown here)





800.258.85 | | www.spiritfitness.com

USER PROFILES	PROGRAMS	DISPLAY	CALENDAR
8	SPI	RIT	6
Sigr	n In	Add Nev	v User
Guest			
	ssible User Profiles:6 for a new profile by selecting the	profile you wish to delete.	

LANGUAGE SELECTION

In the upper right corner of all screens you will see the language icon with the selected language shown ("En" for English).

USER PROFILES	PROGRAMS		CALENDAR
0	SP	PIRIT	0 6
	Langua	age Setting	
	English	\checkmark	
	Español		
	Francais		
	Deutsche		
	Cancel	Confirm	
	Day We	ek Month	List Totals

To change to an alternate language, press the blue language icon, scroll through the list of available languages, select your language, then press Confirm.







BLUETOOTH ON/ OFF

Your equipment is shipped to you with the Bluetooth feature ON. The following instructions show you how to toggle ON/OFF the Bluetooth on treadmills.

EQUIPMENT

Treadmills

- I. Pull out the safety key.
- 2. While holding down the INCLINE + button and the START button at the same time, re-insert the safety key – continue to hold down the INCLINE + button and START button for about two seconds until you hear a beep. After the beep you can stop pressing the INCLINE + button and the START button.

At the bottom of the console it will show BLUETOOTH OFF or ON.

3. Use the INCLINE +/- or SPEED +/- buttons to toggle BLUETOOTH ON or OFF.





4. Once selection is made, press the STOP button to exit.

Please note: The Bluetooth symbol on the console LCD will not light up until you connect to the equipment through your phone/ tablet in the next section CONNECTING.



USER PROFILES	PROGRAMS	DISPLAY	CALENDAR
8	SP	IRIT	En
Sig	n In	Add New	w User
Guest			
	ossible User Profiles:6 ce for a new profile by selecting t	he profile you wish to delete.	

<page-header> USER PROFILES POGRAMS DISPLAY CALENDARY Image: Constraint of the state of th

CONNECTING

Once the SPIRITFIT App is opened you will need to connect with your equipment. On your phone/tablet, access your device settings and turn on Bluetooth.

I. Select the red connect icon in the upper left of the screen.

2. Select your equipment listed by model number and press Connect.



USER PRO	DFILES	PROGRAMS	DISPLAY	CALENDAR	
0		SPI	IRIT		n
	Sign	In	Add I	New User	
	Guest				
		ble User Profiles:6 or a new profile by selecting th	e profile you wish to delete.		
,					
			00		
711					
<u>i î v</u>	_ /				

3. Once connected the connection icon in the upper left of the APP screen will change from red to black and the Bluetooth icon on the equipment LCD screen will light up .



	S PROGRAMS	DISPLAY	CALENDAR
8	SPI		J.
Si	gn In	Add New I	Jser
Gue	st		
	um possible User Profiles:6 space for a new profile by selecting the	profile you wish to delete	
oreate	space for a new prome by account and	prome you wan to delete.	
-			
	ES PROGRAMS	DISPLAY	CALENDAR
0	(SPI	RIT	En
New	User Profile		
Name: Ke			
Age: 46		Gender: Male	Female
	Get in fabulous shape!	Male	
Goals:			
Notes:	Eat well and get lots of sleep.		
		_	\frown
			Save
st			
Ken	Ale	ert!	
		been successfully led.	
	Con	firm	

ADD NEW USER

NEW USER

I. In order to track your information you must createa New User Profile – selectAdd New User.

2. Enter all user profile information and press Save.

3. You will be prompted to confirm the new user set up – press Confirm.
Each user entered will be listed – up to six users can be saved.



USER PR	OFILES PROGRAMS	DISPLAY	CALENDAR
0	SPI	RIT	En
	Sign In	Add New	/ User
	Guest		
	I Ken		
	Maximum possible User Profiles:6 Create space for a new profile by selecting the	e profile you wish to delete.	

USER PROFILES	PRO	GRAMS	DISP	LAY	CALEND	AR
6		SPI	RIT			En
v	Velcor	ne Ba	ck Ke	n		
N	lot Ken ?		Edit Profile			
1 Manual	Z. Hill	rat Burn	Sardio	Strength	 Interval	


SELECTING USER

In the USER PROFILES menu, select your user. You will then be shown the PROGRAMS screen with a welcome message.

GUEST

If you prefer not to track your information, then you can log in as a guest by selecting Guest.



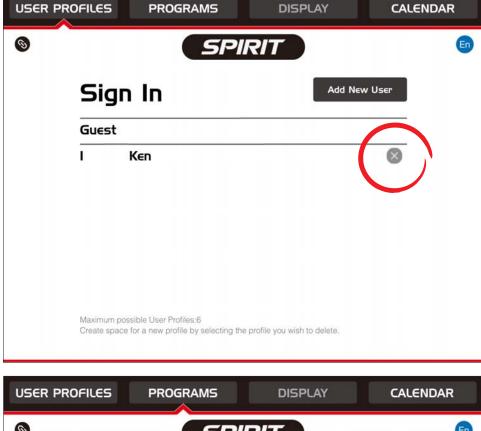

DELETING USER

In the USER PROFILES menu if you would like to delete a user, simply press the X next to the user's name.

USER PROF	ILES	PROG	RAMS	DISP	LAY	CALEND	٩R
6			SPI	RIT			En
	We	elcoπ	ne Ba	ck Ke	n		
	Not K	(en 7		Edit Profile			
Man	ual	Х. Hill	rat Burn	Cardio	Strength	iiii Interval	

EDITING USER

In the PROGRAMS menu, on the welcome screen, you can select Edit Profile to change your user information.



USER PROFILES	PROGRAMS	DISPLAY	CALENDAR
0	SP	IRIT	En
w	elcome Ba	ick Ken	
Not	Ken ?	Edit Profil∈	
1 Manual	Hill Fat Burn	Cardio Strength	n Interval

USER PROFILES PROGRAMS DISPLAY CALENDAR 9 En SPIRIT Hill The Hill program simulates going up and down a hill. The speed will steadily increase and then decrease during the program. 0 N ~ Z S another program. Start

CHOOSING PROGRAM

In the PROGRAMS menu, select the desired program.

I. The program will prompt you to enter Time – use the up/down arrows on the screen to choose the duration of your workout.

2. Select Start on the screen to begin.



USER PROFILE	ES PROGRA	AMS DI	SPLAY	CALENDAR
6		SPIRIT		6
0.0	↔ 0	0:00	0.00	🥐 0.0 👘
INCLINE	HEART RATE	TIME	DISTANCE	SPEED
MUS	CLE PROFILE	Alert! Press Start workout. Confirm		PROFILE
WORKOUT VI	EW	SIMP	LE TRACK	DASHBOARD

QUICK INCLINE 0

> Z. HILL

FAN


X

3. You will be shown an Alert message to confirm you are ready to begin. Press confirm.

QUICK KEYS 2 | 3 1 5 4 6 71 8 9 FAT BURN CARDIO STRENGTH INTERVAL USER -1 \heartsuit USER -2 HR INCLINE STOP 6 SPEED ENTER ANDRA


4. Now press the START button on the console to begin your workout.



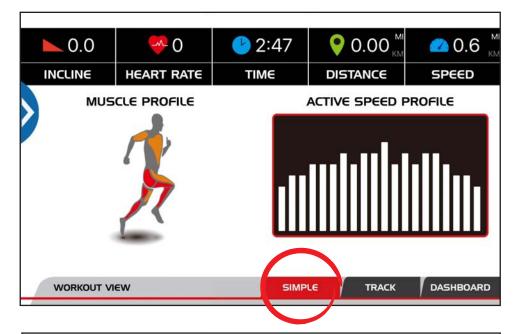

3 WORKOUT VIEWS

There are three workout views available during your workout – you can toggle between them at any time during your workout by pressing the tab of each workout view (SIMPLE, TRACK, DASHBOARD).

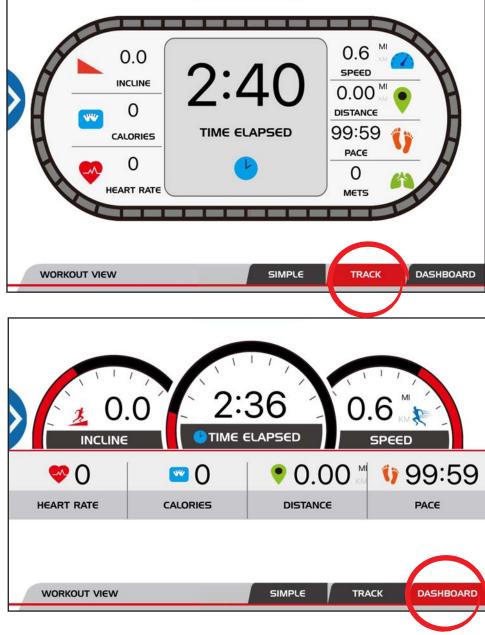




800.258.8511 www.spiritfitness.com



COMPLETING YOUR WORKOUT

To pause your workout at any time, press the STOP button on the console.

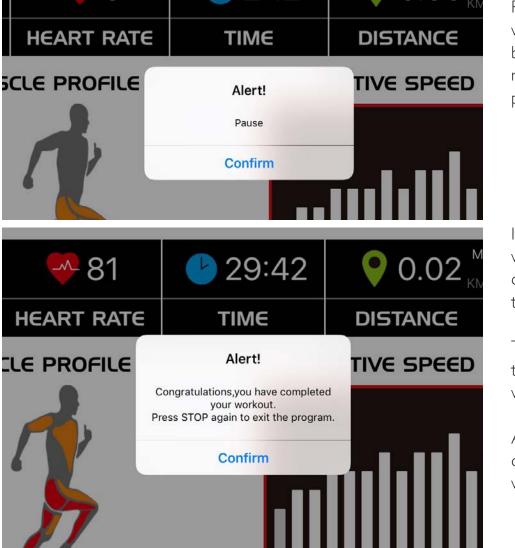

Pressing STOP on the console will result in your workout being paused and an Alert message being shown on your phone/tablet.

If you have completed your workout and don't plan to continue, then press STOP on the console again.

This will tell the SPIRITFIT APP that you have completed your workout.

An Alert message will appear congratulating you on your workout.



	PROFILES	Pi	ROGRAMS		DISPLA	r i		R
5			S	PIRI	Τ		(f)	E
		<		July 2016		>		
-	Sun	Mon	Tue	Wed	Thu	Fri	Sat	
-	26	27	28	29	30	1	2	
-	3	4	5	6	7	8	9	
-	10	11	12	13	14	15	16	
_	17	18	19	20	21	22	23	
_	24	25	26	27	28	29	30	
	31	1	2	3	4	5	6	
		Da		Week	Month	Lis	st Tot	- 1
		Da	ig /	WEEK	Month			315
JSER	PROFILES	PI	ROGRAMS		DISPLA	Y		R
5			5	PIRI	Τ			
DAT	E	PRO	GRAM	DURA	ATION	тімє		
Thu.	07/07/2016	Hill		O mir	n.	IO:12 AM -	10:15 AM	
Thu.	07/07/2016	Hill		0 mir	1.	09:59 AM	- 10:02 AM	

CALENDAR


The CALENDAR menu will save your workout data and allow you to share your workout data with compatible apps.

It also provides your workout history in multiple display formats (Day, Week, Month, List, Totals) which can be selected using the bottom tabs on the CALENDAR menu screen.



USER PROFILES	PROGRAMS	DISPLAY								
8	SPI	RIT	(1) (5)							
	Day									
	Week									
	Month									
	Year									
	Total to Date									
	Day Week	Month	List Totals							



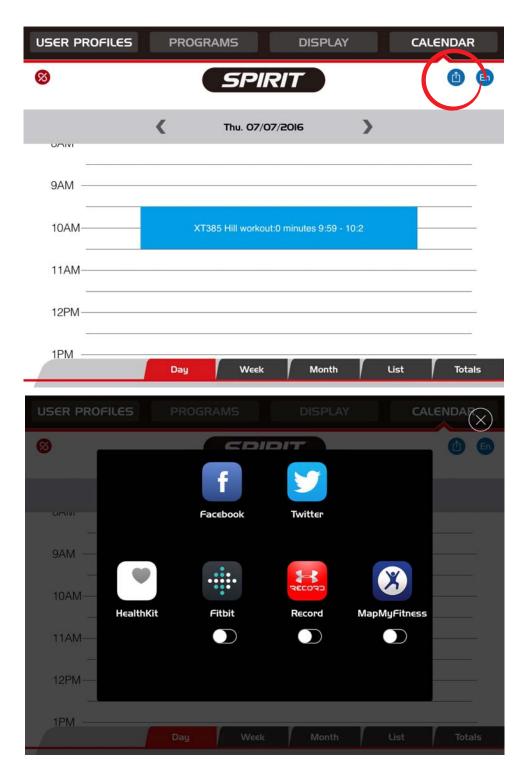

3rd PARTY APP SYNC

Press the upload icon at the upper right of the CALENDAR menu screen.

Choose the App that you want to share your workout data with. All compatible apps will be listed, but only those shown in color are available/loaded on your specific phone/tablet.



USER PROFILES		PRO	PROGRAMS DISP		SPLAY	CAL	CALENDAR	
0			SP	IRIT			En	
	Sig	n In			Add Ne	w User		
	Guest							
	I	Ken	Please attack	Alert! n safety tether key. Onfirm		0		
		ossible User Proce for a new pro	ofiles:6 file by selecting	the profile you w	ish to delete.			

SAFETY TETHER KEY

If the safety key is removed, you will be notified on the APP screen.

