



KB-100 STEREO BLUETOOTH HEADPHONES USER MANUAL

CONTACT CONTIXO:

support@contixo.com www.contixo.com CONTIXO is a trademark of Contixo Inc. ©2016 Contixo Inc. All rights reserved.

PACKAGE CONTENTS

 Contixo Stereo Wireless Headphone

- USB Charging Cable
- 3.5mm Audio Cable
- User Manual.

PRODUCT OVERVIEW

- 1 Power ON/OFF
- (2) Play/Pause/Call
- (3) LED Light
- (4) Next Track/Volume Up
- (5) Previous Track/Volume Down
- 6 Microphone
- (7) 3.5mm Aduio Jack
- (8) Micro USB Jack



SPECIAL FEATURES

- V4.2 Bluetooth wireless signal transmission
- Track switching control possibility
- Call acceptance function
- · Wired/wireless audio signal transmission
- Battery operation time up to 10 hours
- Radius of operation up to 10 m (30 ft)

CHARGING

*** You must completely charge the headphone before the first use ***

Connect the USB charging cable to any powered USB port and to the 3.5mm jack on the right earcup. Make sure it is plugged in fully. Charge time is typically 1-2 hours.

The red LED light will stay lit while the headphones are charging and will turn off completely when the headphones are ready for use.

INDICATOR LIGHT STATE WHEN CHARGING CABLE IS PLUGGED IN:

LIGHT PATTERN	STATUS	NOTES
Solid red light	Battery charging	Allow to charge for 1-2 hours
All lights off	Battery full	Ready for use

TURNING ON AND OFF

To turn on, long press the power ON/OFF button. The headphones will say "Contixo Bluetooth is turned on and ready to pair." and the red and blue LED lights will flash in an alternating pattern.

To turn off, long press the power ON/OFF button. The LED light will be off.

PAIRING WITH BLUETOOTH DEVICES

*** Your headphones must be paired to a Bluetooth device before it can be used. It is only necessary to pair your headphones once with each device. ***

- Open the Bluetooth menu on the device you wish to pair. Some devices require you to select "Search for Devices" or "Add New Device" in order to create a Bluetooth pairing.
- With the headphones turned off, long press the power ON/OFF button. The headphones will say "Contixo Bluetooth is turned on and ready to pair.". The red and blue LED lights will flash in an alternating pattern while the KB-100 is in pairing mode.
- Wait until you see "KB-100" on your device screen.
- Select "KB-100" on your device and follow any further prompts to pair. Once pairing is complete and a connection is established, the LED light will stay blue.

LOCATING THE BLUETOOTH MENU

iPhone, iPad, and iPod Touch

- a) On your device, go to Settings
- b) Select Bluetooth. If Bluetooth is not on, turn it on. The iPhone/iPad/iPod will automatically search for new devices

Android[™]Phones and Tablets

- a) On your device, go to the Settings menu
- b) Select Bluetooth (on older Android devices Bluetooth is found in the Wireless & Networks menu). If Bluetooth is not on, turn it on. Select "Search for Devices" if your phone or tablet does not automatically search for new devices

01 02

Windows[™] Phone 8 Devices

- a) On your device, open the Settings menu
- b) Select Bluetooth. If Bluetooth is not on, turn it on. The Windows phone will automatically search for new devices

CONNECTING WITH PAIRED DEVICES

Once the KB-100 is turned on, it will automatically connect with the last paired Bluetooth device that is on and within range. If the KB-100 is not connected automatically, turn off and turn on it to initiate connection with last paired device. If the headphones still do not connect, open the Bluetooth menu on your device and select "KB-100" from the Bluetooth device list.

On some computers, Bluetooth audio must be enabled manually every time you connect.

CONTROLS

The KB-100 can control media and phone calls from a smartphone or tablet.

1. ADJUSTING THE VOLUME

FUNCTION	OPERATION	NOTES
Increase volume	Long press Volume Up button to increase the volume	When the volume reaches the maximum level the KB-100 will produce a short tone.
Decrease volume	Long press Volume down button to reduce the volume	

Note: Volume can be adjusted only while media is playing or during a phone call. With most devices, volume adjustments will change the volume of the headphones independently of the connected device while playing media. Adjust device volume as needed to further increase or decrease the volume. During a phone call the headphones will directly control device volume.

2. CONTROLLING PHONE CALLS

STATUS	FUNCTION	OPERATION
	Answer call	Press the Call button
Incoming call	Reject call	Double-click the Call button
Call in progress	End call	Press the Call button

3. CONTROLLING MEDIA PLAYBACK

STATUS	FUNCTION	OPERATION
No media playing	Play media	Press the Play/Pause button
Media playing	Pause media playback	Press the Play/Pause button
A 4 - 4 : - 1 - 4	Skip to next track	Press the Next Track button
Media playing or paused	Restart track / previous track	Press the Previous Track button

USE AS WIRED HEADPHONE

The KB-100 can be used as a wired headphone by plugging one end of the included stereo audio cable into the 3.5mm jack on the KB-100 and the other end into any audio device with a standard 3.5mm headphone jack. Plugging the audio cable into the headphone will disable Bluetooth functionality until the cable is unplugged.

SAFETY AND CARE

- When not in use, power the headphones off and store in a cool, dry place. Battery
 performance will be severely decreased when stored in extreme temperatures:
 below -10° C/14° For above 45° C/113° Fincluding direct sunlight.
- Clean with a soft cloth, damp with diluted soap water solution if necessary. Never use chemical cleaners.
- There are no user replaceable/reparable parts in the headphone. Disassembling it will void your warranty.
- Do not expose the headphones to liquids. If the device comes in contact with liquids, quickly wipe away. If submersed in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- . Do not use around flammable gasses as fire or explosion may occur

WARNING:

Using headphones at high volumes for a long period of time may cause hearing impairment. Do not use while cycling or performing other activities that require hearing surrounding sounds. It is advised to turn the volume on your device all the way down before connecting your headphones, then gradually increase the volume until you reach a comfortable listening level.

03

SPECIFICATIONS

Bluetooth Version	V 4.2
Sensitivity	85dB±3dB
Bluetooth Profiles Supported	A2DP, HSP, HFP, AVRCP
Frequency Response	20Hz to 20KHz
Operating Range	10 m (30 ft)
Music Playback Time	Up to 10 hrs
Talk Time	Up to 7 hrs
Standby Time	150 hrs
Battery	Lithium 280mAh
Charger	DC 5V/0.5A
Weight	5.6oz

TROUBLESHOOTING

Problem	Problem Solution	
No power	Make sure that your headphone's battery is charged. Make sure that your headphone is turned on.	
No sound or low volume	Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and KB-100 is selected. Turn up the volume on your headphone. Turn up the volume on your Bluetooth device. Make sure that your Bluetooth device is not muted. Make sure that your headphone is not paired to another Bluetooth device. Make sure that your Bluetooth device is not paired to another Bluetooth device. Make sure that your Bluetooth device is not paired to another Bluetooth device. Shorten the distance between your headphone and your Bluetooth device	
Cannot establish Bluetooth connection	Make sure that your headphone is in pairing mode. Press the Multifunction button to reenter pairing mode. Shorten the distance between your headphone and your Bluetooth device. Turn your devices off, then on. Re-pair your headphone and your Bluetooth device. Make sure that your headphone is not paired to another Bluetooth device. Make sure that your headphone and Bluetooth device are both in pairing mode. Make sure that your Bluetooth device supports Bluetooth v3.0 and below. Make sure that your Bluetooth device is not connected to any other device. Make sure that you have selected KB-100 on your Bluetooth device. Make sure that AUX external device is not connected. Disconnect the AUX cable and reenter pairing mode.	
My Bluetooth device keeps unpairing	Shorten the distance between your headphone and your Bluetooth device. If the battery on your Bluetooth device is low, recharge the battery. If the battery on your headphone is low, recharge the battery.	
"KB-100" does not appear on my Bluetooth device	Shorten the distance between your headphone and your Bluetooth device. Put your headphone into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.	

05