

FLIP RACER

Super Fast RC Stunt Car SC3



WHAT'S IN THE BOX



CONTACT INFORMATION

Designed by Contixo, California USA • Assembled in China
Website: www.contixo.com • Email: sales@contixo.com
© 2021 Contixo Inc. All rights reserved. Contixo®
• The Contixo logo and associated characters, trademarks and design elements are owned and licensed by Contixo Company.



FLIP RACER

Super Fast RC Stunt Car SC3

USER MANUAL

PLEASE READ THIS MANUAL BEFORE USING • KEEP FOR FUTURE REFERENCE



2.4Ghz



360°
Rotate



Cool
Light




Responsive
Stunt

FLIP RACER SC3

Introduction and overview

Contixo Flip Racer SC3 RC Stunt Car. This is a super fast rear wheel drive flip stunt car with 2.4Ghz remote control. The SC3 is a double sided 360° rotating RC Car with very bright and intense LED lights in the wheels that illuminate in multi-colors. Equipped with a programmable remote and wrist band for easy access.

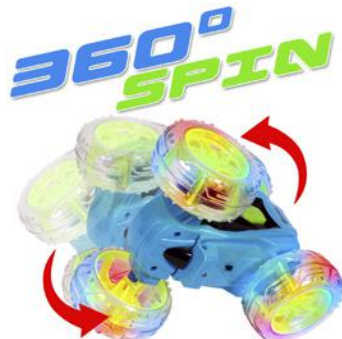

REMOTE CONTROL

OPERATION



SINGLE BUTTON MOVEMENT

Button 5 Move Forward • **Button 6** Move Backward • **Button 7** Flip/Spin Left • **Button 8** Flip/Spin Right

DUAL BUTTON MOVEMENT (REPEATEDLY)

Buttons 5 & 7 moves forward and flips left • **Buttons 6 & 8** moves forward and flips right

NOTE: SC3 body needs to be right side up. If the body is with the battery compartment facing up the SC3 will respond opposite meaning every action in reverse.

TO PROGRAM YOUR FLIP RACER

Buttons 1, 2, 3, 4 are PROGRAM action buttons. Press actions buttons 1, 2, 3, 4 upto 6 times each for one single program.

Action Buttons: 1 - Left Flip • 2 - Forward • 3 - Right Flip • 4 - Backward • Center - PROGRAM Button

Example 1: Press 2 once and PROG once. The SC3 will move forward a short distance. Press PROG again and it will repeat.

Example 2: Press 2 twice and PROG once. The SC3 will move forward a longer distance. Press PROG again and it will repeat.

Example 3: Press 2 once, 3 once and PROG. The SC3 will move forward and flip right once. Press PROG again and it will repeat.

Example 4: Press 2 once, 1 once and PROG. The SC3 will move forward and flip left once. Press PROG again and it will repeat.

Example 5: Press 2 once, 4 once and PROG. The SC3 will move forward and backward. Press PROG again and it will repeat.

The more times (Upto 6 times) you press action buttons the farther it goes and the more it flips and spins.

BATTERY & CHARGING

BATTERY CHARGING:

1. Plug your battery in your computer USB port or a USB plug.
2. The charging light will come on when charging and turns off when charging is complete (40 Minutes).
3. Unscrew battery compartment and plug it into the SC3.
4. Charging time is 40 minutes. Run time is 20 minutes.
5. **Battery Size (3.7V 300MAH) Pre-Installed in car UNPLUGGED (Must be plugged in).**
5. Remote control (2 x AAA batteries (NOT included))

WARNINGS:

1. Use only original USB battery cable.
2. Do not use damaged or cable from other brands.
3. Do not charge or use expanded, leaking or damaged batteries.
4. Do not overcharge battery.
5. Do not charge near heat or flammable materials (eg. carpets, wood flooring, wood furniture or liquids).
6. Do not charge battery when it becomes hot.
7. Battery heat should not exceed 0-40°C (32-104°F)
8. 5V 1A charger recommended for charging (Not included).

ADDITIONAL WARNINGS:

1. There is a certain risk when using lithium batteries, which may cause significant damage to people and property. The end user must use caution and bear all related responsibilities.
2. If the battery leaks, avoid contact with hands, skin and eyes. If contact occurs, wash with soap and water immediately. If contact with eyes occurs, rinse immediately with cool water for at least 15 minutes and seek medical attention.
3. If charger begins to emit a suspicious odor, noise or smoke, unplug the power supply immediately.

RECYCLING AND DISPOSING

This equipment consists of electronic components and batteries. Please dispose of according to local waste disposal laws and ordinances.