



Infrared Laser Battle Tank SC6 User Manual



*product colors may vary

PLEASE READ THIS MANUAL BEFORE USING.
PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE

Remote Control

How to use

 


Automatic Demo

- | | | | |
|--|---|---|--|
|  Left Forward |  Right Forward |  Forward & Left |  Forward & Right |
|  Slide Left |  Slide Right |  Backward & Left |  Backward & Right |
|  Spin Left |  Spin Right | | |


Infrared Battle

The remote control car hit by infrared light will emit smoke, and the energy will drop by one level each time it is hit (a total of seven levels) and the energy status will be displayed. The light below the turret represents the energy status; when the energy is exhausted, the light will be displayed in red, and the remote control car cannot be controlled and needs to be turned on again or long press the shooting button to restore life.

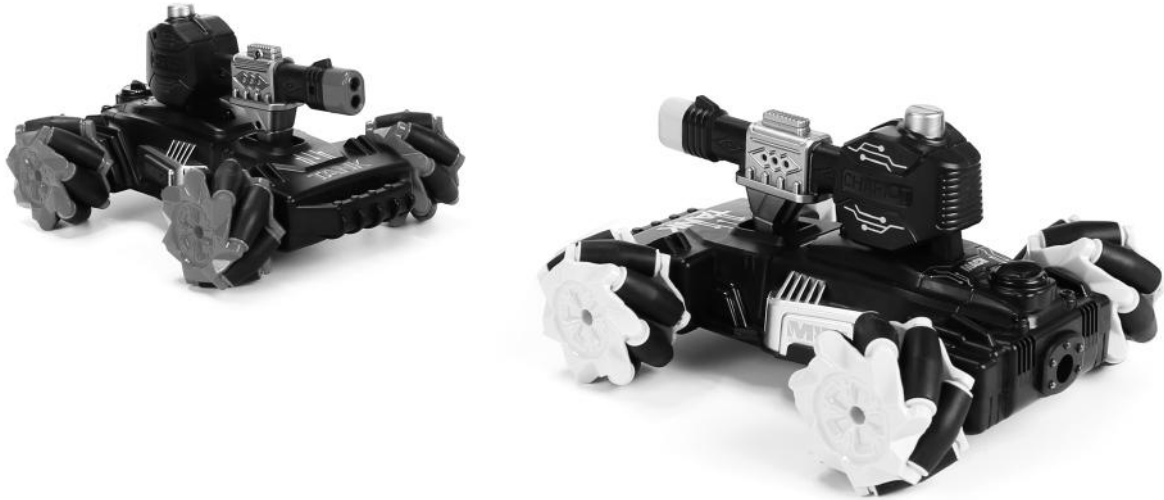

Spray Function

 Open the water injection port at the rear of the car, and use the equipped water injection device to inject clean water. When you click the spray button or the remote control car is hit by another remote control car, the remote control car will spray automatically

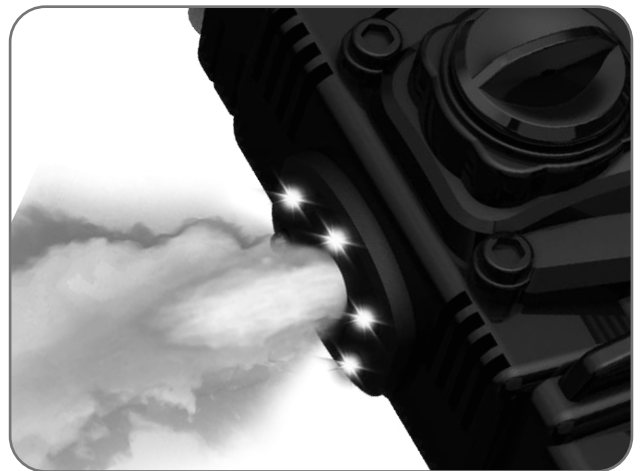


Battery Installation

SC6 Battery Installation


1. Use a screwdriver to remove the battery cover.
2. Attach the battery to the connector.
3. Replace the battery cover and screw back into place.

 *When removing the battery to charge, take care to unclasp the connector before pulling it off.

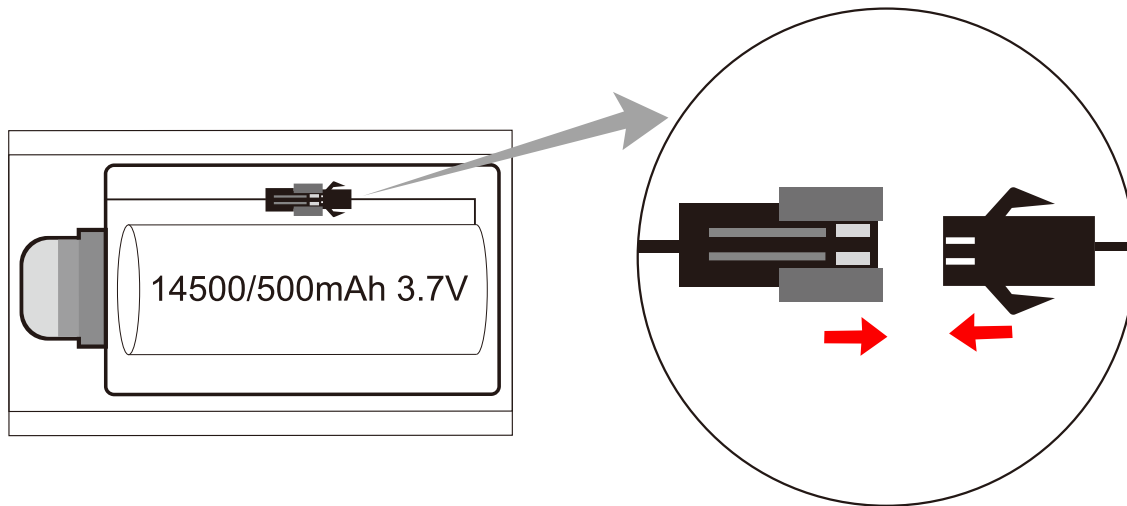

Remote Battery Installation

 1. Use a screwdriver to remove the battery cover.
2. Place two AA's with the corresponding polarities as labeled on the unit.
3. Replace the battery cover and screw back into place.

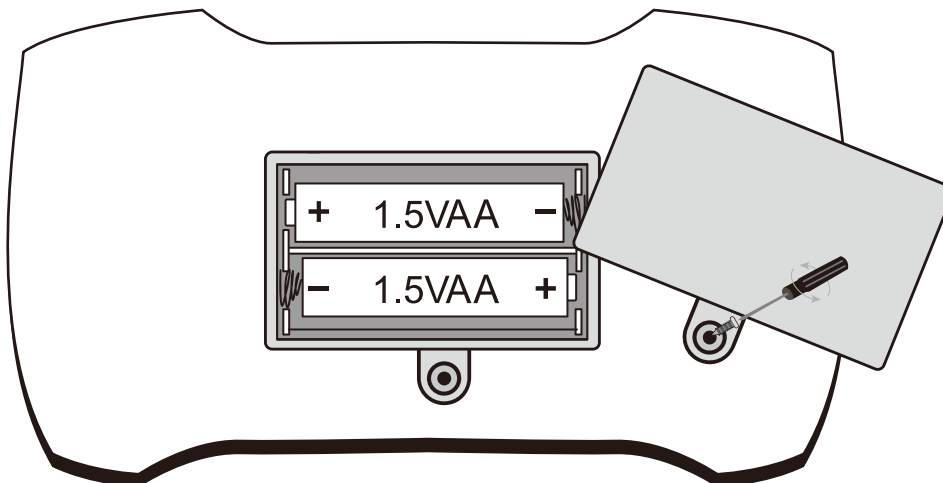

Battery Warnings

1. There is a certain risk of using lithium batteries, which may cause significant damage to people and property. The end user must use it carefully and bear all the related responsibilities.
2. If the battery leaks, avoid contact with skin and eyes. If contact with skin occurs, wash with soap and water immediately. If contact with eyes occurs, rinse immediately with cold water for at least 15 minutes, and seek medical attention.
3. If the charger begins to emit a suspicious odor, noise, or smoke, unplug the power supply immediately.

Battery Charging

1. The light turns on when charging and turns off when it is fully charged.
2. Use only the original factory cable. Do not use damaged or cable of other brands.
3. Do not charge expanded, leaked, or damaged batteries.
4. Do not overcharge the battery. When the battery is fully charged, unplug the device.
5. Do not charge near inflammable materials (eg. carpets, wood flooring, solid wood furniture, etc.).
6. Do not charge the battery immediately after it has become hot.
7. The charging temperature of the battery should be between 0-40°C (32-104°F).
8. Recommend using a 5V 1A charger (Not included) for charging.

Recycling

This equipment consists of electronic components or batteries. For electronic waste, please dispose of according to local waste disposal laws and ordinances.

Charging Time

New Battery needs to be fully charged for 120 minutes and use time is up to 25 minutes.



CONTACT INFORMATION

E-Mail: support@contixo.com

Website: www.contixo.com

©2021 Contixo Inc. All rights reserved. Contixo®, the Contixo logo and associated characters, trademarks and design elements are owned and licensed by Contixo Company.