 
 




Kids Smart Watch Manual

TABLE OF CONTENTS





Check if the watch is the correct model and includes all accessories in the package.

Make sure the battery is fully charged before using.

2 Functional area diagram



How to operate: Swipe left or right on the idle screen to change the theme. Tap on the screen to enter the main menu and find applications.

Switch on and off

Press the power button to go into sleep mode and wake up the device. Long press the power button to turn on or shut down the device.

Note: If the device won't start up, it may have a low power status. Please charge the device for several minutes and try again.

How to charge the device

1. Plug the USB charging cable into your own proper USB adapter.

2. Plug the adapter into a power outlet.

3. Plug the USB charging cable into the Charge port of the device.

If the device is charging correctly, you will find the device displays a dynamic charging icon.

Once the device has completely charged, it will display a "Fully Charged" icon. Caution: You must use a 5V 1A USB adapter and the power outlet must be in safe working status.

3 Idle screen & functions



CAMERA

Touch the camera icon or tap the shutter button on the device to enter the photo app.

Tap the icon in the upper left-hand corner to switch filters. Quick press the power button to quit the camera application.

PHOTOS

Tap the "Photos" app icon to view saved pictures and photos.

VIDEO

For video recording touch the videotape icon to start. When the recording is done, touch the back option to quit and save the recording.

PLAYER

Touch to watch your saved videos.

MUSIC

Touch to play the saved music. (You need to transfer your media files to the "MyMusic" folder on your SD card for the device to properly load your files. You can directly connect the watch to the computer to transfer files after powering off the watch.)

RECORDER

Touch to start voice recording.

CALCULATOR

For simple calculations.

TORCH

Chick on the Torch icon to turn it on/off

TOOLS

Contains various tools, such as: Alarm, Stopwatch & Timer.

Theme

Set background wallpaper

GAMES

The smartwatch comes with 14 fun and engaging games.

SETTINGS

Language

Set the languages of the device.

Time and Date

Set the date and time of the device.

Ringtone Volume

Set the Ringtone Volume.

LCD backlight

Set the time and Brightness of the device.

School Mode

Parents can set the permitted time of gameplay for kids.

Restore Settings

Restore factory settings and restart the device.

One Year Limited Manufacturer Warranty

We are a proud manufacturer of Contixo Inc. We reserve all rights to any trademarked content and the brand. Contixo Inc. sells its products with the intent of providing quality products that are free of defects in manufacture and workmanship, for one year from the original date of purchase. The warranty does not cover any damages caused by misuse, abuse, accidents, alterations to the product, improper installation, unauthorized repairs or modifications, improper use of power supply, dropped product, environmental conditions, or any other conditions whatsoever that are beyond the controls of Contixo Inc. This warranty does not extend to the purchase of opened, used, repaired, repacked and / or resealed products. Please keep original sales invoice and the warranty card to validate the warranty. Subject to the applicable provisions set fourth herein, with regard to this limited warranty, you are responsible for all costs in connection with the shipping and handling of the product to Contixo, and Contixo is likewise responsible for all shipping and handling of the product back to you. Contixo accepts no risk of loss of the product in connection with the limited warranty.

How to claim warranty?

https://www.contixo.com/product-registration



To submit a request for repair or replacement, please contact us at support@contixo.com. We will respond to you within 24 to 48 hours of normal business operations. Thank you for your purchase with Contixo.