

CONTIXO[®]

ages **14+**



Commander Gel Blaster SC9 Instruction Manual

Important

Thank you for purchasing the Contixo SC9 commander gel blaster. Please read all instructions and warnings carefully before operating, and keep this instruction manual for future reference and maintenance.

In the event that the product is faulty. Please reach out to our technical support team. All of our products have a 1-year limited warranty: <https://contixo.com/pages/warranty>. Likewise, should the product malfunction, or become damaged and need maintenance, reach out to our customer service team at: Support@contixo.com.

Warnings & Cautions

1. Detachable small parts should be stored safely and out of reach of children.
2. Transmitter will not function correctly if the batteries are low. Please replace the batteries.
3. Please discard old/used batteries in a safe manner. Consider your environment!
4. Please store the remote control model in cool, dry place.
5. DO NOT expose to fire or high temperatures, do not store in moist area.
6. Once the battery gets wet, wipe immediately with a soft dry cloth.
If the battery has any deformation, please stop using.

Precautions for Battery Use

1. Transmitter uses 2x1.5V "AA" batteries.
2. Please pay attention to correct polarity when replacing batteries.
3. Rechargeable batteries should be charged under adult supervision.
4. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
5. After the battery is exhausted, the batteries should be removed.
6. Exhausted batteries should be safely disposed of.
7. DO NOT short circuit any terminals.
8. DO NOT attempt to recharge non rechargeable batteries.
9. DO NOT put batteries into a fire or into water.

10. The rated input voltage battery charger MUST be suitable for your main power voltage.
11. During charging it is quite normal for the charger and batteries to heat up.
12. Do not swallow battery!
13. Store only in cool, dry and dark places and should be keep out of reach from children!
14. If the battery leaks liquid and gets into your eyes, please rinse with water right away and consult an ophthalmologist.




MADE IN CHINA

WARNING: Product should only be used by individuals 14 years and older. Adult supervision required for children under 14 years old.

WARNING: CHARGING OF THE CAR BATTERY MUST BE SUPERVISED AT ALL TIMES BY AN ADULT. UNPLUG THE BATTERY WHEN FULLY CHARGED. DO NOT OVER-CHARGE THE BATTERY.

Remote Control Functions

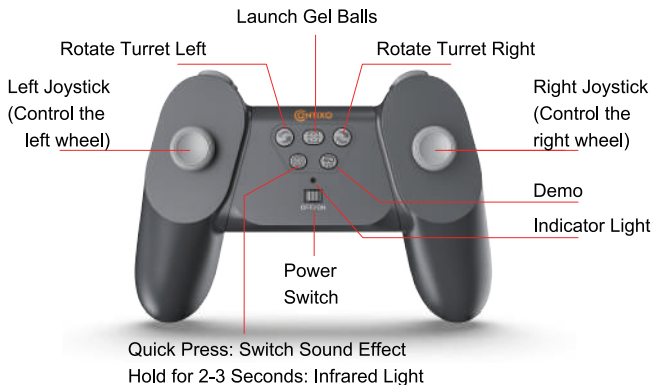

Commander Diagram



Water Gel Ball formation process

The gel balls need to be soaked in water for 4 hours for perfect results. If the pressure seems weak or the gel balls are not soft enough, it's likely an issue with the soaking time of the gel balls and not an issue with the vehicle. The gel balls must soak for 4 hours before use.

Note: We suggest to soak the gel balls in warm water, do not mix with other brands to use. The gel balls should be completely immersed in water.




Battery Installation

SC9 Battery Installation

1. Use a screwdriver to remove the battery cover from the bottom of the product.
2. Attach the battery to the connector.
3. Replace the battery cover and screw back into place.

Note: When removing the battery to charge, take care to unclasp the connector before separating.

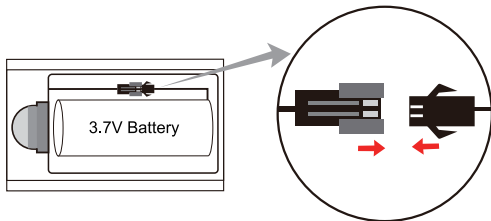

Remote Control Battery Installation

1. Use a screwdriver to remove the battery cover.
2. Insert 2 AA batteries (not included) according to the indicated positive and negative direction .
3. Replace the battery cover and screw back into place.


Remote Control Connection

1. Turn on the power switch on the remote control, the signal indicator light of remote control flashes.
2. Power on the commander by switching the power button on the bottom of the turret.



Charge

Remove the battery from the car battery compartment. Connect the USB charging cable to the corresponding socket. The light turns on when charging and turns off when it is fully charged.

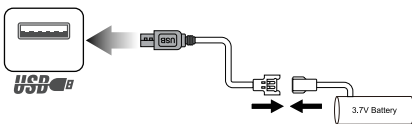

Packing Details

Commander Gel Blaster x 1
Remote Control x 1
Gel Balls x 3000

Charging Cable x 1
Manual x 1

Specifications

Model: SC9

Control Frequency: 2.4GHz

Remote Control Battery: 2 x AA

Battery: 3.7V 1200mAh

Playing Time: Up to 20 minutes

Charging Time: About 2 hours

Size: 13 x 7.5 x 10.6 Inch

Control Range: Up to 100 Ft.

Trouble Shooting

Problem	Cause	Solution
Car does not respond to user controls.	<ol style="list-style-type: none">1. Remote is not synced to the car.2. Insufficient battery power.3. Over control range.	<ol style="list-style-type: none">1. Reconnect the remote to the car.2. Recharge the battery.3. Use within the control range, the control range is up to 100ft, this distance will change according to the actual environment.
Can not power on the car.	Insufficient battery power.	Recharge the battery.
Can not launch gel balls.	<ol style="list-style-type: none">1. Gel balls are not sufficiently soaked.2. Clogged launch ports.	<ol style="list-style-type: none">1. The gel balls must soak for 4 hours before use. During the soaking process, it needs to be completely immersed in water.2. Swing the gel balls away by adjusting the angle of the turret or manually shaking the turret.



CONTACT INFORMATION

E-Mail: support@contixo.com

Website: www.contixo.com

©2023 Contixo Inc. All rights reserved. Contixo®, the Contixo logo, and associated characters, trademarks, and design elements are owned and licensed by Contixo Inc.