

包装设计源文件及相关信息

项目名称	定稿时间	设计人	版本	物料号
宠物吸毛器1.0	2023.06.01	王梦予	A0	暂无

包装细分项目信息

细分项目名称	尺寸	材质	工艺
说明书	140×208mm	128g铜版纸	装订方式：骑马订



Warranty description

- The warranty period is 12 months from the date of receipt of the product. The warranty is limited to the free repair of the purchased products. The consumables and accessories are not covered by the warranty.
- If it is damaged or breaks down during normal use, it will be repaired free of charge during the warranty period. If it is not possible to repair, replacement product service will be provided.
- The following conditions are subject to paid repair even within the warranty period:
 - Failure and breakage due to wrong use or human caused;
 - Damage caused by transportation company or other transportation damage;
 - Damage caused by pets (e.g. scratching, biting products, etc.);
 - Failure and damage caused by fire, earthquake and other natural disasters;
 - Failure and damage beyond the scope of general household use (such as outdoor use and other places that do not meet the application scenario).
- No matter whether the following conditions are within the warranty period, it is refused to commission repair:
 - Products not purchased through our channels (such as individual sales, auctions, etc.);
 - Customers take apart the product or try to transform it;
 - Consumables, accessories.
- While the product is covered by warranty, SIMPLEWAY is responsible for shipping costs, but the cost of packing materials is not included.
- If not covered by warranty, shipping and repair charges will be charged upon return for repair.
- The warranty period of the replacement product is based on the warranty period before the replacement (from the original purchase date).
- Repair or replacement is only available in certain countries/regions.
- If you have questions or need maintenance, please get help through the customer service of the purchase channel first.
- SIMPLEWAY reserves the right to interpret the above warranty terms. SIMPLEWAY reserves the right to update the warranty content. All repairs and requirements will be handled in accordance with the latest warranty terms.

14

Pet Grooming Vacuum V10

P1 正面

Product instruction manual

- Safety instructions 01-02
- Packing list 03
- Instructions for use 04-06
- Routine maintenance 07-12
- Product specification 13
- After-sales service 13
- Warranty description 14

Product specification

power	350W
Hose length	1.6m
Dust cup	2.1L
Main engine size	190*247*325
Length of power cord	2.5m
Net weight	1.68kg
Maximum noise	75dBA

After-sales service

If you have other questions or comments about your products, please get help through the customer service of the purchase channel first.
Email:cs@teendow.com

13

P1 背面

- Let dry in a well-ventilated place for at least 24 hours.
- After the sponge filter is completely dry, install the sponge filter back to the original place. Make sure to install the sponge filter properly.

Note:

- Filters should be cleaned regularly with cold water.
- The maintenance period depends on the frequency of use. Please clean it regularly.
- When cleaning, unplug the filter from the socket.
- Be sure to install sponge filter after drying.
- Wet sponge filters can cause electric shock and failure.

12

Safety Instructions

- This product is suitable for household use only. Do not use it for industrial use.
- Do not use it outdoors or in wet areas.
- Do not allow children or people with weak physical and mental abilities to use this product alone.
- Use in a safe environment and under the guidance and supervision of someone who knows the safe use of the product and its risks. Otherwise, never allow children to use it alone.
- Take full care when using near children and pets. In addition, please be careful not to allow children and pets to play with this product.
- Please do not touch the power plug and this product with wet hands, do not absorb wet hair and liquid.
- Do not use this product when the power cord or power plug is damaged.
- In case of product failure, damage or immersion in liquid, please contact us.
- Please do not disassemble this product. Incorrect assembly method may lead to electric shock or fire. Please contact our company for maintenance.
- Do not inhale flammable or combustible liquids such as gasoline. In addition, please do not use this product in or near an environment with flammable or combustible gases.
- Please do not pull the power cord and do not place heavy objects on the top of the machine. Also, don't close the door with the wire.
- Please do not inhale cigarettes, matches, hot soot and other burning, smoking, hot things.
- Before use, ensure that the opening is not blocked.
- Be sure to remove the plug from the socket before maintenance.
- Do not use or store this product outside or in damp places such as bathrooms.
- Do not use products with aromatics and fragrances as filters. Such chemicals may cause fire.
- Please only use this product at the specified voltage, which can be found at the bottom of the machine.

01

P2 正面

Safety Instructions

- Do not operate or unplug the power cord with wet hands.
- To avoid failure and electric shock, please absolutely prohibit.
- Do not smoke highly combustible materials (such as cigarette butts, etc.).
- To avoid fire or explosion, do not use it in places where flammable liquids or combustibles are present.
- The first time you use it, it may smell bad, but it will have no adverse effects on your body.
- The first time you use this product, there may be a bad smell, but it will disappear after a period of time, please understand. However, if the burning odor persists, discontinue use immediately!
- Clean the dust cup and filter regularly.
- Dust cup and filter in the case of dirty use, may cause product failure.
- During maintenance, make sure that the power cord is cut off.
- Leave the power on for maintenance, there may be a risk of electric shock or injury.
- If the temperature of the product rises abnormally, please stop using it immediately.
- In case the motor is abnormally hot or the suction is blocked, please stop the operation immediately, take out the dust cup, make sure that the suction inlet and filter are clean, and start the machine after 60 minutes.
- Before use, ensure that each screen is installed.
- If the product is used with the filter removed, it may damage the motor.

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

02

Routine maintenance

Sponge filter cleaning

- Remove the dust cup and remove the sponge strainer.
- Please wash under running water and drain after washing.

11

P2 背面

Routine maintenance

HEPA clean

- Remove the dust cup and remove the HEPA.
- After the HEPA is completely dry, install the HEPA in its original place. Ensure that the HEPA is properly installed.

10

Packing List

- Main engine vacuum cleaner*1
- Main Engine Base*1
- Fitting Bracket*1
- Hose*1
- Power Cord*1
- Sponge Filter (gift)*1
- Limit comb*4
- User guide*1
- Needle comb*1
- Comb attachment*1
- Electric shear*1
- Cleaning brush*1
- Flat suction*1

Note: If you find something missing in the package, please give priority to getting help through the customer service of the purchase channel.

03

P3 正面

Instructions for use

prepare

Gently load in the direction indicated by the arrow, and remove in the opposite direction.

Connect the accessories to the main engine through a hose

Due to functional needs, pay attention to the edge of the attachment when using, beware of cuts.

04

Routine maintenance

Electric shear cleaning

- Install and disassemble the knife.
- Suction to remove impurities.

09

P3 背面

3. Dust cup placement

Install the dust cup in the direction of the arrow.

Note: Take care to handle the dust cup gently; if the dust cup is cleaned after dumping dust, remember to wait for the dust cup to dry before installing, in order to prevent electric shock or machine damage caused by motor water.

08

Instructions for use

Turn on the electric shear

Long press the power button for 3S to start the machine

Use equipment

- On-off button
- Shift key
- Turn on 1 light on low
- Turn on 2 light mid-range
- Turn on 3 light High grade

05

P4 正面

Use of accessories

- Needle comb: It cleans your pet's hair.
- Cleaning brush: It can be used to clean loose hair from human clothes and pets.
- Tooth comb: Thin pet hair to achieve beauty effect.
- Electric shear: Shave and inhale pet hair to keep it from flying.
- Limit comb: For pet hair styling, according to different hair needs. Get a different comb. (Selective use)

Note: Remember to pay attention to the cutting edge and sharp position, do not use excessive force to cause skin scratches. Pay attention: Please be careful where your pet has soft skin. Don't overdo it and cause skin cuts.

Pay attention: Limit comb small and scattered, do not use when please keep properly, to prevent loss.

06

Routine maintenance

Dust cup cleaning

- Remove the dust cup Gently lift off the dust cup in the direction of the arrow.
- Remove cover and pour out Push the blue clasp to open the dust cup and pour out the dander.

07

P4 背面