

Firmware Update Instructions


Step 1:

Remove the battery door and battery as shown. If your unit has a **Red Switch**, then move it to the RIGHT position for firmware update function.



Step 2:

Depending on the E3 version you have connect either a Mini-B USB cable (digital camera type cable) or Micro USB cable (android phone type cable) to the E3 controller end and connect the standard USB end to your laptop or PC as shown.

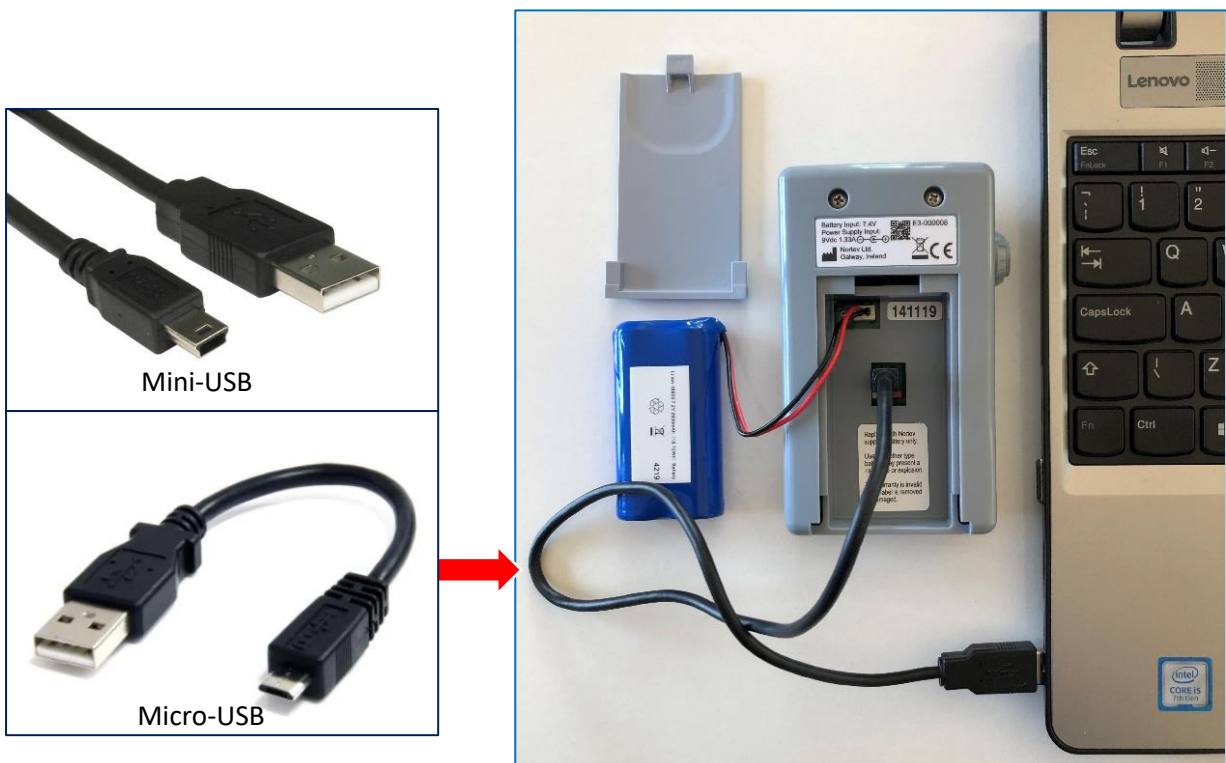

Firmware Update Instructions

Step 3:

Go to www.flexineb.com website, click on **Support** tab - **Firmware Update**

Or click this link <https://flexineb.com/pages/firmware-update>


Step 4:

Click on **Download (Windows)**.



Step 4:


An executable file will download to the bottom left corner of your PC.

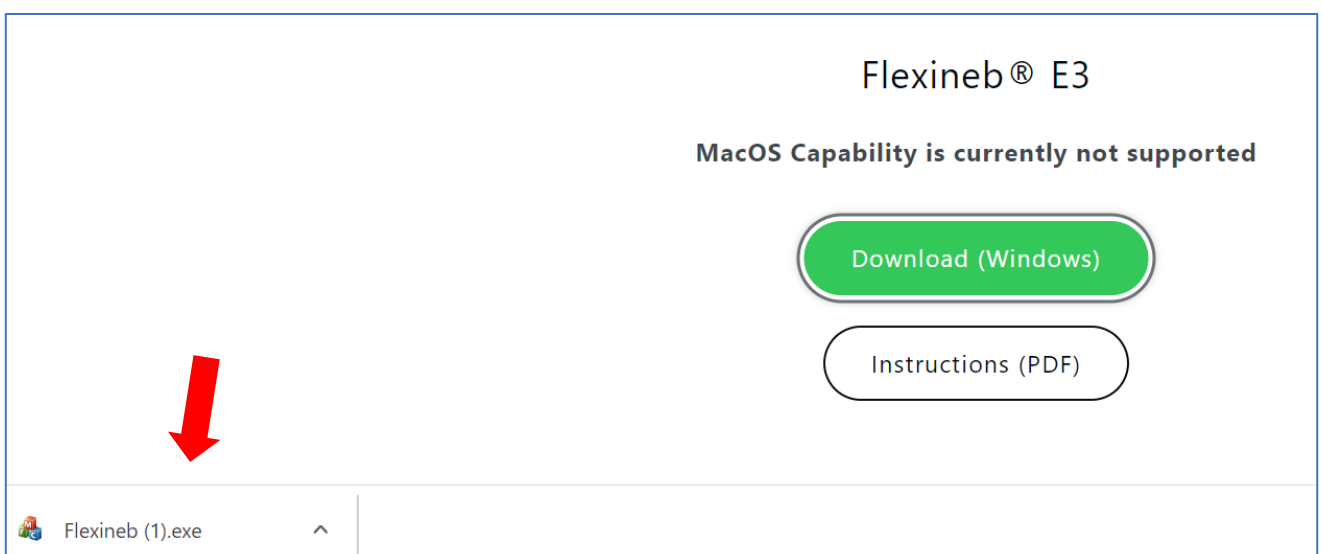


Firmware Update Instructions

Step 5:

Click on the **Λ** arrow and then **Open**.

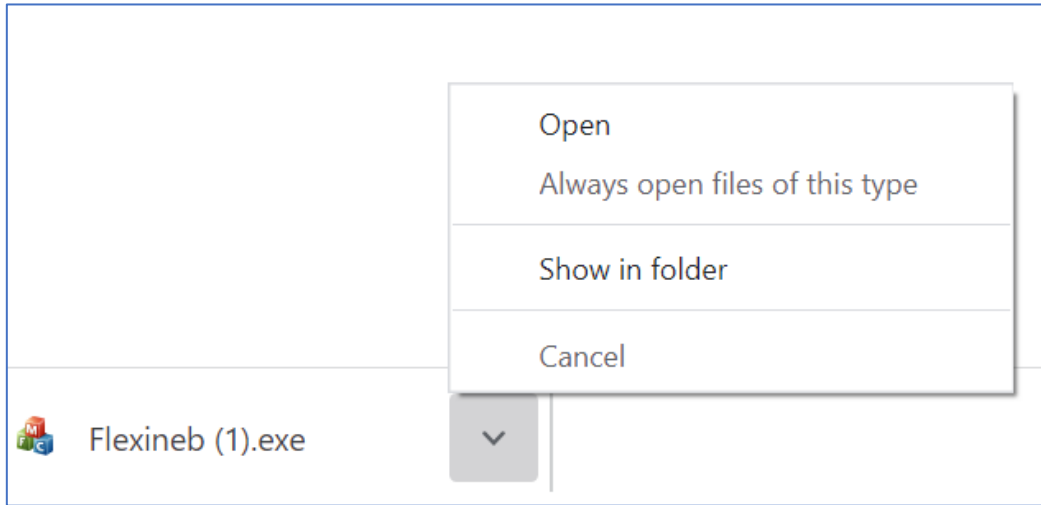

Step 6:

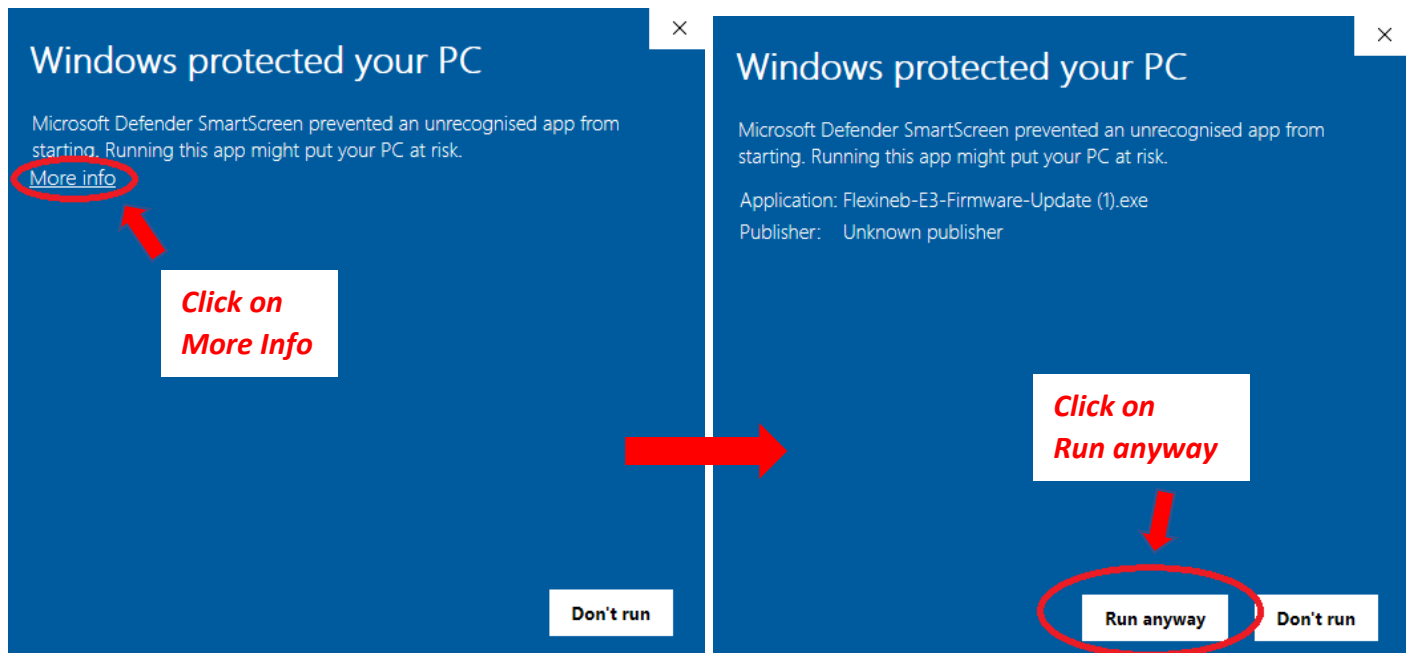


Firmware Update Instructions

Step 7:

The program will search for your E3 unit before proceeding to the **Update** function


Click on **Update**.

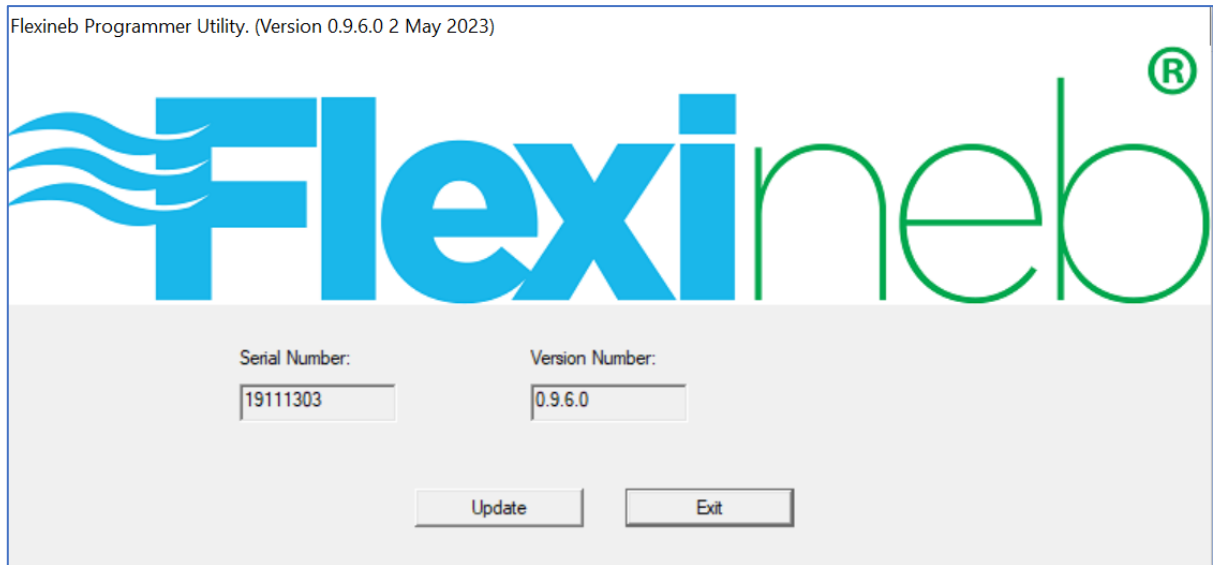

Step 8:

Device updated successfully message appears.

Click **OK** and then **Exit** to complete the update.

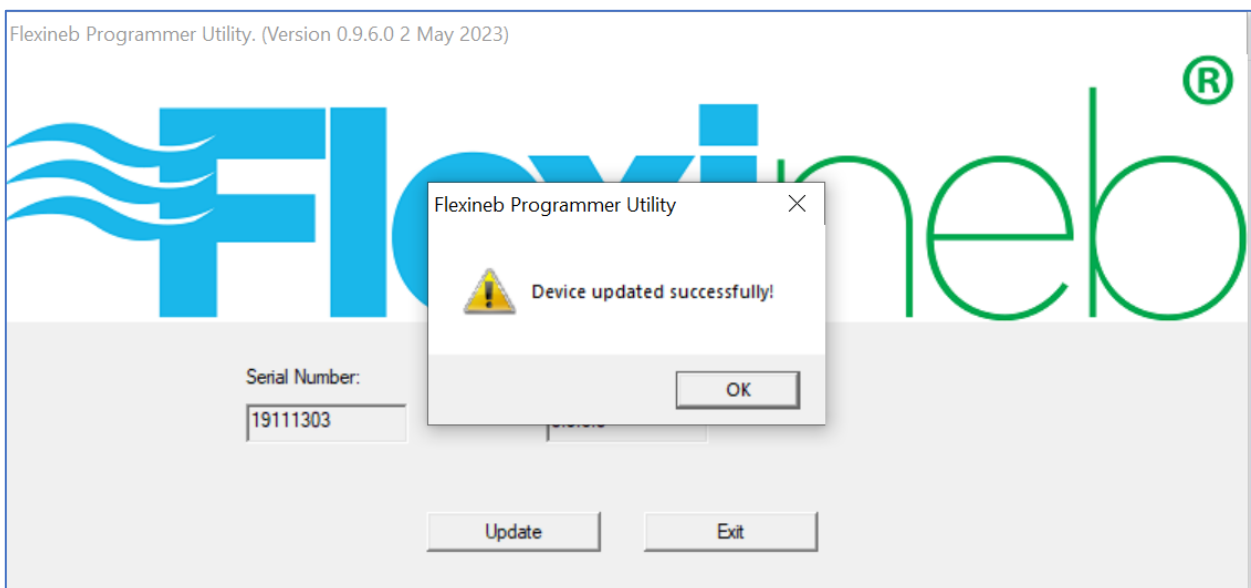


Firmware Update Instructions

Step 9:

Unplug the USB cable.

Move the **Red Switch** back to the LEFT position for normal function on units with this switch.

Re-fit the battery and add the battery door. All done.

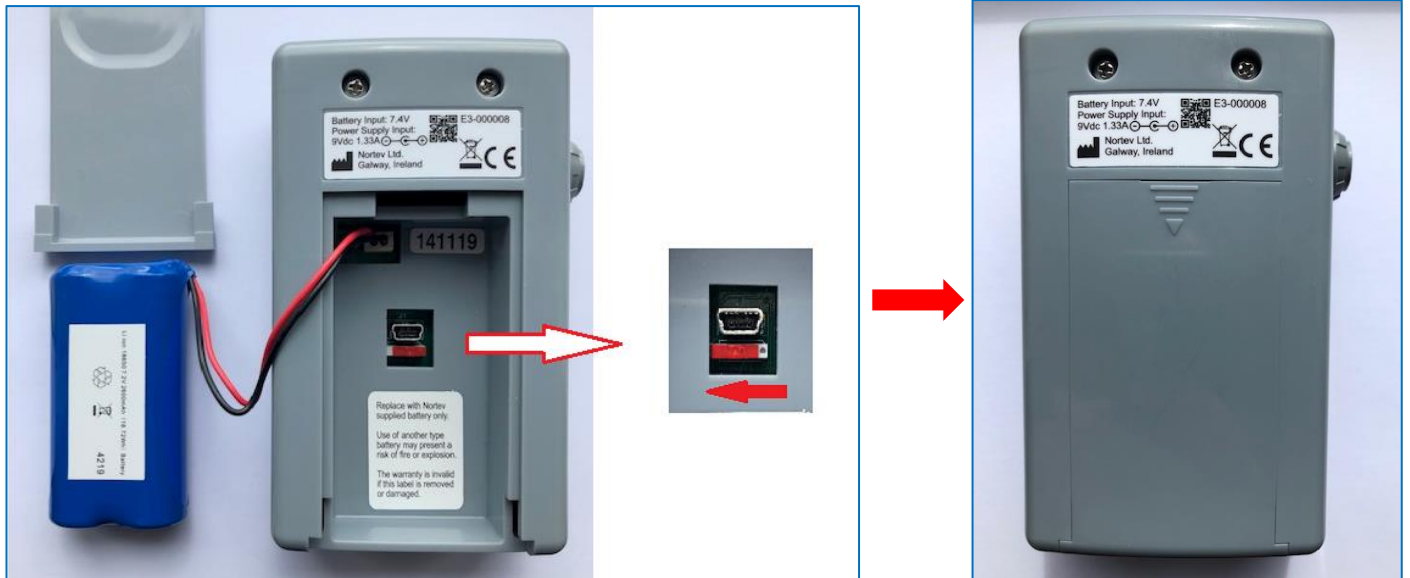

END