


PLEASE READ AND RETAIN THIS IMPORTANT INFORMATION FOR FUTURE USE.




## Piano Play Gym


### ASSEMBLY

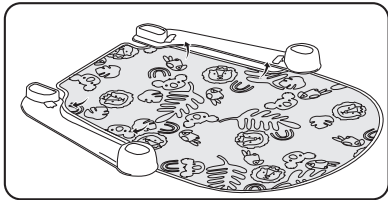


1. Place mat flat on a flat surface. Place plastic arms around mat and push the 4 grey tabs through the holes and flatten in a 'T' shape.

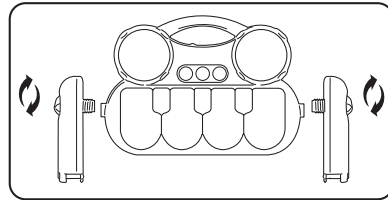


2. Attach vertical columns to each side of the piano and screw bolt in as shown above.

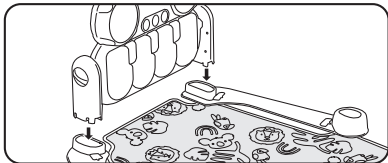


3. Insert the fitted piano body on both sides of the bracket as shown above.

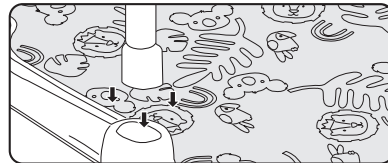

4. The two ends of the arch can be inserted into the corresponding port of the bracket.

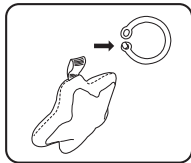


5. Rattles and fittings can be hung from the ring gap.

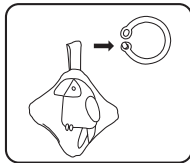

6. Hang the ring part of each rattle onto the buckle of the arch.


### DETACHABLE ROTATING PIANO

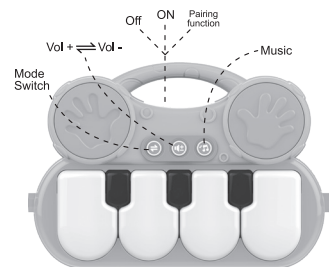

### BATTERY INSTALLATION

Open the battery cover with cross screwdriver. Requires 4 x 1.5V "AA" batteries (not included), close back the cover and screw it tight with the screwdriver.

Diagram 1

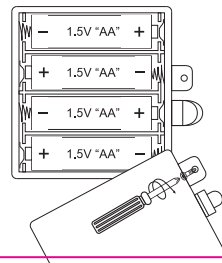

Our **Piano Play Gym** will introduce your little one to the wonderful world of music with the detachable piano. It's perfect for your little wriggler who wants to kick away and create music. The hanging toys are great for improving and strengthening motor skills, encouraging your baby to reach, hold and discover new shapes and sensory toys.

### WARNING!

Adult assembly before use. Always use this product with adult supervision. Never leave child unattended with this product. Inspect before use. Discard and replace at the first signs of weakness or damage. This product should not be used as a teether.

### REPLACING BATTERIES

The detachable musical piano part of the Play Gym takes 4 x AA batteries. To replace the batteries, unscrew the battery cover on the back of the unit. Insert 4 x AA batteries ensuring that the polarity is in the correct position (see **diagram 1**).

### BATTERIES NOT INCLUDED – TAKES 4 x AA 1.5V.

Do not mix old and new batteries or batteries of different types.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium, lithium-ion) batteries.  
Do not charge non-rechargeable batteries.  
Insert batteries in the correct polarity position as indicated inside the battery compartment.  
Never short circuit battery terminals.  
Use only batteries of the same or equivalent type as recommended.  
Remove batteries during long periods of non-use. Always remove exhausted batteries from product.  
Dispose of batteries safely and properly.  
Do not dispose of product in a fire. The batteries inside may explode or leak.  
Rechargeable batteries are to be removed before being charged.  
Rechargeable batteries are only to be charged under adult supervision.  
Do not submerge in water or other liquids.  
Batteries to be installed by an adult only.  
Low or flat batteries can cause deterioration in the sound quality of this product.  
Distorted or low sound quality can be restored by replacing the batteries.

### PACKAGING MATERIALS

Remove all packaging materials before use.

### WASHING INSTRUCTIONS

Piano & accessories - wipe clean only.  
Play Mat - machine wash 30°C. Do not bleach. Do not tumble dry. Dry flat. Do not iron. Do not dry clean.

### MATERIALS

Play Mat - 100% Polyester Fibre.



© 2022 Luv n' care. Nuby TM and Nuby logo licensed to Luv n' care by Admar International  
Product Design and all other TMs owned by or licensed to Luv n' care



DC PHARM Calle Filadofes, S/N - NAVE 3  
Olesa de Montserrat,  
08640 Barcelona, SPAIN



Form CWY\_UK: 30170

**Nuby UK LLP**  
13 Burford Way  
Boldon Business Park  
Boldon Colliery  
Newcastle upon Tyne  
NE35 9PZ  
Freephone number:  
0800 334 5844  
enquiries@nuby-uk.com  
www.nuby-uk.com  
www.nuby.com  
Made in China