


DOLLY EXPANDABLE FRAME A/V PRODUCTION HANDCART DOLLY

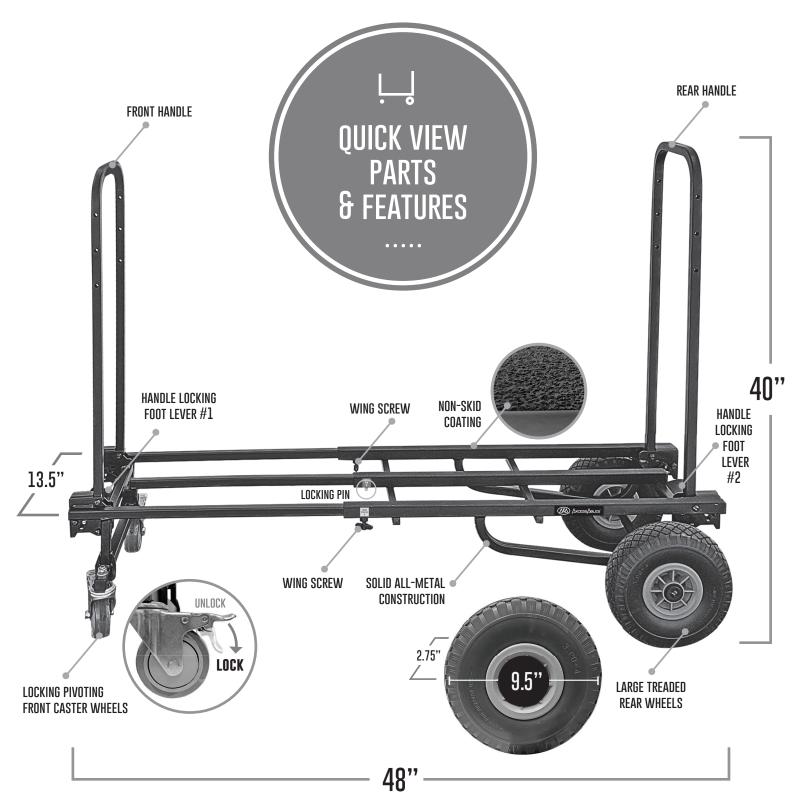

California Prop 65 Warning

THANK YOU FOR PURCHASING ANOTHER HIGH QUALITY AXCESSABLES PRODUCT.
PLEASE FOLLOW THESE PRODUCT INSTRUCTIONS AND SAFETY TIPS TO ENSURE YEARS
OF USE AND SAFE PRACTICES WHEN USING THIS PRODUCT.












- Simply raise the **Front Handle** first and check that it firmly locks into position.
- (2) Raise **Rear Handle** until it locks into position.

*Double check that both handles have securely locked into position before loading and moving the dolly.

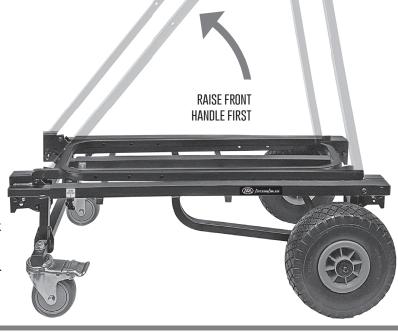

DOLLY PAYLOAD FRAME MUST BE IN FULLY RETRACTED POSITION IN ORDER TO START HANDLE


STEPS MUST BE FOLLOWED IN THIS SEQUENCE TO PROPERLY OPEN/RAISE AND CLOSE/FOLD


THE DOLLY HANDLES


FOLD DOWN PROCEDURE

(1) Step down on front **Foot Lever #2** and lower **Rear Handle** until it locks into its' closed position.

(2) Step down on rear Foot Lever #1 and lower Front Handle until it locks into its' closed position.

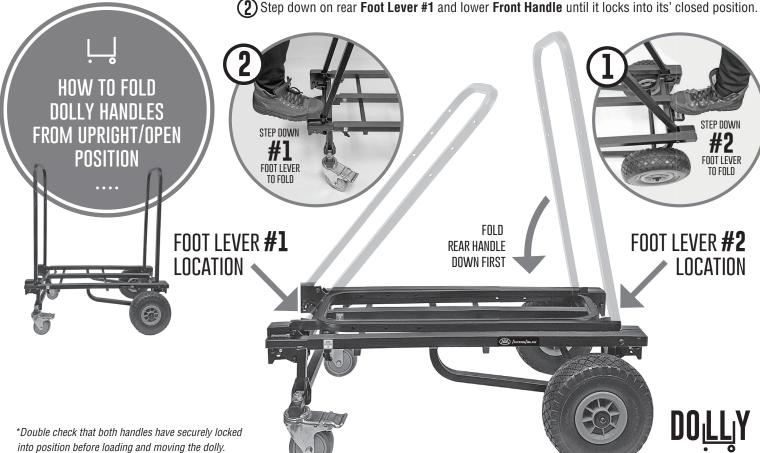

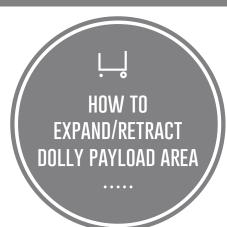

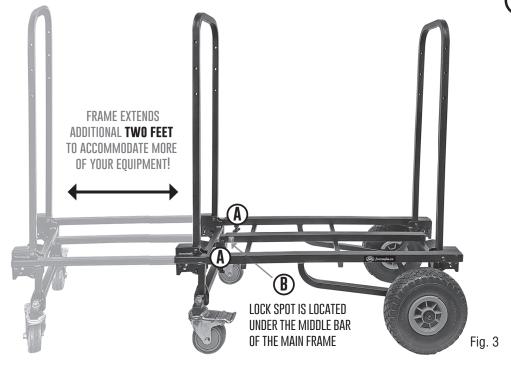



TO EXPAND DOLLY

- Loosen the two Wing Screws. (See Fig. 1)
- Pull out until the **Locking Pin** (B) firmly "clicks" into hole (see Fig. 2)
- Tighten Wing Screws.



- Loosen the two Wing Screws. (A) (see Fig. 1)
- Push IN the Locking Pin B and then pull the Front and Rear frames of the DOLLY together. (See Fig. 3)
- Tighten Wing Screws.

IMPORTANT

Be sure to tighten **Wing Screws** to keep payload area securely in place when DOLLY is in this smaller payload configuration.







SAFETY INSTRUCTIONS

- Always lock front caster wheels when not in motion, and during loading and unloading.
- Always make sure that the Locking Pin has clicked into place in its' locking hole before loading dolly with equipment.
- Always tighten Wing Screws after any adjustments to payload capacities.