Mini Stomp Chromatic Tuner


LUNAR TUNER

Manual

I T-1

© 2014 Aroma Music Co., Ltd.

Operation and Function

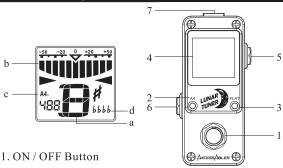

- 2. Pitch Button
- 3. Flat Button
- 4. Screen: a. Note Name b. Tuning Meter and Calibration
- c. Pitch d. Flats
- 5.Input
- 6.Output
- 7 9V DC Power In

Specification

Tuning Mode: Chromatic Pitch Range: 430-450Hz : 6.66.666.6666. Flat

Tuning Tolerance: ±0.5 cent

: DC 9V⊕ ⊕ ⊖ Power

Dimension · 93mm x 38mm x 31mm

Weight :123g

How to Use

- 1. Connect a DC 9V power into the pedal. Please pay much attention to the power polarity.
- 2. Link the input, and turn on the tuner by pressing on ON/OFF button.
- 3. If you want to change the pitch, then press A4 button. The pitch ranges from 430Hz to 450Hz.
- 4. If you wish to tune by note flat, press Flat button. Flats offer 4 steps: b, bb, bbb, bbb.
- 5. Play a single note from your guitar, the note name will appear in the tuner screen. The screen color will change, and the tuning needle will move.
- The center blue tuning meter appears, and 2 blue triangles appear: note in tune.
- The left red tuning meters appear, and the left blue triangle appears: flat note
- The right yellow tuning meters appear, and the right blue triangle appears: sharp note.
- 6. The tuner has bypass function. When tuning finished, press ON/OFF button, the original guitar signal will get through without any distortion.