



RAPID TENT Series

INSTRUCTION MANUAL

TAILGATER™ • SUMMERLIN™ • NOMAD™



NOMAD™ model shown

Material Specifications:

- 210 Denier Oxford Ripstop Nylon with PU3000mm Coating
- Fiberglass Poles
- Polyethylene Tarpaulin

Package Contents:

- Tent
- Carry Bag
- Fiberglass Poles (x2)
- 9 Stakes with 4 Guy Lines (TAILGATER™)
- 11 Stakes with 5 Guy Lines (SUMMERLIN™ and NOMAD™)

(A) Lanyard Eyebolt Handles

(B) X Bracket

(C) Exterior Stake Loop

(D) Interior Tent Loop

(E) No See-um Mesh

(F) Guy Lines

(G) Stakes

(H) Bathtub Tarp Floor*
*for SUMMERLIN™ and NOMAD™ Models Only

(I) Zippered Panels*
*for NOMAD™ Model Only

www.AxplorOutdoor.com

READ FIRST! IMPORTANT SAFETY TIPS AND INSTRUCTIONS



1. Keep away from heat, sparks, and flame. Do not use as a cooking tent or sweat lodge. Materials are flammable.
2. Avoid setting-up in moderate or heavy winds. May result in damage to the product or cause injuries.
3. For recreational use only, not as a permanent structure. Do not leave unattended in severe weather conditions.
4. Handle **No See-Um Mesh** with care. Mesh is delicate so avoid sharp objects and zippers against it or excessive pulling. Watch out for abrasive surfaces i.e. rocks, pavement.*
5. Do not force zippers or **X Brackets** if met with resistance. Check and reset position.
6. Shake off excess water and dirt before storing in the bag.
7. Clean with mild detergent.
8. Store in **Carry Case** when not in use.

*Do not drag or set up against abrasive surfaces. AxplorOutdoor will not be responsible for wear and tear for this type of handling.

RAPID TENT™ MODELS AND SPECIFICATIONS

Model	TAILGATER™	SUMMERLIN™	NOMAD™
Package Contents	TENT, TENT CARRY BAG, 9 STAKES WITH 4 GUY LINES IN BAG, 2 DOOR POLES IN BAG.	TENT, TENT CARRY BAG, 11 STAKES WITH 5 GUY LINES IN BAG, 2 DOOR POLES IN BAGS, TARP FLOOR	TENT, TENT CARRY BAG, 11 STAKES WITH 5 GUY LINES IN BAG, 2 DOOR POLES IN BAGS, TARP FLOOR
Tent Shape / Color	Pentagon / Desert Beige	Hexagon / Granite Grey	Hexagon / Granite Grey
Diagonal Dimensions (Ft)	8.5 x 8.5	11.8 x 11.8	11.8 x 11.8
Center Height / Entrance Height (Ft)	7.4 / 5.8	7.8 / 5.10	7.8 / 5.10
Interior (Sq Ft)	52	90	90
With Bathtub Tarp Floor	No	Yes	Yes
Zippered Wind Panels	No	No	Yes
Product Weight / Shipping Weight	21 Lbs / 24 Lbs	32 Lbs / 35 Lbs	37 Lbs / 40 Lbs
Shipping Package Dimensions	7.5" x 7.5" x 59"	8" x 8" x 71"	8" x 8" x 71"
Carry case dimensions	7" x 7" x 58"	7" x 7" x 72"	7" x 7" x 72"

ASSEMBLY INSTRUCTIONS

- 1 Remove products from the **Carry Case**.
- 2 Untie the tent in an open space. **DO NOT** remove **Fiberglass Poles** from the sockets.
- 3 Inspect the **X Brackets**. All **X Brackets** (covered in removable felt fabric pouch) should be facing the same direction.



TIP: 5 sided tent has 5 joints; 6 sided tent has 6.

- 4 **SETTING UP STRUCTURAL WALLS**
Locate **Lanyard Eyebolt Handle**
(opposite side of the **X Bracket**.)


Step back as you pull on the **Lanyard Eyebolt Handle** until the attached **X Bracket** pops inward and becomes an interior wall. Repeat until all walls are opened.

Lanyard Eyebolt Handle



Tip 1: Allow plenty of room when setting up tent walls as they expand quickly like umbrellas. Point all parts, **X Brackets** away from animals, children and bystanders to avoid injury.

Tip 2: (NOMAD™ Model): Tent is packed with the curtains zippered down. Reach inside the grommet to locate the **Lanyard Eyebolt Handle**.

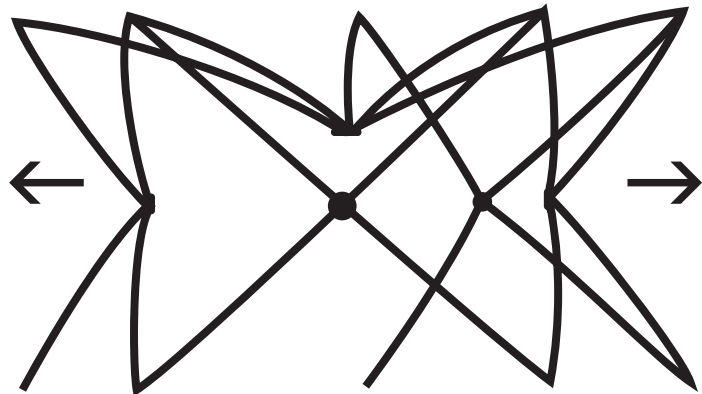

- 5 **LOCATE THE ENTRANCE**


Check the roof line for **AxplorOutdoor Logo** which is imprinted on the top right corner of the entrance. Once all walls are erected, adjust the tent to face a desired direction. Unzip the mesh door to enter the tent.





ASSEMBLY INSTRUCTIONS CONTINUED

6 SETTING UP THE ROOF

From the inside push up the center X Bracket to erect the roofline.

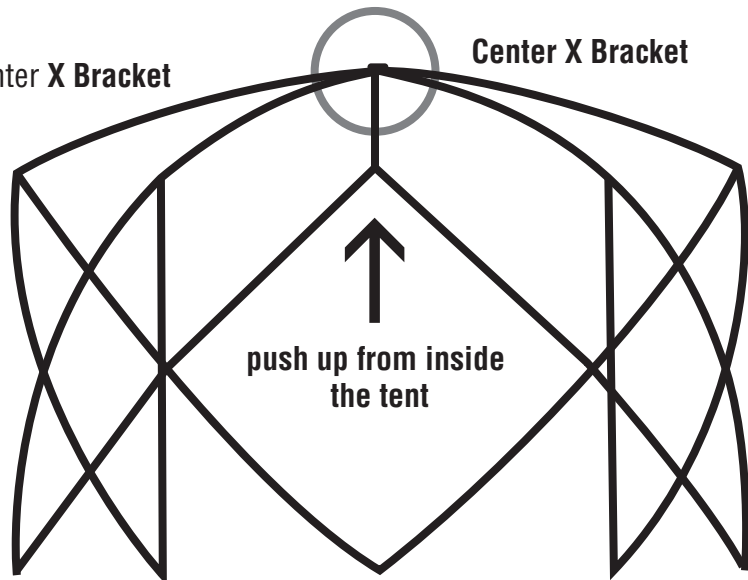




7 **Visual Inspection** - From inside the tent, visually inspect the X Brackets making sure all the Fiberglass Poles have expanded fully (a.) and not out the sockets (b.). Reposition the tent to ensure shape retention and equal weight distribution.

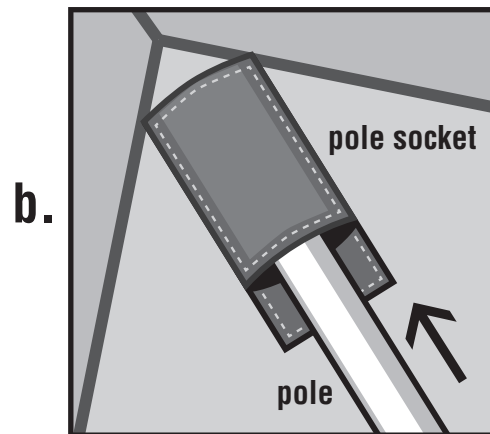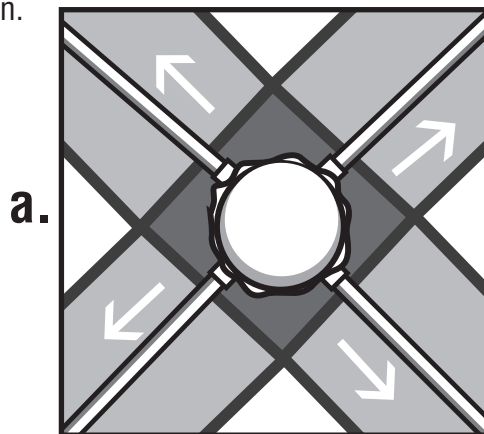

8 SECURING THE ENTRANCE DOOR FRAME



a. Unpack the two Fiberglass Poles from their carry case.

b. Insert the Fiberglass Poles into the top and bottom sockets in the interior frame.

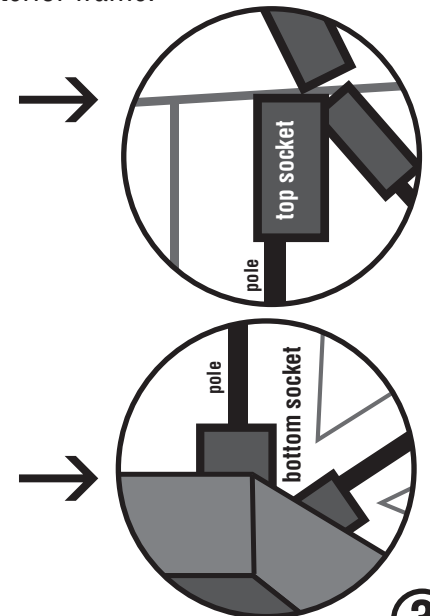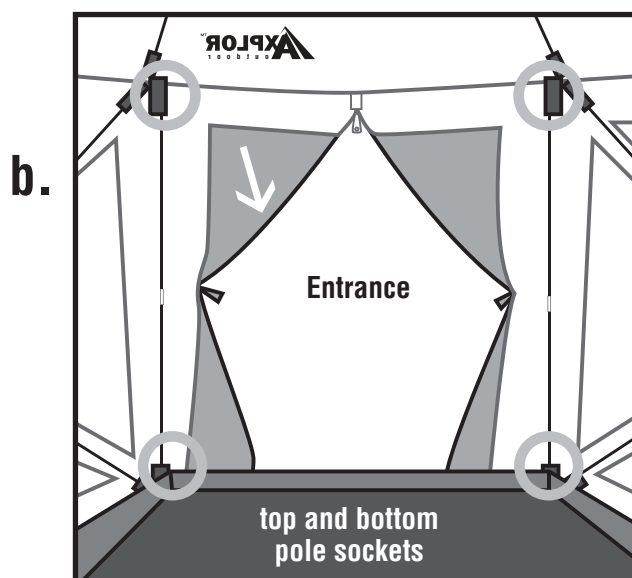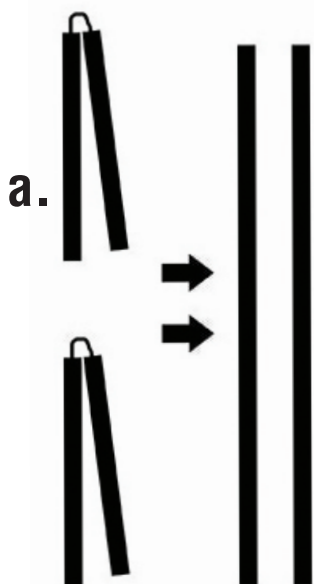


ASSEMBLY INSTRUCTIONS CONTINUED




- 9 STAKING DOWN THE TENT (RECOMMENDED)***
Stake Loops are located at the base of each corner.
Stake down each corner of the tent for added security.
*Zip close entrance before staking down tent.

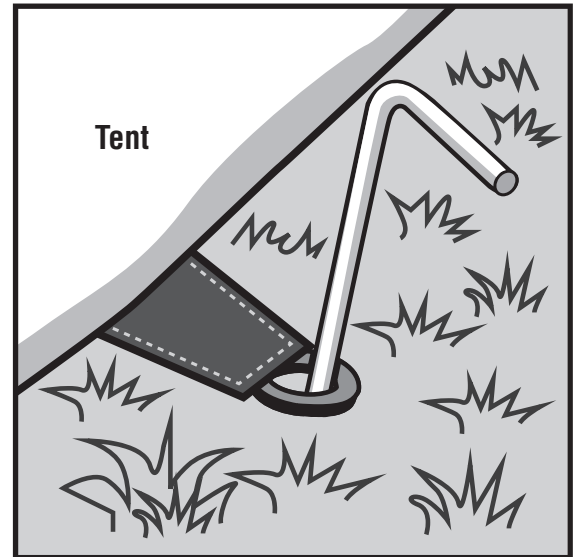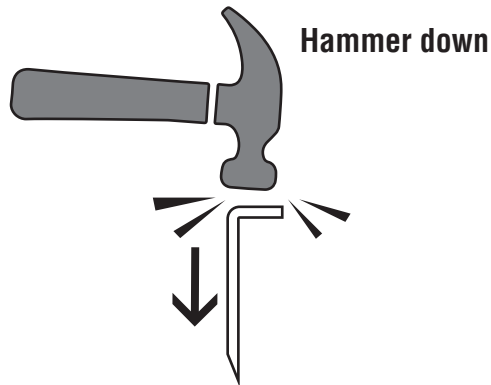

- 10 GUY LINES (OPTIONAL)**
For additional stability use **Guy Lines**. Tie one side to **Lanyard Eyebolt Handle**, and **Stake** down the other side.

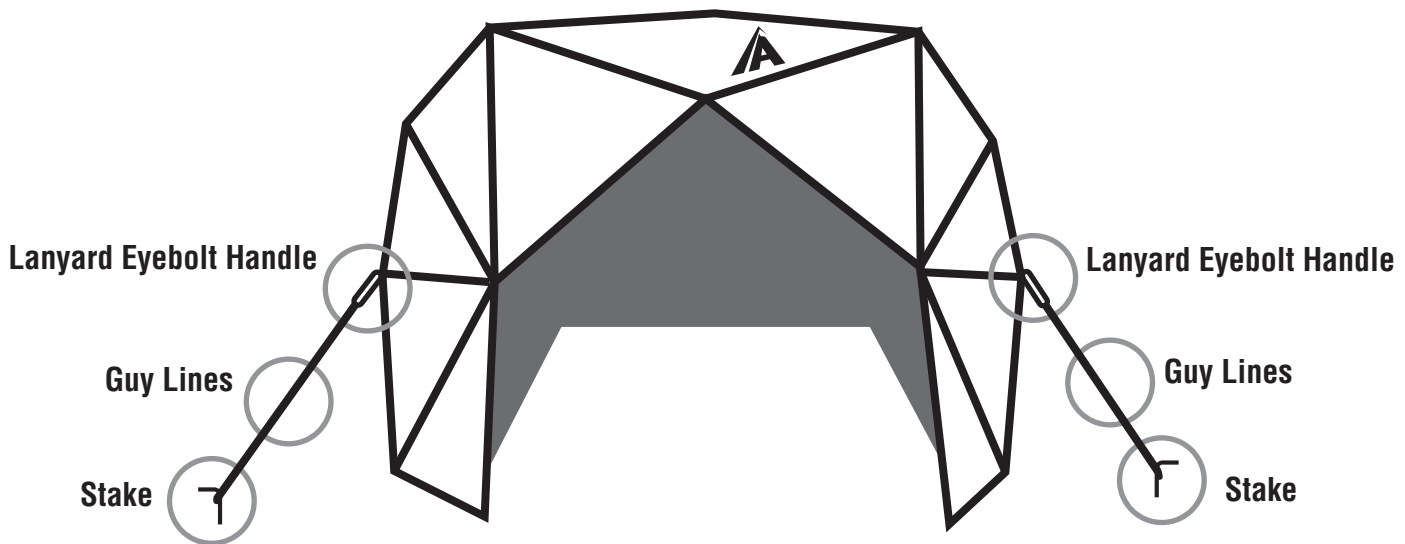

- 11 ATTACH THE FLOOR (SUMMERLIN™ / NOMAD™ MODELS ONLY)**
a. Unfold the **Bathtub Style Tarp Floor**, **Barrel Toggles** and **Floor Hooks** should be facing outward.
b. Attach **Barrel Toggle** to **Corner Tent Loop**.
c. From the outside pull **Floor Hook** under the **Tent** and hook it to the **Stake**.

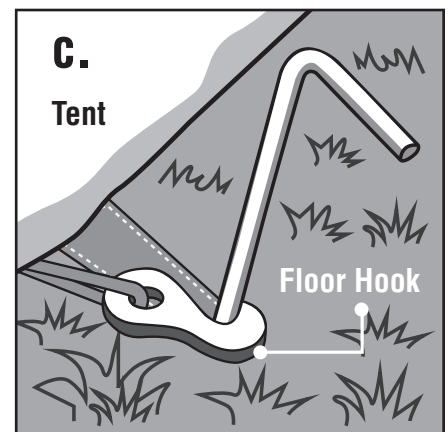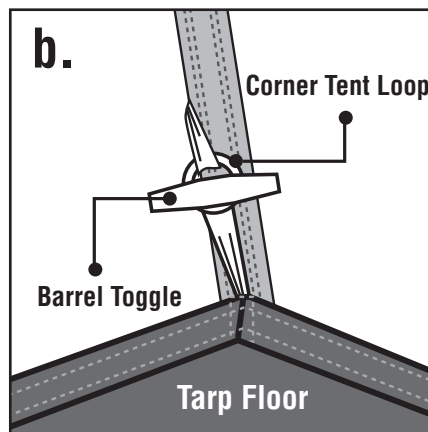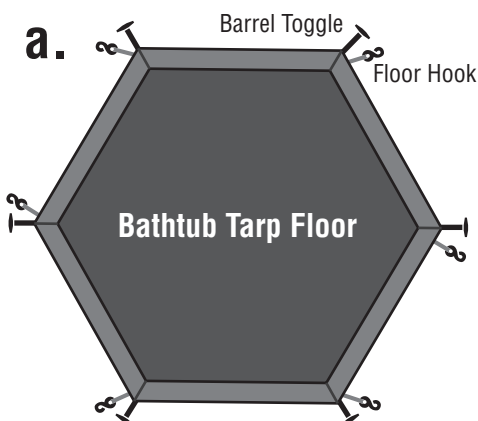




ASSEMBLY INSTRUCTIONS CONTINUED

12 ENTRANCE AND WALL ZIPPER PANELS (NOMAD™ Model only)

a. Roll up and keep it up.

b. Zippers on both sides.

c. Hide the zipper with velcro attachment.

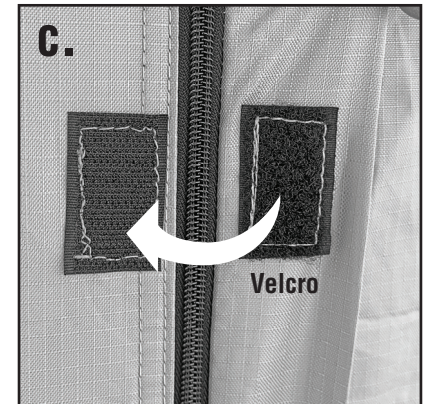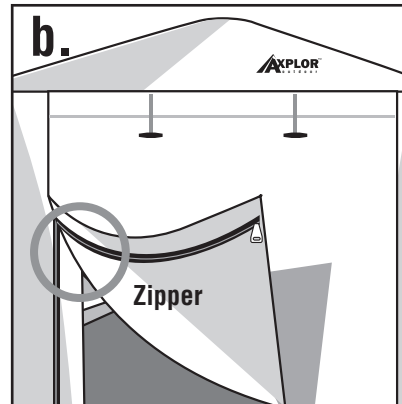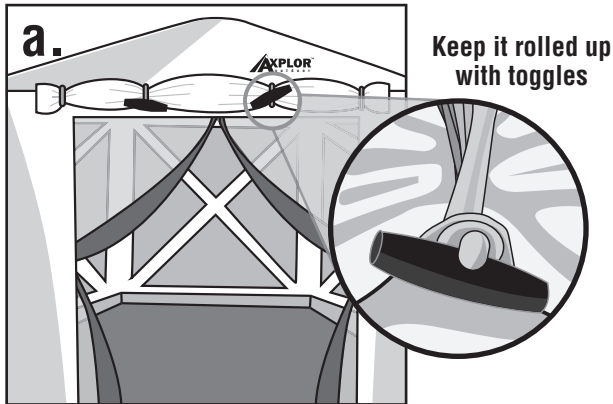

DISASSEMBLY INSTRUCTIONS

- 1 Remove all items from inside the **Tent** and shake off any debris and water from the roof . Remove **Stakes** and **Guy Lines** from the ground.
- 2 Zip down wind panels and pack away **Bathtub Tarp Floor**. (**SUMMERLIN™** and **NOMAD™** Models)
- 3 **REMOVE TWO Fiberglass Poles** from the interior right / left door frame. Refold and return to its carry bag.
- 4 **DO NOT REMOVE ANY OTHER POLES** from the sockets as you pack down the tent.
- 5 From the inside, pull down the roof top **X Bracket** slowly to lower the roof line.
- 6 From the outside, push in **X Bracket** one wall at a time.
- 7 Fold down the **Tent** with all **X Brackets** facing the same direction.
- 8 Return **Tent** and accessories to the **Carry Case**.

WARRANTY

Warranty covers manufacturer defects for products purchased through an authorized Dealer or directly from us. This warranty does not cover tent or screen tears, ripped grommets, or broken poles due to high wind, severe weather, unattended or misuse of the product. If deemed defective, the part(s) will be replaced or repaired at our discretion. Products have a one-year warranty against manufacture defects from the original date of purchase.

LIMITATION OF LIABILITY

It is expressly understood that Liability for AxplorOutdoor products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product as stated above. AxplorOutdoor is not liable for any injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to materials arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of AxplorOutdoor Products.

California Proposition 65 Warning

Warning: This product contains chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.