



RK SERIES

UNIVERSAL EQUIPMENT RK SERIES
ROLLING CABINET A/V RACKS

Assembly is **EASY** and offers wide-ranging configurations for your **A/V** equipment.

Scan QR Codes for product details, videos and website.

RK-8U




RK-12U



RK-16U



RK-22U

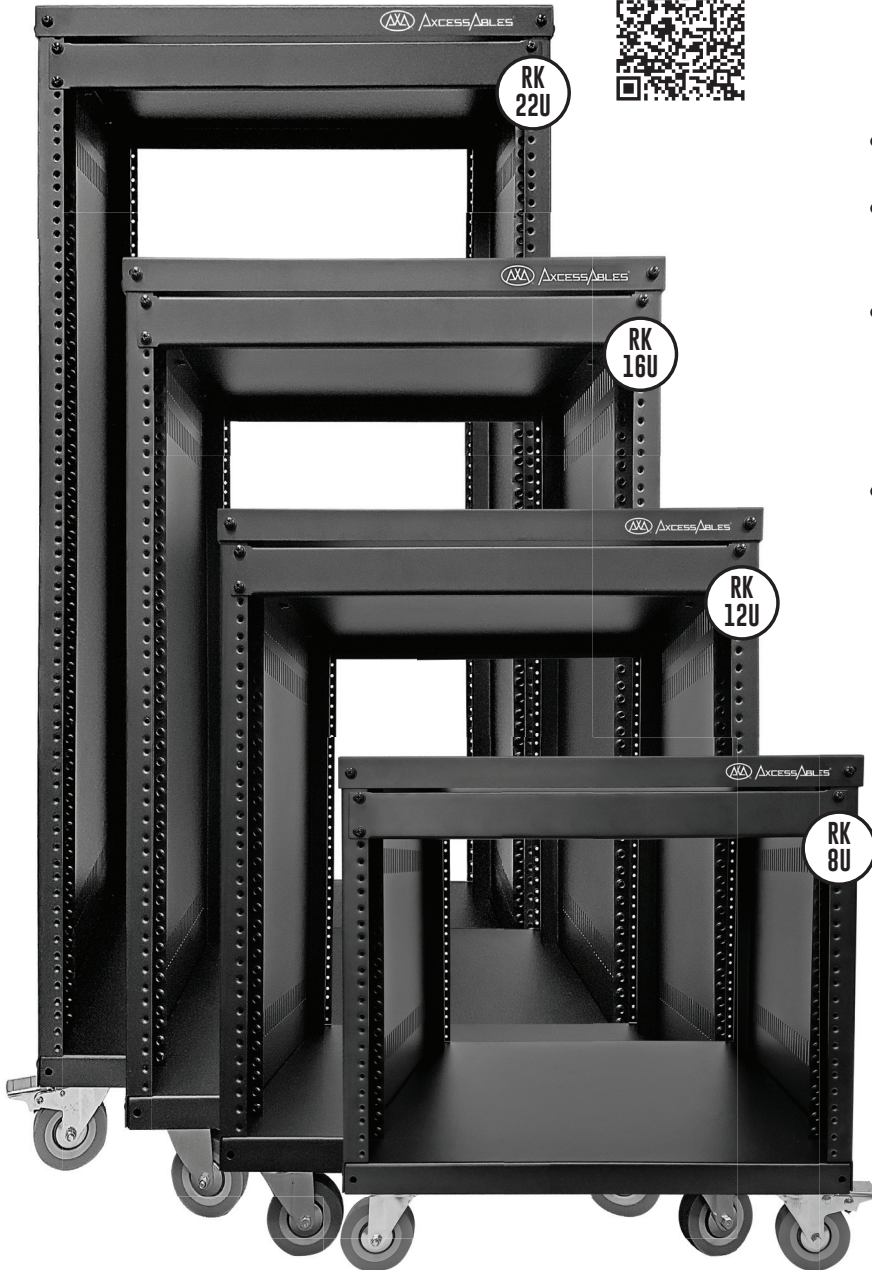

- **WHEELS COME ALREADY INSTALLED FOR** convenience.
- Unpack all pieces. **CAREFULLY DISCARD ALL PLASTIC BAGS AWAY FROM CHILDREN AND PETS.**
- Depending on where you live, there are two options for rack mounting screws (**5mm North America** and **6mm Europe**). The **5mm** side is marked by the **two slots** on each of the **CORNER PILLARS**.
- Assemble the four **CORNER PILLARS** to the base first. (*Use the included screwdriver*)

PLEASE PAY ATTENTION TO THESE DETAILS FOR A STRAIGHTFORWARD INSTALLATION.

- **CORNER PILLARS** can be installed **4 WAYS**:
 1. *ALL (5mm) Holes facing out*
 2. *ALL (6mm) Holes facing out*
 3. *(6mm) Holes on the front and (5mm) Holes in the back* **OR**
 4. *(5mm) Holes on the front and (6mm) Holes in the back*
- Remove all top screws from installed **CORNER PILLARS**.
- Insert **SIDE PANELS** and tighten bottom screws in place.
- Install **TOP PLATE** and tighten all remaining screws.




AccessAbles **RK Series** Cabinets include a complimentary AccessAbles **RKBLNK1U** Universal 1U Blank Rack Panel Spacer.

IMPORTANT NOTES:

1. **CORNER PILLARS** HAVE TWO DIFFERENT SIZED THREADED HOLES ON EACH SIDE.
2. MAKE SURE TO USE CORRESPONDING HOLE SIZE WITH CORRECT THREADED SCREW SIZE.
3. **CORNER PILLARS** CAN BE INSTALLED USING ALL 6MM SIDE, ALL 5MM SIDE OR BOTH.
4. **CORNER PILLARS** SHOULD BE INSTALLED IN UNISON.

PARTS INVENTORY

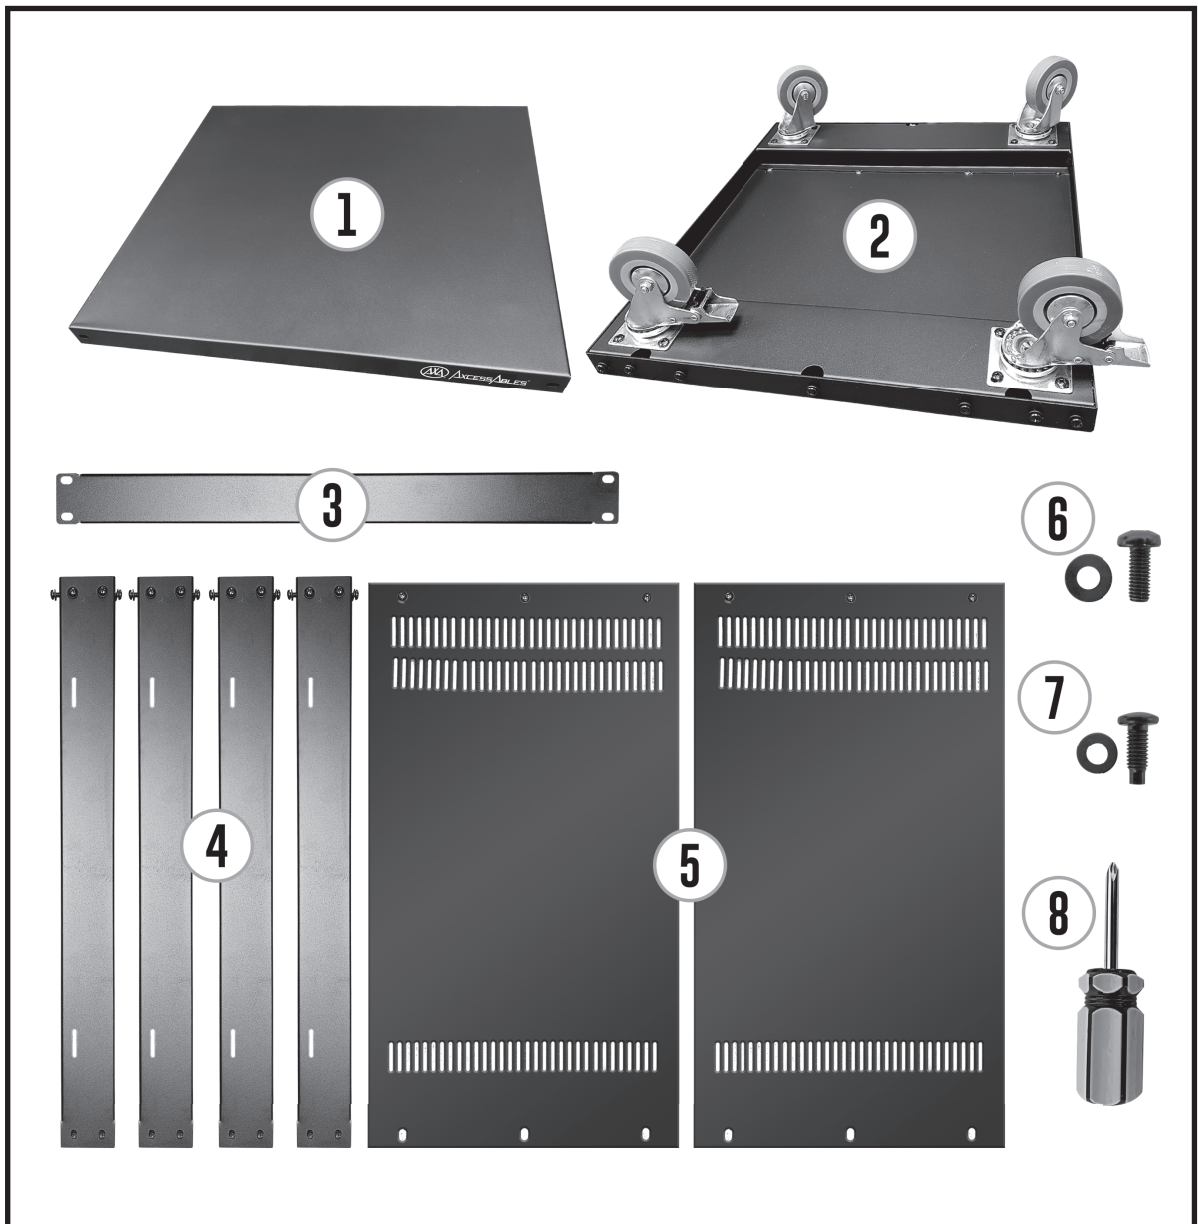

#	PARTS DESCRIPTION	PCS
1	TOP PLATE	1
2	WHEEL BASE	2
3	1U RACK PANEL SPACER	1
4	CORNER PILLARS	4
5	SIDE PANELS	2
6	5MM SCREW WITH WASHERS	48 (RK22U) 28 (RK12U) 36 (RK16U) 20 (RK8U)
7	6MM SCREW WITH WASHERS	48 (RK22U) 28 (RK12U) 36 (RK16U) 20 (RK8U)
8	PHILLIPS SCREWDRIVER	1

