

iZEEKER

Dash Camera **User Manual**

GD850

EN

Contents

Foreword	01
Important Safety Instructions	02
Product Description	03
Package Contents	03
Camera Overview	04
Preparation and Installation	05
Format	05
SD Card Insertion	06
Product Installation	07
Operation Instructions	10
Camera Power On and Off	10
Mode Operation Instructions	11
Video Playback and Deletion	12
Important Functions Introduction	13
Wi-Fi and App Operation Instructions	14
GPS Software Installation and Use	16
Component Description	17
Q&A	18
Warranty	19

Foreword

Dear Sir or Madam,

We truly appreciate your order and are grateful for the trust you have placed in our product.

We are one team with a common purpose. Our philosophy has always centered on the belief that everybody deserves a partner who helps him or her capture, recreate and protect every key moment. This has been the goal of our company since its inception.

Thus, we excellence in the design of our premium camera products a core practice in everything we do - from the way we solicit input and interact with customers to the products and services we offer. You have our assurance that we are committed to ensuring that customer recognition is central to everything we do and is a belief we stand by in our interactions with you. We remain at your disposal for any questions.

Our success lies in our prompt, professional and personal attention we give. We are open to any suggestions that would improve our business. We dream of reinterpreting the norms of online sales through our efforts and your recognition.

Your continued patronage and suggestions are a vital part of our growth. And for that, we are most grateful. Thanks again, we couldn't have pulled this off without you. We look forward to serving you for many years to come.

Very truly yours,

A handwritten signature in a cursive script that reads "Ocean Law".

Senior Design Director


Important Safety Instructions

Please:


- Do not disassemble the camera, as this may cause damage to the internal components.
- Do not install the camera where it will block the driver's view of the road or the deployment of the airbag.
- Do not expose the camera to strong sunlight or high temperatures, which may cause damage to the housing and internal components.
- Use only lens cleaner or professional tools to clean the lens.
- Make sure that the camera is turned off before inserting or removing the memory card in order to avoid damage to the memory card and data files.
- Keep your attention on the road while driving. Do not operate the controls of this product while driving.
- Remove the camera from your vehicle when it is not in use for any extended period.

Product Description


Package contents

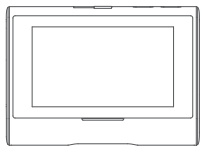

①

 


②

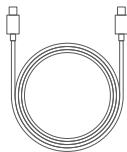


③




④

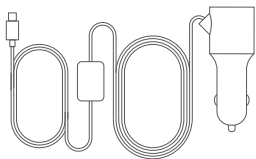

⑤

 

⑥

 

⑦



⑧



⑨

① Front Camera

② Rear Camera

③ Rear Camera with 6m Cable

④ Windshield Protective Film

⑤ Car Charger with GPS Module and 3.5m Cable


⑥ Type-C USB Cable

⑦ Suction Cup

⑧ 3M Sticker

⑨ Crowbar

Camera Overview

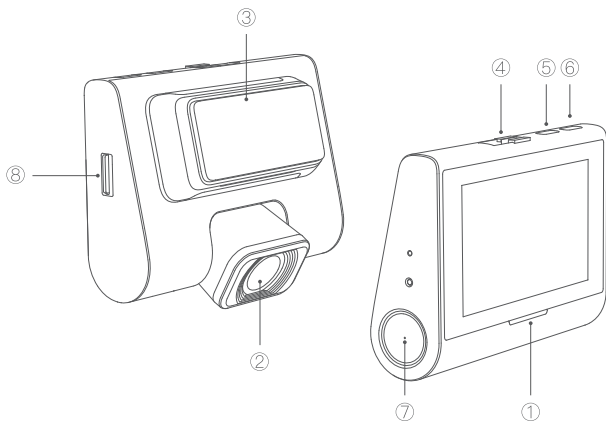

① Indicator Light

② Front Lens

③ 3M Sticker

④ Suction Cup Slot

⑤ Type-C port for Car Charger

⑥ Spare Type-C Port

⑦ Power

⑧ TF Card Slot

Operation Instructions

Format

• Format SD card on PC:

1. Please connect the SD card to the computer by a card reader, or your computer has MicroSD card slot.
2. Please click “FAT32” to finish the format on PC.

Note: When using the Micro SD Card, please format it to the FAT32 file system on the PC before use. If you are not sure how to format the card. Kindly search “How to format Micro SD card on PC” online.


• Format SD card on camera:

1. Click system settings
2. Find the format option
3. Click “OK”

SD Card Insertion

In order to better match with GD850 4K dash cam and show 4K video, 128GB, U3 MicroSD card is recommended.

1. Insert the MicroSD card into the memory card slot located at the right-hand side of the screen. The MicroSD card should be towards the display side of the camera, with the notches of the MicroSD card facing up. When the memory card is successfully inserted, a "click" can be heard and felt.
2. To remove the MicroSD card, gently push the top edge inward until it a further "click" occurs. The card will then pop up so that it can be easily removed.

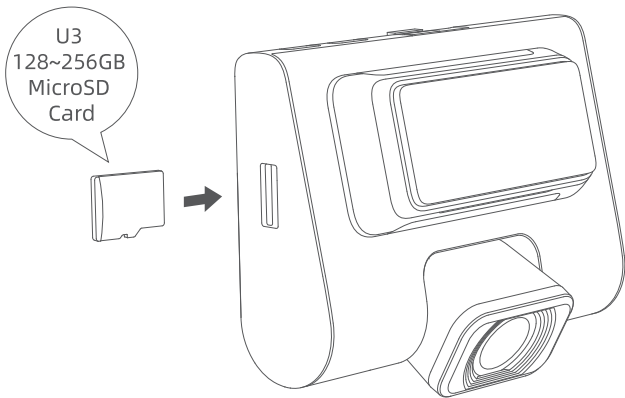


Product Installation

Clean the windshield using water or a cleaning solution and wipe it clean with a lint-free cloth. Remove the label side of the windshield protective film and attach the sticky side of the protective film to the windshield.


Use Suction Cup to Install

Connect the camera with Suction Cup as below picture shows, and check it if stable.

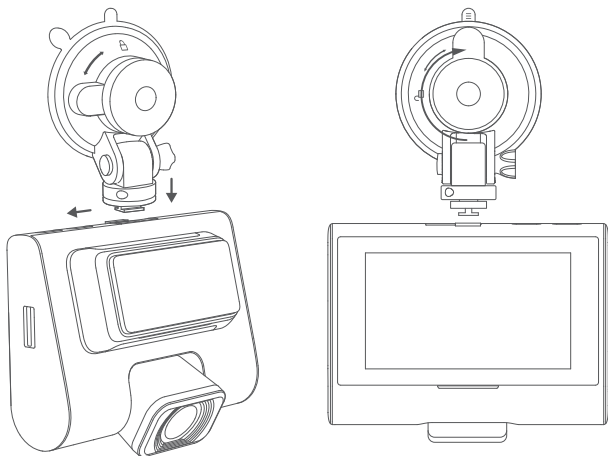


Use 3M Sticker are to Install

Remove the sticker protecting the 3M adhesive and attach the 3M adhesive to the curved area of the windshield protective film. Hold the dash cam in place for a few seconds to ensure stability.

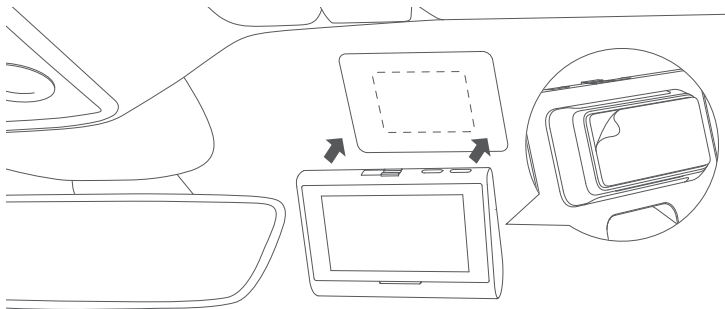


The installation steps as below:

1. Turn on the car engine.
2. Connect the camera to the car charger. Carefully route the power cable around the windshield and tuck the wire under the trim. When this process is complete, insert the Car Charger into the vehicle's cigarette lighter/charging port.
3. Power up the camera by starting the vehicle. The camera will automatically switch on upon receiving power from the port.

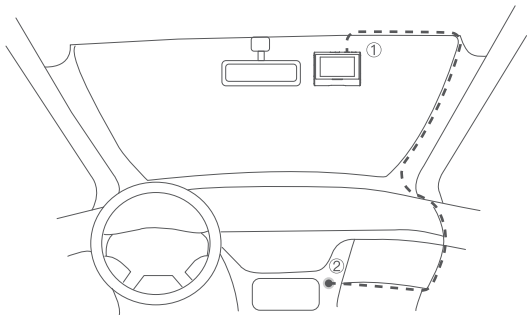

Install the rear camera facing in the correct direction.

In order to avoid damage to the dash cam, professional installation is recommended.

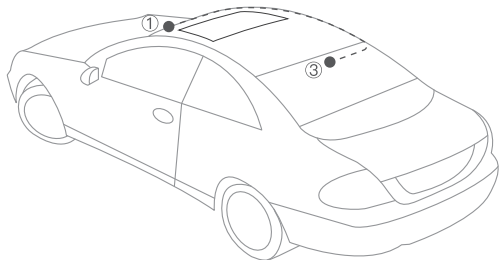

Operation Instructions

Camera power on and off

Power On


When connected to a car charger in a car that is switched on, the device will automatically power on and start recording.

Note: When the camera is in use, it is both forbidden and dangerous to remove and insert the rear camera plug, GPS antenna, MicroSD card; these actions are distracting for drivers and may cause the recorded video files or the camera to be damaged.

Power Off

1. When the car's engine is turned off, the device will automatically turn off after a few seconds.
2. You can manually turn it off by pressing and holding the power button for at least 3 seconds. The SD card should not be ejected immediately to prevent damaging to the last recorded file.
3. To switch the device back on, press the power button.

Mode Operation Instructions

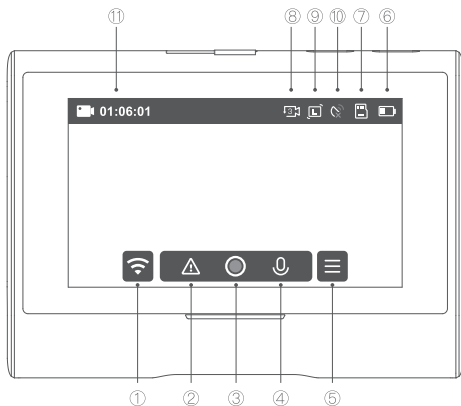

- | | | |
|------------------------|------------------|------------------|
| ① Wi-Fi | ⑤ Menu | ⑨ G-Sensor |
| ② Emergency Recording | ⑥ Power | ⑩ GPS |
| ③ Start/Stop Recording | ⑦ MicroSD card | ⑪ Recording Time |
| ④ Audio | ⑧ Loop Recording | |

Note: The above image is for illustration and shows all functions active. Only the currently selected functions will be displayed in normal use.

Press the audio icon to turn on/turn off the audio.

Video Playback and Deletion



1. Playback on camera

Stop the recording and enter the menu to select Playback. Choose Emergency Recording/Normal Recording to watch playback videos.

2. Playback on PC

Use the original USB cable to connect to your camera and PC or use a card reader to read MicroSD card data on PC.

3. Delete a video

After enter the playback screen, select the menu in the lower right corner, choose delete current. If you want to delete a locked video, unlock it before deleting it.

Important Functions Introduction

Loop Recording

Where there is insufficient space on the memory card, loop recording automatically overwrites the oldest non-protected file on the memory card, replacing it with a new recording.

Parking Mode

Please turn off this function while driving. With this function on, the device will automatically record whenever it detects car vibration. Use of the Parking Guard for long time periods will require a hardwired connection for the dash cam, in order to connect it to the ACC and GND of the fuse box safely and to provide the camera with continuous power as required. Kits for this can be purchased separately.

Motion Detection

When the camera has been turned on, it will automatically start recording when it detects any motion within 3 meters from the car.

G-Sensor



When the G-sensor detects a collision, the footage currently being recorded is automatically locked to avoid being overwritten by loop recording.

Screen Saver

While recording, the screen goes dark when there is no operation after a while, though recording continues. The dash cam is working if the white indicator light is on.





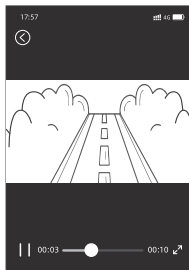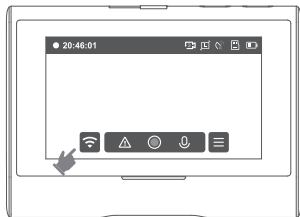







Wi-Fi and App Operation Instructions

Connect Wi-Fi



1. Click the Wi-Fi icon.
2. Connect Wi-Fi on your phone.
3. Choose the file to playback on the Lucky Cam. (OK Cam/Kacam also available)

App Operation Instructions

Click		to exchange the preview interface of front cam and rear cam
Click		to take a photo
Click		to turn on the audio function
Click		to set the video resolution
Click		to stop or begin recording
Click		to set photo resolution
Click		to check the files
Click		to check videos
Click		to check photos
Click		to download the files
Click		to delete the files
Click		to choose a setting



GPS Software Installation and Function


1. How to use GPS function

After the GPS is connected to the car charger, the camera will automatically search for signals in open areas and automatically record information (vehicle speed, latitude and longitude)

2. How to check GPS information on the computer

To check the GPS information, the required GPS player must first be installed. For more details, please contact support@izeeker.co .

1. Install the customized video player on your computer.
2. Click File—Open to choose the file to play, opening the play mode directly, as shown below.

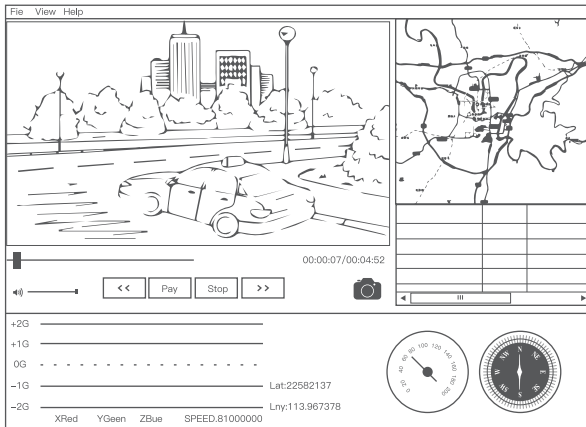

Components Description

Components	Description
Power Button	Press to turn on device. Press and hold to turn off device.
Reset (R')	Press to reboot
Type-C USB Port	Connects dash cam to the car for charging while driving. Connects to a PC (via USB cable) for data transfer.
Indicator Light	Red: Charging battery, not recording Flashing white: Recording
Lens	170-Degree Ultra-Wide Angle
Screen	3.0" IPS Touch Screen
Aperture	F=1.8
Video Code-c	H.264/H.265, MP4
Video Resolution	Single Cam: 4K/2K/1080P 60P/1080P 30P/720P Dual Cam: 4K+1080P/2K+1080P/1080P+1080P
Photo Format	JPG
Power Interface	5V 2.5A
Battery	240mAh Built-in Li-ion Battery
Working Temperature	14°F-140°F

Q&A

Q: What hardwire kit should I use?

A: Camera hardwire kit has to be a Type-C port and requires a minimum of 2A or more of current.

Q: How can I use parking mode?

A: First go to the menu and turn on this function. After turning on this function, the device will automatically record 30 seconds when it detects car vibration while the car is parked.

Please turn off this function while driving. With this function on, the device will automatically record whenever it detects car vibration. Use of the Parking Guard for long period of time will require a hardwired connection for the dash cam, in order to connect it to the ACC and GND of the fuse box safely and to provide the ongoing power required. Type-C port kits for this can be purchased separately.

Q: The camera automatically shuts down after one-minute at recording, what should I do?

A: It may be due to the screensaver function, the flashing white light means the camera is recording. You can turn this function off on the menu.

Q: My battery is always dead and low battery is always displayed. How to solve this problem?

A: The dash cam needs to be plugged into the car charger all the time. The built-in battery can only sustain a few seconds. Unplugging the car charger will automatically turn off in about 5 seconds, the purpose is to protect the last video, and also to protect the battery. Ruining battery completely empty frequently will affect battery life. If the camera works when plugged into the car charger, then the dash cam has no problem.

If you unplug the charger, and the camera turns off, please manually turn on the camera, it will stay on for a few minutes if it's fully charged.

Note: If your camera looks used or the front/back screen can not turn on, please contact us for help, and we will solve that quickly and professionally.

Warranty

Thank you for purchasing the 4K Dual Dash Cam Wi-Fi & GPS;
This product carries a one-year warranty from purchase date.

Please feel free to let us know and we will assist you promptly and professionally. if you have any problems with the product.

Please see the quick guide and box for our contact details.

support@izeeker.co