


# Action Camera Quick Start Guide

iA100

EN

# IZEEKER
 
## Package List



A1  
Short  
Thumbscrew



A2  
Long  
Thumbscrew



B1  
Extension  
Arm



B2  
Short Vertical  
Extension Arm



B3  
Long Vertical  
Extension Arm



C1  
J-hook  
Buckle



 
C2  
Water-proof  
Case Mount



D1  
180° Rotating  
Mount



D2+D3  
360° Rotating  
Mount



E1  
Bicycle Handlebar  
Mount



F1  
Helmet  
Mount



F2  
Helmet  
Mount



G  
Camera  
Frame



J  
Battery Charger



## Installation Guideline


A2+C2




A2+C2+F1




A2+C2+F1+I

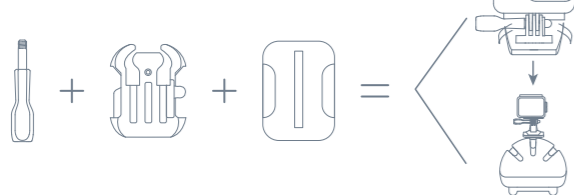

A1+E1

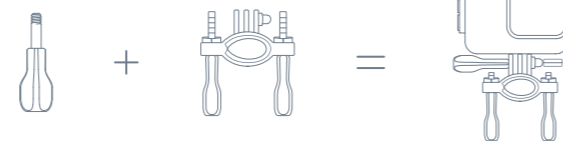


A1+B2+E1

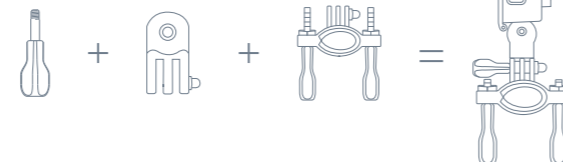

A2+D1



A2+D1+D2+D3

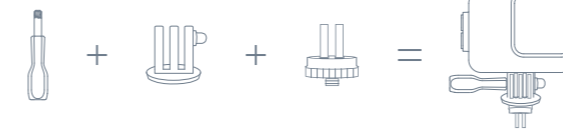

A2+C1



Warm tip: This Quick Start Guide is mainly designed for  
iZEEKER Action Camera iA100  
Support Team: [support.ac@izeeker.co](mailto:support.ac@izeeker.co)

Follow us for more information:

Official website: [www.izeeker.co](http://www.izeeker.co)

Instagram: iZEEKER Action Camera

YouTube: iZEEKER Action Camera

Facebook: iZEEKER Action Camera

Facebook Group: iZEEKER Action Camera Club

Download "IBK Cam" APP for iZEEKER iA100 Action Camera

