

Useful tips

- This product is for pet cats and dogs only. Its function is specifically focused on hair trimming and care.
- This product can be used to clean pet hair and dust on pet kennels, pet mats/beds, carpets or bed mattresses.
- This product is not suitable for cleaning indoor waste.
- This product is suitable for use at altitudes of up to 4,000 meters.
- This product is limited to use on dry pet hair.

Main Machine/Accessories

Introduction - Grooming Clippers

Introduction - Grooming Clippers

Please charge the electric shears before use
For first time use, please charge the electric shears for 2-3 hours until the 3 power indicators are fully lit.

The device can be charged by accessing any DC 5V/1A adapter or above. It is also able to be charged by a power bank, computer, portable power, etc.

Accessories and Main Machine to Assemble when it is on.

Switching and product speed control operation

- Plug the power cord into the socket to power up.
- Press the power button to open the vacuum cleaner mainframe.
- The knob rotates from Mix to Max, and it has a total of 1 to 16 gears to choose from.
- Press the power button again to turn off the vacuum cleaner mainframe when it is on.

How to use the accessories

"Short hair combs" are able to deal with some long and unnecessary pet hair.

"Clean brush" can clean floating hair, old hair and other bits on the pet's body. It also has the effect of making the pet's hair fluffier.

Tip: "comb brush" do not brush more than 3 times consecutively, otherwise there will be too many brushes, which will cause the brush to be stuck.

2-in-1 soft brush" can effectively clear pet nest, sofa and other fabric pet hair and dust.

"Grooming Clippers" shaves and inhales the pet's hair without leaving a residue.

"Sofa brush" could be used to clean the hair off an animal, on human clothes, or on a sofa.

4 adjustable clipping combs (1/2", 3/8", 1/4", 1/8") Different sizes of grooming brushes are achieved by changing the guard combs.

Useful tip: For first time or unskilled users, it is recommended to install a protective comb on the head of the electric pusher. This is to avoid injury caused by improper operation.

"Cleaning brush" can be used to clean the electric pusher head, as well as the mainframe metal mesh screen, dust canister, HEPA, etc.

Clean the dust can

- Take off the dust can
- Open and pour out

Assemble dust can

- Place the dust can according to the arrow direction.
- Attention: Take care when taking the dust can.
- Once the removed dust can is cleaned after dumping dust, be sure to install it after the dust can is dry to protect motor.

Filter/HEPA clean

- The filter should be cleaned with cold water at least every other month.
- Please make sure to clean it regularly if it is dirty according to the use frequency, condition, and maintenance period.
- When cleaning, remember to switch off the power supply and pull the plug from the socket.

- Remove the dust cup and take out the filter.
- Clean it with tap water then drain all water.

3 Place it in a well-ventilated area for at least 24 hours. After the filter is completely dried, install the filter.

- Please be sure to reinstall the filter after drying.
- If not properly dry the filter will cause electric shock and failure.

After the filter is completely dried, reinstall the filter.

- Place the filter sponge in the HEPA mesh coil.
- Install the filter assembly at the bottom of the dust cup.
- Please place the machine according to the arrow's direction.

Power cord storage

Power cord storage: the machine's electrical cord is wound and stored at the base of the machine.

Safety warning and Daily use

- This product is only for home use only. This means that it cannot be used for commercial or industrial use, nor in outdoor or humid places.
- Never allow this product to be operated by children or people with impaired physical and mental abilities. If such persons do operate machine, ensure process is strictly supervised by an appropriate person. This includes being extra cautious when this machine is operated around pets or children.
- Please do not touch the power plug or the product with wet hands.
- Do not use this product when the power cord or power plug is damaged.
- Do not use the product if the power cord is damaged or if the machine is functioning at all abnormally, or it is damaged, placed outdoors or immersed in liquid. All these circumstances require you to contact our company.
- Please do not disassemble the product. Wrong assembly methods may cause electric shocks or fire. Please contact the company when maintenance is needed.
- Do not pull the power cord, do not place heavy objects on top of the machine, and do not clamp the wire too close to the door.
- Please do not smoke, light matches, drop ash, or bring anything of high temperature near this machine.
- Please do not put things into the opening or block the opening for use.
- Please pull out the power cord when you need to change the parts or do any maintenance whatsoever.
- Please do not operate or keep it outdoors or in a bathroom or other wet places.
- Please do not use products with fragrance or use fragrance as a filter. This could cause a fire hazard.

Use Precautions:

- Please do not operate or handle cord with wet hands. This is to avoid failure of equipment or electrical shock.
- Do not smoke or bring anything flammable near this machine.
- Do not use in area where there is flammable or combustible liquid.
- The first use may produce a peculiar smell. It will not cause adverse effects on the body. The smell will disappear after a period of time.
- However, if the bad smell persists, please stop using immediately!
- Make sure to clean the cup and filter. Using a dirty cup and filter they can become a fire hazard, failure of equipment, or create a number of other hazards.
- Prior to doing maintenance, cut off the power supply and unplug. This is to avoid electrical shocks or failure of equipment.
- This product is designed to stop working when the temperature rises abnormally.
- In the case of the motor getting abnormally hot, the operation will be stopped immediately.
- If the suction opening is blocked, the operation will be stopped immediately. Take out the dust cup and clean the inlet and filter. Open it again after 60 minutes.
- Please use it after each filter is properly installed.
- Please be sure to install and use the filter. If the filter is removed, it will become a cause of machine failure.

Specifications

Product Model	G602
Rated Power	350 W
Vacuum Tank Volume	2.0L
Noise(dBA)	≤65
Vacuum	±10.1669kPa
Air Flow	9L/S
Power Cable Length	8.2 Ft
Length of Straw	5.9 Ft
CESL%	±95%
Electric Clipper Batteries	1850/2500mAh
Charging Voltage	DC5V/1A
Charging Time	Full charge at ±3.7h
Protective Combs	1/2", 3/8", 1/4", 1/8"
Working Temperature	32°F-121°F, ±5% RH
Cleaner Size (in)	8.67*6.87*12.01
Packing Size (in)	14.29*12.13*13.31

Pet Grooming Kit
USER MANUAL