

The U1 Portable carries a limited warranty for a period of 1 year. This does not cover misuse, modification or neglect (dropping or water damage). If a claim is to be made all postage costs are to be covered by the customer.


It is not recommended to charge the portable for more than the required time. Once the indicator light **C** stops flashing the unit can be unplugged and used as required. A single charge will enable the portable to be used for up to 5 days (depending on usage) before needing to be charged again.

This product meets all FCC safety standards and can be safely used on a plane or any aircraft with confidence.


This product is not covered by warranty if it is dropped in water or accidentally put through the wash. Full submersion in water is more than likely to permanently damage the U1.

# Quick Start Guide

Ultimate Portable U1  
2nd Edition

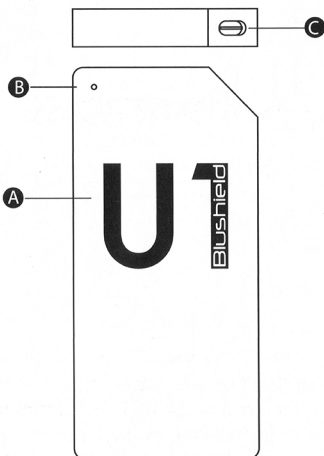

- A** LOGO
- B** Function indicator LED
- C** USB C charging port

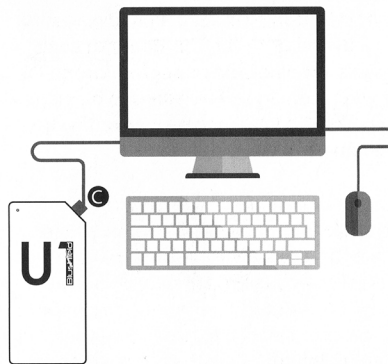

Upon receiving your U1 Portable please first charge it fully using the USB C cable. Insert the small end of the USB cable into the USB C port **C** making sure not to force it in. Forcing the plug in may damage the USB C port.

The larger end of the cable can be inserted into a USB socket on USB type charger. The U1 will take a few hours to charge fully. Once fully charged, disconnect the charger to protect the battery.

This 2nd edition of U1 does not have a power button and will remain on constantly until the battery goes flat.

