

The X1 carries a limited warranty for a period of 1 year. This does not cover misuse, modification or neglect (dropping, water damage). If a claim is to be made all postage costs are to be covered by the customer. A Blushield distributor will decide whether to repair or replace product depending upon the fault.


It is not recommended to charge the X1 for more than the required time. Once the indicator light stops flashing the unit can be unplugged and used as required. A single charge will enable the X1 to be used for 1+ days (depending on useage) before needing to be charged again.

This product meets all FCC safety standards and can be safely used on a plane or any aircraft with confidence.

This product is not water proof as with all electronic products this is not covered by warranty. Full submersion in water is more than likely to permanently damage your X1

Quick Start Guide

X1 Chrome Pendant

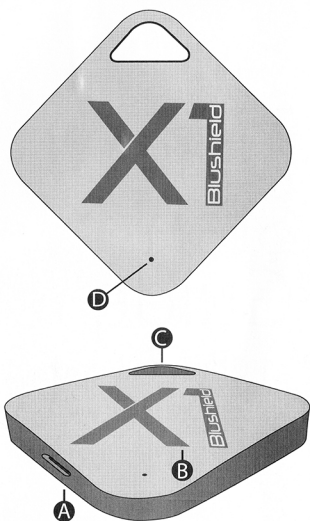

- A USB C socket
- B Logo
- C Hole for necklace
- D Function LED

Upon receiving your X1 please first charge it fully using the USB C cable provided. Insert the small end of the USB cable into the USB C port **A** making sure not to force it in. Forcing the plug in may damage the USB C port. The larger end of the cable (USB A) **C** can be inserted into a USB socket on your computer or any USB type phone charger will do. A USB charger is not supplied with your X1.

Once the charger head **C** is inserted into the USB C socket **B** the X1 will start to charge. This is indicated by a flashing LED **D**.


The X1 will take from 2 to 4 hours to charge fully, this will depend upon the charger used. Fast chargers will not work with the X1 so use a 1 amp or 2 amp charger.

Once fully charged the red LED **D** will no longer flash, indicating a full charge. A single charge may last up to 1+ days, depending upon useage.

DO NOT IMMERSE YOUR X1 IN WATER OR ANY LIQUID AS YOUR X1 IS NOT WATER-PROOF THIS INCLUDES SHOWERING AND SWIMMING

WARRANTY DOES NOT COVER WATER DAMAGE

- A USB C plug
- B USB C Socket
- C USB A to charger
- D Function LED

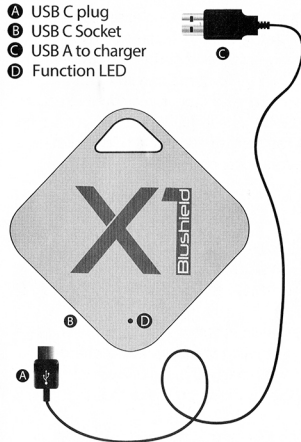

Fast flashing red light = battery is low
 Slower flashing red light = charging more than halfway
 No flashing light = fully charged

Once fully charged the USB plug should be removed and the Green LED will light up indicating normal function.

Green static light = X1 is on
 No light = X1 is off/ flat battery