



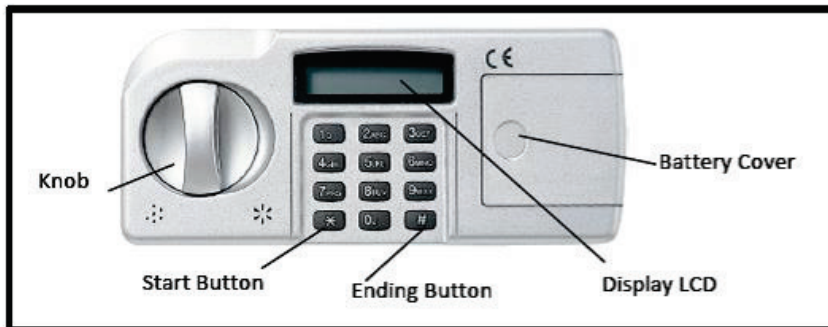

## Electronic Lock Operating Manual For FireKing KF Models

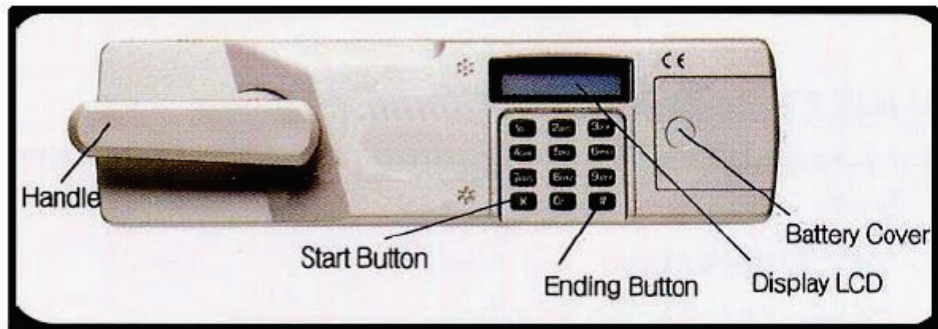

### TO OPEN SAFES

Insert four 1.5V (AA) batteries after opening the cover of battery.

STEP 1: Press start button “ \* “

STEP 2: Press master code (4560) given by the manufacture.

STEP 3: Press the “#” button “Match” will be displayed.

STEP 4: Turn knob/handle to open the safe door.

### TO CHANGE PERSONAL CODE (User Code 1)

The Personal code could be input from 4 digits to 16 digits.

STEP 1: Press the reset button located inside on back of door

STEP 2: Enter your new Personal Code (Ex: 5555)

STEP 3: Press the “#”button

STEP 4: LED will display SUCCESS! Or ERROR!

STEP 5: If ERROR is displayed redo from step 1.



## **CHANGE/ADD OTHER USER CODES (Users 2, 3 and 4)**

STEP 01: Press start button “\*”

STEP 02: Press end button “#”

STEP 03: Enter your personal code (Ex: 5555)

STEP 04: Press “#”

STEP 05: “0-EXIT” will be shown on the LCD

STEP 06: Press “1”(C-NO:1...will be shown on LCD).

STEP 07: Set or change a user code by pressing 2, 3 or 4

STEP 08: Enter new personal code and then press “#” (EX 7777#)

STEP 09: Enter new personal code again (EX 7777#) to confirm and then press “#”

STEP 10: LED will display SUCCESS! Or ERROR!

STEP 11: If ERROR is displayed redo from step 1.

## **DELETE USER CODES (only users 2 – 4 can be deleted)**

STEP 01: Press start button “\*”

STEP 02: Press end button “#”

STEP 03: Enter your personal code (Ex: 5555)

STEP 04: Press “#”

STEP 05: “0-EXIT” will be shown on the LCD

STEP 06: Press “2” (D-NO:2,3,4.. will be shown on LCD).

STEP 07: Press the user code you want to delete (Ex: 2 ,3 or 4)

STEP 08: To delete Press “1”. To cancel Press “0”

STEP 09: LED will display SUCCESS! Or ERROR!

## **TO HIDE USER CODES**

STEP 01: Press start button “\*”

STEP 02: Press end button “#”

STEP 03: Enter your personal code (Ex: 5555)

STEP 04: Press “#”

STEP 05: “0-EXIT” will be shown on the LCD

STEP 06: Press 7 “DISPLAY MODE” will be shown

STEP 07: To unhide code repeat steps 1-6

## **THE TIME FOR CHANGING BATTERY**

In case the safe doesn't open, even if the melody along with LED will turn on or Low Battery is displayed. The battery needs to be replaced immediately.

### **\*NOTICE**

If you make a mistake entering the USER code, ERROR will appear on the display. After 3 wrong attempts, “PLEASE WAIT” will appear on the display for 3 minutes and it cannot be used during this time.