

How to Open Your Safe

Press the START button and punch in your code. The green light should come on and you should hear a chirp. Once you hear the chirp turn the knob to open.

How to Change Your Code

Your safe is programmed with 2 user codes. The first one is 123456. The second one is 567890. You can change these codes to something that is easy for you to remember.

To change the first code 123456 to a new code, follow these simple instructions. (Make sure you have decided what your new code is before starting).

1. Press the white memory button inside the door.
“-Code” will display, then “User”
2. Press 1, then the “START” button.
“——” will display
3. Enter your new 6-digit code.
“Again” will display, then “——”
4. Enter your new 6-digit code again.
“In 1” will display

To change the second code, follow the steps above, except Press 2 instead of 1 in Step 2.

Note that you can have both codes be the same numbers if you only want one combination in the safe.

*****IMPORTANT*****

You must do this with your door open. Once you have changed your combination, test it with your safe door open to make sure you have done it correctly. If you have any problems, please call our customer service department at 1-800-722-7233.

NOTE: IF YOU INPUT THE INCORRECT CODE FOUR TIMES THE LOCK WILL GO INTO THE LOCKOUT MODE AND BEEP CONTINUOUSLY FOR FIVE MINUTES. (DO NOT REMOVE THE BATTERIES). ONCE IT IS DONE BEEPING, YOU CAN INPUT YOUR CODE TO OPEN.

How to Change Your Batteries

The batteries are located on the outside of the safe in the compartment at the bottom of the keypad. It uses 4 AA batteries. Simply pop open the compartment from the bottom to change your batteries. Your code will remain in the safe even if the batteries run out!