




DIMMER REMOTE FOR 45W LED BULBS

QUICK START GUIDE

Required Components

45W Daylight Dimmable LED Bulb with Tungsten Cover (#345) 2.4GHz RF Dimmer Remote*

**Requires 2 AAA batteries (sold separately)*

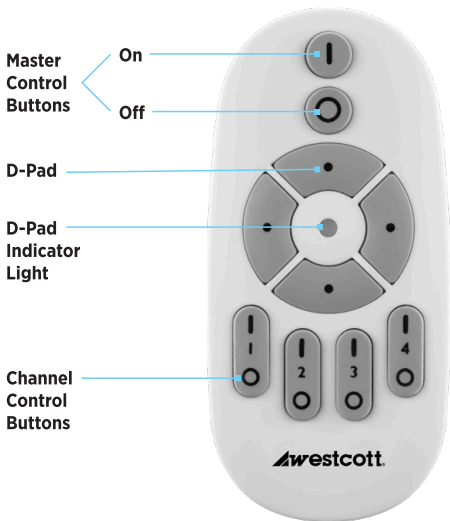

Note: The D-Pad's LEFT/RIGHT Button (• •) is disabled.

This remote is designed to control multiple 45W LED Bulbs (#345).

Control Range: Up to 200-feet (61 meters) unobstructed.

Caution

IMPORTANT: Please use caution while using and immediately after using the bulb to avoid serious burns or injuries.

- Use caution when changing bulb caps.
- Do not overtighten bulb when inserting into socket.
- Use compatible light sockets only.
- Never leave unattended around small children and/or pets.
- Keep away from fire, water, and moisture.
- Do not submerge in water.
- Do not attempt to open or modify housing of any Westcott products. Contact Westcott for assistance.

Master Control Buttons

The 2 buttons located at the top of the remote are used for instant dimming, style of control (All or Individual), and **ON/OFF** control of all paired bulbs.

ON/OFF: The main power buttons (|), (0) located at the top of the remote allows multiple bulbs that are paired with the remote to be powered ON and OFF with a single button press.

INSTANT DIMMING: Press the (0) button for 3 seconds to dim all of the bulbs to their lowest setting. Return to the previous output setting by pressing the (|) once.

ALL BULB DIMMING: See *D-Pad Control Buttons* section.

Bulb Pairing

Pairing Remote with 45W LED Bulb (#345)

Previously paired bulbs must be unpaired in order to be assigned a new channel. See next section for how to unpair.

1. Insert 2 AAA batteries (sold separately) into the remote. Screw bulb into light socket.
2. Turn OFF the main power supply to the bulb and wait 10 seconds.
3. Choose a Channel Control Button located at the bottom of the remote to assign a bulb. Channel Control Buttons are labeled 1-4.
4. Pair the bulb to that channel by turning the bulb ON and immediately pressing the (|) on the Channel Control Button. The bulb will pulse three times once paired. Repeat this process to assign additional bulbs to this channel.

Note: A bulb can only be assigned to 1 channel on the remote.

Unpairing Remote with 45W LED Bulb (#345)

1. Insert 2 AAA batteries (sold separately) into the remote. Screw bulb into light socket.
2. Turn OFF the main power supply to the bulb and wait 10 seconds.
3. Locate the (|) at the bottom of the remote that is assigned to that bulb.
4. Turn the bulb ON and immediately press the (|) 6 times to unpair the bulb.
5. The bulb will pulse 10 times which confirms it's no longer paired with the remote.

Note: There is a 3-second window after pressing (|) on the desired channel to unpair the bulb.

Channel Control Buttons

The 4 individual channel control buttons located at the bottom of the remote are used for pairing, dimming, and ON/OFF control.

BULB ON/OFF: Turn an individual bulb ON/OFF by pressing the (|), (0) on the channel control button paired to that bulb.

INSTANT DIMMING: Dim an individual bulb by pressing the (0) for 3 seconds on the channel control button paired to that bulb. Return to the previous output setting by pressing the (|) once.

D-Pad Control Buttons

ALL BULBS - DIMMING: To dim all bulbs paired to the remote from their current output setting, press the master (|) control button once and press the (•) button on the D-Pad. Short press (•) to change to the next lowest setting. Long press (•) to dim until the desired output is reached and release the button.

ALL BULBS - INCREASE OUTPUT: To increase the light output of all paired bulbs to the remote from their current output setting, press the master (|) control button and press the (•) button on the D-Pad. Short press (•) to change to the next highest setting. Long press (•) to dim until the desired output is reached and release the button.

INDIVIDUAL BULB - DIMMING: To dim a single bulb paired to the remote from its current output setting, press the desired channel (|) control button once and press the (•) button on the D-Pad. Short press (•) to change to the next lowest setting. Long press (•) to dim until the desired output is reached and release the button.

INDIVIDUAL BULB - INCREASING OUTPUT: To increase the light output of a single paired bulb from its current output setting, press the desired channel (|) control button once and press the (•) button on the D-Pad. Short press (•) to change to the next highest setting. Long press (•) to dim until the desired output is reached and release the button.

Warranty

Westcott's warranty obligations for this product are limited to the following terms.

The F.J. Westcott Co. ("Westcott") warrants this Westcott branded product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase from Westcott or an authorized retailer by the original end-user purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the Westcott trademark, trade name, or logo affixed to them.

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, mold, or other external causes; (b) damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) a product or part that has been modified to alter functionality or capability without the written permission of Westcott; or (d) cosmetic damage, including but not limited to scratches, dents and broken plastic.

Disclaimer: By purchasing, borrowing and/or using this product for any event, both public or private, you, the customer, accepts all responsibility and releases Westcott, and its associates, of any and all liability in the event of manufacturer's defect, malfunction or misuse of the product which may lead to further injuries or complications unforeseen by the user. Westcott is not responsible for any potential or incurred damage caused by failure to properly mount, hang, or store the product, which includes, but is not limited to damage to cameras, electronics, electrical equipment, buildings, building materials, personal injury, death, or disability, fire damage, or any and all other damage not mentioned previously.

Please contact Westcott's Repair Department for a Return Authorization Number "RMA" prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the limited warranty will be returned at the expense of the sender.

Repair Department: 800-886-1689 / 419-243-7311 (International)

Email: service@fjwestcott.com

Shipping: F.J. Westcott Co, 1425-B Holland Rd. Maumee, OH 43537

Register your new gear online at [FJWESTCOTT.COM/REGISTER](https://www.fjwestcott.com/register)

Visit [FJWESTCOTT.COM](https://www.fjwestcott.com) for videos, pro tips, inspiration, and more!

Westcott products are made to the company's traditionally high standards of quality and comply with all applicable government safety regulations and requirements. In an effort to provide the best quality products possible, we periodically make product modifications. Actual products may not be identical to items pictured. Made in China. ©F.J. Westcott Co. All rights reserved. EA1119