westcott. ✓

QUICK START GUIDE

Overview



USB-C Port

Wireless Signal Indicator

- Battery Indicator*

Group Indicator

(1-19)

Descend/Ascend through options

Set | Power Button

Hinged 3.5mm Sync Plug On reverse side.

*Visible while charging and low battery.

Charging

- Locate the USB-C port on the FJ-XR.
- Plug a compatible USB-A to USB-C cable into the FJ-XR.
- Plug the opposing end of the cable into any USB-A 5V power source.
- 4. The estimated charging time is 60 minutes.
- The FJ-XR is fully charged when the battery indicator stops blinking.

Power

 Power On: Long press and hold the Set | Power button for 3 seconds until the screen illuminates.

 Power Off: Long press and hold the Set | Power button for 3 seconds until the screen turns off.

3.5mm Sync Port Mounting 1. Gently pull the silver hinged

sync plug up from the FJ-XR body. Do not overextend. While securely holding both

sides of FJ-XR, gently insert the FJ-XR sync plug into any

strobe/flash 3.5mm sync port. 3. Ensure the FJ-XR sync plug is fully inserted into the sync

port. Do not force plug.

Selecting a Channel & Group 1. Select a channel value by quick

- Select a channel value by quick pressing the Set | Power button from the Main Menu screen until the Channel [CH] icon and number begin to flash.
- 2. Quick press the "." or "+" buttons repeatedly to change the value (1-19) to match the Channel number selected on the FJ-XZm Wireless Trigger.

 3. Quick press the Set | Power button to confirm Channel value and initiate changing the Group (FQT) value.
 - value and initiate changing the Group [GR] value.

 4. Quick press the "." or "+" repeatedly to change the numerical value to match the Group number selected on the FJ-X2m Wireless Trigaer.
 - Quick press the **Set | Power** button to confirm Group value.

Warning

- Keep away from fire, water, and moisture. Do not submerge in water.
- Avoid drastic temperature changes before, during, and/or after use.
- Do not attempt to modify any Westcott products. Contact Westcott for assistance.
- The maximum operating temperature is 32-104°F (0-40°C).

∠westcott.

View product warranty details at fiwestcott.com/warranty.
Register your new FJ-XR at fiwestcott.com/register.

In an effort to provide the best quality products possible, we periodically make modifications. Actual products may not be identical to items pictured. Made ir China. ©F.J. Westcott Co. All rights reserved. J0220