



**WIRELESS  
DMX DIMMER  
AC ADAPTER**

---

QUICK START GUIDE

---

# Included Components & Overview

 
- (1) AC Adapter
- (1) Power Cord

Heat-Resistant Housing

Fan Intake

Air Outflow

In-Line Fuse

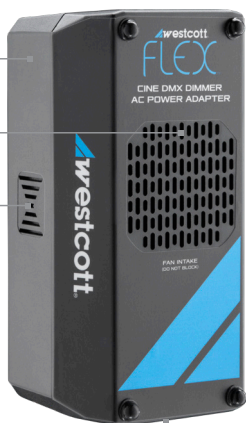

V-Mount

AC Input



## Warning

- Only for use with the Westcott Flex Cine Wireless DMX Dimmer
- Do not block vents
- Do not enclose AC Adapter or DMX Dimmer
- Keep dry and away from fire
- Do not submerge in water
- Do not attempt to open or modify
- Do not short terminals
- Do not alter or change V-Mount plate

## Operation

### Attaching to a Flex Cine Wireless DMX Dimmer

1. Plug one end of the power cord into the bottom of the AC Adapter and the other end into a wall outlet.
2. Align the V-Mount on the back of the AC Adapter to the V-Mount on the dimmer, ensuring that the point of the “V” shape on each are pointed in the same direction.
3. Gently press the AC Adapter against the V-Mount on the dimmer and slide into place until it clicks. Confirm the connection is secure by gently attempting to slide the AC Adapter in the opposite direction.
4. Once attached, ensure the Flex Cine Mat is connected and powered by pressing the toggle switch on the dimmer, which is between the two units.

### Removing from a Flex Cine Wireless DMX Dimmer

To remove the AC Adapter from the dimmer, hold the release button located alongside the V-Mount while sliding the AC Adapter out of the dimmer V-Mount. Then, release the button and store adapter when not in use.

## Troubleshooting

If the fan is inoperable after all connections are made, remove the power cord from the wall and AC Adapter, and re-connect.

If the AC Adapter is still inoperable after confirming the power cord connections are secure, the adapter's fuse (250V 10A In-Line) may need to be replaced.

## Fuse

### Checking and Replacing a In-Line Fuse (250V 10A)

 
1. Allow the AC Adapter to cool for at least 2 minutes.
2. Locate the fuse compartment on the bottom of the adapter just above the power cord receptacle.
3. Using a thin flat object (ie. flat head screwdriver), open the fuse compartment tray.
4. Slide the compartment tray out and remove the blown fuse.
5. Insert the new fuse into the tray just above the ^ shape and ensure it's aligned properly.
6. Once inserted, use your thumb to gently press the front of fuse compartment tray to slide back into place.
7. Reconnect the power cord to supply power to the AC Adapter again.

***DO NOT USE the AC Adapter if the fan is still inoperable after completing the steps above. Contact Westcott Customer Service at 800-886-1689 or [service@fjwestcott.com](mailto:service@fjwestcott.com).***

## Care & Storage

Wipe components with a cloth. Store in a dry environment.


# Flex Cine Mounts & Modifiers

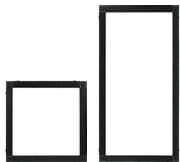

Scrim Jim® Cine Frames



 Yokes

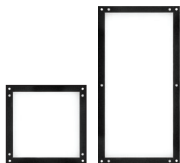

Hard Diffusion Panels



Barndoors



Drum Softbox



China Cubes



Portable Softboxes



Egg Crate Grids

Learn more at [FJWESTCOTT.COM/FLEX](http://FJWESTCOTT.COM/FLEX)

# Warranty

Westcott's warranty obligations for this product are limited to the following terms.

The F.J. Westcott Co. ("Westcott") warrants this Westcott branded product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase from Westcott or an authorized retailer by the original end-user purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the Westcott trademark, trade name, or logo affixed to them.

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, mold, or other external causes; (b) damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) a product or part that has been modified to alter functionality or capability without the written permission of Westcott; or (d) cosmetic damage, including but not limited to scratches, dents and broken plastic.

**Disclaimer:** By purchasing, borrowing and/or using this product for any event, both public or private, you, the customer, accepts all responsibility and releases Westcott, and its associates, of any and all liability in the event of manufacturer's defect, malfunction or misuse of the product which may lead to further injuries or complications unforeseen by the user. Westcott is not responsible for any potential or incurred damage caused by failure to properly mount, hang, or store the product, which includes, but is not limited to damage to cameras, electronics, electrical equipment, buildings, building materials, personal injury, death, or disability, fire damage, or any and all other damage not mentioned previously.

Please contact Westcott's Repair Department for a Return Authorization Number "RMA" prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the limited warranty will be returned at the expense of the sender.

**Repair Department:** 800-886-1689 / 419-243-7311 (International)

**Email:** [service@fjwestcott.com](mailto:service@fjwestcott.com)

**Shipping:** F.J. Westcott Co, 1425-B Holland Rd. Maumee, OH 43537

Register your new gear online at [FJWESTCOTT.COM/REGISTER](https://FJWESTCOTT.COM/REGISTER)

Visit [FJWESTCOTT.COM](https://FJWESTCOTT.COM) for videos, pro tips, inspiration, and more!

Westcott products are made to the company's traditionally high standards of quality and comply with all applicable government safety regulations and requirements. In an effort to provide the best quality products possible, we periodically make product modifications. Actual products may not be identical to items pictured. Assembled in the USA.

©F.J. Westcott Co. All rights reserved. HW0918