



QUICK START GUIDE

Visit fjwestcott.com/firmware for firmware information.

Introduction

This guide covers setup, controls, and basic operation. Visit [fjwestcott.com/documentation](https://www.fjwestcott.com/documentation) and scroll to the L60-B section to download the complete User Manual.



Included Components & Overview

L60-B COB LED, AC Power Adapter & Cord, 45° Ultra Reflector, Protective Cover, Travel Case, Rapid Box Switch Insert

Components may vary depending on the kit purchased.



Warning

- **During operation, the L60-B lamp, and temperatures of select components of the L60-B will increase. Please use caution and avoid direct skin contact with the lamp or surrounding metal components after immediate use to avoid potential injury.**
- Use only with the Westcott L60-B AC Power Adapter and Cord, NP-F970/750/550 L-Series Batteries, and 14.4/14.8V D-tap Batteries.
- Never leave unsecured and unattended equipment around children and/or pets.
- Keep away from fire, water, and moisture.
- Avoid drastic temperature changes before, during, or after use.
- Do not overtighten the yoke or tilter bracket tension knobs.
- Ensure the L60-B is securely mounted before use.
- Only use compatible modifiers and accessories up to 3 lbs. / 1.4 kg.
- Do not attempt to modify any products. Contact Westcott for any assistance.
- The operating temperature range is 14-104°F (-10-40°C).

Getting Started

AC Power Operation

1. Connect the AC cable to the AC power adapter.
2. Plug the two-prong connector of the cable into a wall outlet.
3. Locate the barrel plug on the AC cable and plug it into the L60-B power port.
4. Ensure that the clear protective cover has been removed from the front of the L60-B.
5. Turn the L60-B **ON** by pressing and holding the **Power** button.


DC Power Operation: L-60B Battery Grip

1. Completely charge two compatible NP-F batteries (NP-F970/750/550).
2. Insert both batteries into the L60-B Battery Grip.
3. Loosen the L60-B light stand tension knob.
4. Insert the battery mounts silver spigot into the L60-B yoke receptacle.
5. Tighten the light stand tension knob.

DC Power Operation: 14.4/14.8V D-Tap Battery (Sold Separately)

1. Ensure the D-tap battery has been fully charged.
2. Plug the L60-B D-Tap to Barrel Cable (sold separately) into the battery's D-Tap port.
3. Plug the barrel plug end of the cable into the L60-B power port.
4. Turn the L60-B **ON** by pressing and holding the **Power** button.

LCD Display & Menus

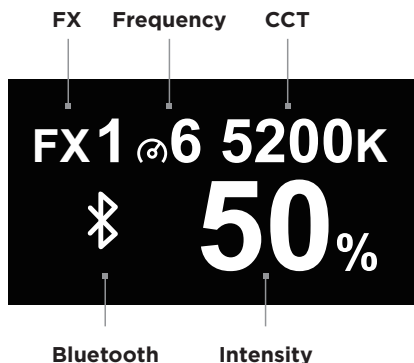

FX Options:

FX0 - Constant Brightness

FX1 - TV

FX2 - Faulty Bulb

FX3 - Lightning

FX4 - Fire

FX5 - Pulse

FX6 - Paparazzi

FX7 - Headlight

FX8 - SOS

FX9 - Emergency

Controls

Adjusting the Light Output

1. Ensure that the L60-B is **ON**.
2. Turn the **Dim•Bluetooth** control knob to adjust the light output.

Adjusting the Color Temperature (Kelvin)

1. Ensure that the L60-B is **ON**.
2. Turn the **CCT•FX** control knob to adjust the color temperature.

Enabling and Adjusting the Visual FX

1. Ensure that the L60-B is **ON**.
2. Quick press the **CCT•FX** control knob to enable the FX functionality.
3. Turn the **CCT•FX** control knob to select the desired FX.
4. Quick press the **CCT•FX** control knob again to change the frequency of the FX.

Mounting

Mounting to a Light Stand

1. Rotate the yoke's light stand tension knob counterclockwise to loosen.
2. Insert the light stand spigot into the L60-B's 5/8"-16 mm receiver.
3. Tighten the tension knob to secure the L60-B to the light stand.

Attaching & Removing Modifiers

The L60-B is compatible with various Rapid Box Switch light modifiers up to 3 lbs / 1.4 kg using the included Switch Insert. Also compatible with umbrellas using the L60-B Gel & Umbrella Mount sold separately.

Connecting a Modifier

1. Ensure the L60-B is turned **OFF** and has cooled for five minutes.
2. Grasp the Switch Insert and align its four square mounting blocks with the openings located on the face of the L60-B.
3. Insert the modifier and turn clockwise until it locks into place.

Removing a Modifier

1. Ensure the L60-B is turned **OFF** and has cooled for five minutes.
2. Grasp the modifier and its Switch Insert.
3. Slide the L60-B's modifier release away from the modifier.
4. Rotate the modifier counterclockwise until the four square mounting blocks align with the openings.
5. Pull the modifier away from the L60-B to remove.

Use caution and do not force entry or removal of modifiers to avoid damage to the L60-B.

Updating Firmware

Future firmware updates will result in performance enhancements and modified menu options. Please visit fjwestcott.com/firmware. Follow the instructions included with the firmware download to update.



Warranty

Westcott's warranty obligations for this product are limited to the following terms.

The F.J. Westcott Co. ("Westcott") warrants this Westcott branded product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase from Westcott or an authorized retailer by the original end-user purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the Westcott trademark, trade name, or logo affixed to them.

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, mold, or other external causes; (b) damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) a product or part that has been modified to alter functionality or capability without the written permission of Westcott; or (d) cosmetic damage, including but not limited to scratches, dents and broken plastic.

Disclaimer: By purchasing, borrowing and/or using this product for any event, both public or private, you, the customer, accepts all responsibility and releases Westcott, and its associates, of any and all liability in the event of manufacturer's defect, malfunction or misuse of the product which may lead to further injuries or complications unforeseen by the user. Westcott is not responsible for any potential or incurred damage caused by failure to properly mount, hang, or store the product, which includes, but is not limited to damage to cameras, electronics, electrical equipment, buildings, building materials, personal injury, death, or disability, fire damage, or any and all other damage not mentioned previously.

Please contact Westcott Customer Support for a Return Authorization Number "RMA" prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the limited warranty will be returned at the expense of the sender.

Phone: 800-886-1689 / 419-243-7311 (International)

Email: support@fjwestcott.com

Shipping: F.J. Westcott Co, 1425-B Holland Rd. Maumee, OH 43537

Register your new gear online at [FJWESTCOTT.COM/REGISTER](https://www.fjwestcott.com/register)

Visit [WESTCOTTU.COM](https://www.fjwestcott.com) for videos, pro tips, inspiration, and more!

Westcott products are made to the company's traditionally high standards of quality and comply with all applicable government safety regulations and requirements. In an effort to provide the best quality products possible, we periodically make product modifications. Actual products may not be identical to items pictured. Made in China.

The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. Use of by F.J. Westcott is under license. Westcott is a brand of F.J. Westcott Co. in the U.S.A. © F.J. Westcott Co. All rights reserved. J0822