



# 18" RING LIGHT KIT


---

QUICK START GUIDE

---

# Components

- (1) 18" Ring Light
- (1) Power Supply
- (2) NP-750 Batteries
- (1) Battery Charger
- (1) Mobile Device Mount
- (1) Gooseneck Arm with 1/4"-20 Thread
- (1) Swivel Mount with 1/4"-20 Thread
- (1) 5.75' Light Stand
- (1) Carry Case

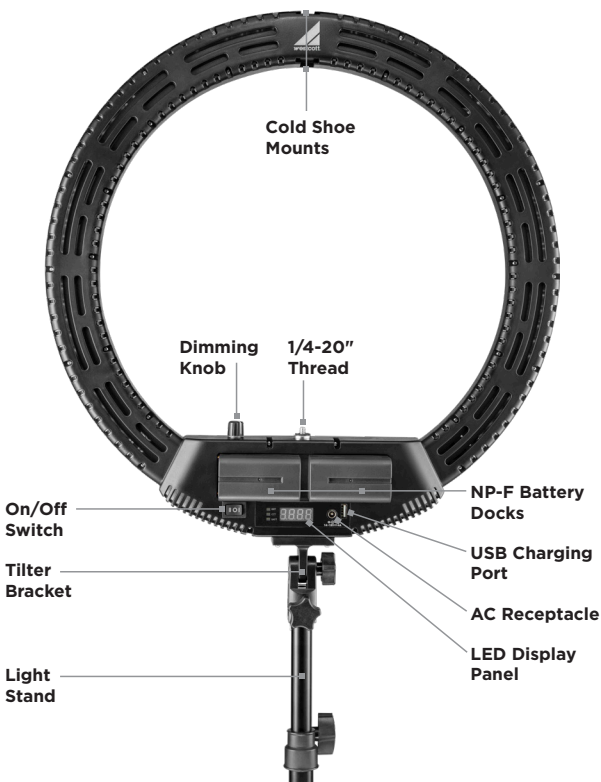

## Warning

- Only use with the included AC power supply and power cord.
- Only use with NP-F Series batteries of the same capacity (Voltage Range: 7.4V-12V).
- Both batteries should have the same state of charge when mounted. Avoid using a fully-charged battery and a partially depleted battery at the same time.
- Always remove batteries during storage and/or transport to avoid accidental operation which may lead to overheating if in the travel case.
- Keep away from fire and water.
- Do not submerge in water.
- Do not force electrical connections.
- Do not overtighten the mounting and/or tilting knob.
- Do not overtighten accessories to the mounting thread or cold shoes.
- Do not attempt to open or modify Ring Light.

## Setup

### Attaching to a Light Stand

Turn the lower tension knob counterclockwise to allow mounting to the light stand. Once mounted, turn the knob clockwise to secure the connection.

***Do not overtighten tension knob.***

### Tilting the Ring Light

Once mounted and secured to the light stand, use the higher tension knob to adjust the tilt.

***Do not overtighten tension knob.***

1. Turn the knob counterclockwise.
2. Adjust the Ring Light to the desired position by tilting the unit back and forth.
3. Turn the knob clockwise to lock the Ring Light into position.

# Basic Operation

## AC Ring Light Operation

1. Ensure the Ring Light is **OFF** by moving the power selector to the middle position **[O]**.
2. Connect the included AC power supply and power cord.
3. Insert the AC power supply's barrel plug into the AC receptacle on the back of the Ring Light.
4. Insert the power cord into a standard wall outlet.
5. Press the double-line **(||)** side of the power selector when using the AC power supply to power **ON**.

## DC Ring Light Operation

*The Ring Light will only operate on DC power when TWO charged batteries are connected to the unit.*

1. Ensure the Ring Light is **OFF** by moving the power selector to the middle position **[O]**.
2. Align the battery's female connection points with the Ring Light's barrel-shaped connection points.
3. With the battery flat against the Ring Light, gently slide the battery outwards until the connection is secure. Repeat this process to install the 2nd battery.
4. Press the single-line **(|)** side of the power selector when using batteries to power **ON**.

# Available Modes

Pressing the dimming knob down continuously will cycle the Ring Light through three different modes: Light Output, Color Temperature, and Battery Status.

## Light Output

By default, the Ring Light will start in the Light Output Mode and the LED indicator square next to the "BRT" will illuminate. While in Light Output Mode, turn the dimming knob to adjust the light output level from low (P-00) to high (P-100).

## Color Temperature

Press the dimming knob down to select Color Temperature Mode. The LED indicator square next to the "CCT" will illuminate and the screen will display the current Kelvin Color Temperature (3200K-5600K,  $\pm 300\text{K}$  tolerance). Turn the dimming knob to adjust the color temperature in  $\pm 100\text{K}$  steps.

## Battery Status

Press the dimming knob again to select Battery Status Mode. The LED indicator square next to the "BATT" will illuminate and the screen will display the status of the batteries.

"FULL" will be displayed when batteries are fully charged. A range between E-00 (low) to E-10 (high) will be displayed for all other charge levels. When batteries are depleted (E-00), the unit will automatically turn off after a short period of time.

Battery charge time up to 6 hours.

***When using the AC power supply, the Battery Status screen will display "FULL".***

# Warranty

Westcott's warranty obligations for this product are limited to the following terms.

The F.J. Westcott Co. ("Westcott") warrants this Westcott branded product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase from Westcott or an authorized retailer by the original end-user purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the Westcott trademark, trade name, or logo affixed to them.

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, mold, or other external causes; (b) damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) a product or part that has been modified to alter functionality or capability without the written permission of Westcott; or (d) cosmetic damage, including but not limited to scratches, dents and broken plastic.

**Disclaimer:** By purchasing, borrowing and/or using this product for any event, both public or private, you, the customer, accepts all responsibility and releases Westcott, and its associates, of any and all liability in the event of manufacturer's defect, malfunction or misuse of the product which may lead to further injuries or complications unforeseen by the user. Westcott is not responsible for any potential or incurred damage caused by failure to properly mount, hang, or store the product, which includes, but is not limited to damage to cameras, electronics, electrical equipment, buildings, building materials, personal injury, death, or disability, fire damage, or any and all other damage not mentioned previously.

Please contact Westcott's Repair Department for a Return Authorization Number "RMA" prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the limited warranty will be returned at the expense of the sender.

**Repair Department:** 800-886-1689 / 419-243-7311 (International)

**Email:** [service@fjwestcott.com](mailto:service@fjwestcott.com)

**Shipping:** F.J. Westcott Co, 1425-B Holland Rd. Maumee, OH 43537

**Register your new gear online at [FJWESTCOTT.COM/REGISTER](https://www.fjwestcott.com/register)**

**Visit [FJWESTCOTT.COM](https://www.fjwestcott.com) for videos, pro tips, inspiration, and more!**

Westcott products are made to the company's traditionally high standards of quality and comply with all applicable government safety regulations and requirements. In an effort to provide the best quality products possible, we periodically make product modifications. Actual products may not be identical to items pictured. Made in China. ©F.J. Westcott Co. All rights reserved. EA0719