

 **westcott**®

 **drop**™ **Pro**

Quick Start Guide

Included Components



Expandable Base



(3) Extension Arms



Backdrop
*Sizes & Colors Vary,
Included in Kits &
Sold Separately*



Carry Case


8' x 8' and 8' x 13' Backdrop Assembly

Lower Section Assembly

1. Locate the X-drop base. Loosen the dial on the runner located on the center tube and slide downward, extending each of the legs outward similar to a tripod. Once extended, turn the dial to lock the legs into place. **Do not over tighten.**
2. Open all of the clasps on each leg.
3. Fully extend all sections of each leg and close the clasps to lock them into place.



Step 1, Lower Section

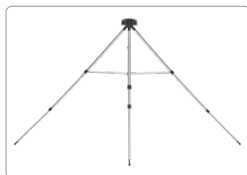

Step 3, Lower Section

Upper Section Assembly

1. Insert the shortest extension arm into the middle receptacle of the X-drop's center hub with the black hooks facing forward.
2. Slide the 2 remaining extension arms into the outermost position of the outer receptacles. (To release the arms, simply pull the arms out of the center hub.)
3. Open both sets of clasps on each arm.
4. Fully extend the outermost sections and close the clasps to lock them into place.
5. Attach the top of the backdrop that has 3 grommets to the corresponding arm's hook.



Step 2, Upper Section



Step 5, Upper Section

- Extend the remaining section until the top of the backdrop is straight and taut. Close the clasps to secure the position.
- Locate the two grommets at the bottom of the backdrop and attach them to the hooks on the front legs.



Step 6, Upper Section



Step 7, Upper Section




5' x 7' and 5' x 12' Backdrop Assembly

Lower Section Assembly

- Locate the X-drop base. Loosen the dial on the runner located on the center tube and slide downward, extending each of the legs outward similar to a tripod. Once extended, turn the dial to lock the legs into place.

Do not over tighten.

- Open the clasps closest to the foot of each leg.
- Fully extend the lower section of each leg and close the clasps to lock them into place.

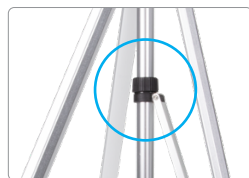

Step 1, Lower Section



Step 3, Lower Section

Upper Section Assembly

1. Insert the shortest extension arm into the middle receptacle of the X-drop's center hub with the black hooks facing forward.
2. Slide the 2 remaining extension arms into position closest to the center tube of the outermost receptacle openings. The arms will click into place. (To release the arms, press the tabs located on the front and back of the hub and pull the arm out of the receptacle.)
3. Open both sets of clasps on each arm.
4. Fully extend the outermost sections and close the clasps to lock them into place.
5. Attach the top of the backdrop that has 3 grommets to the corresponding arm's hook.
6. Extend the next section about halfway until the top of the backdrop is straight and taut. Close the clasps to secure the position.
7. Locate the two grommets at the bottom of the backdrop and attach them to the hooks on the front legs.



Step 2, Upper Section



Step 3, Upper Section



Step 5, Upper Section



Step 6, Upper Section



Step 7, Upper Section

Reducing the X-drop Pro Footprint

1. Loosen the dial on the runner located on the center tube.
2. While holding the center hub, open the lowest clasp on the rear leg and bring the rear leg forward until the desired position is achieved.
3. Close the clasp and retighten the dial to secure the position. **Do not over tighten.**



Step 1, Reducing Footprint



Rear Leg Fully Extended



Rear Leg Partially Extended

Adding Stability with a Weight Bag

- Each foot on the X-Drop Pro Stand has a rear hook for attaching a weight bag (sold separately) for additional support.
- Reducing the footprint of the stand increases the chance of it tipping forward. To avoid this, attach a weight bag to the base of the rear leg for a counterbalance.
- We strongly suggest attaching weight bags to the base of each leg during outdoor use.
- Remove all weight bags before moving or transporting the backdrop system to avoid damaging the stand.



Shown with H2Pro Weight Bag #HP-WB1

Warranty

Westcott's warranty obligations for the X-Drop Pro ("product") are limited to the following terms.

The F.J. Westcott Co. ("Westcott") warrants this Westcott branded product against defects in materials and workmanship under normal use for a period of **ONE (1) YEAR** from the date of retail purchase from Westcott or an authorized retailer by the original end-user purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the Westcott trademark, trade name, or logo affixed to them.

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, mold, or other external causes; (b) damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) a product or part that has been modified to alter functionality or capability without the written permission of Westcott; or (d) cosmetic damage, including but not limited to scratches, bends, and faded fabric.

Disclaimer: By purchasing, borrowing and/or using this product for any event, both public or private, you, the customer, accepts all responsibility and releases Westcott, and its associates, of any and all liability in the event of manufacturer's defect, malfunction or misuse of the product which may lead to further injuries or complications unforeseen by the user. Westcott is not responsible for any potential or incurred damage caused by failure to properly mount, hang, or store the product, which includes, but is not limited to damage to cameras, electronics, electrical equipment, buildings, building materials, personal injury, death, or disability, fire damage, or any and all other damage not mentioned previously.

Please contact Westcott's Repair Department for a Return Authorization Number "RMA" prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the limited warranty will be returned at the expense of the sender.

Repair Department: 800-886-1689 / 419-243-7311 (International)

Email: service@fjwestcott.com

Shipping: F.J. Westcott Co, 1425-B Holland Rd. Maumee, OH 43537

Register your new gear online at FJWESTCOTT.COM/REGISTER

Visit FJWESTCOTT.COM for videos, pro tips, inspiration, and more!

Patent fjwestcott.com/legal-patents. Westcott products are made to the company's traditionally high standards of quality and comply with all applicable government safety regulations and requirements. In an effort to provide the best quality products possible, we periodically make product modifications. Actual products may not be identical to items pictured. Designed in Ohio, USA. Assembled in China. © F.J. Westcott Co. All rights reserved. EA0322