

USER INFORMATION

FIREARM & WILD1 SAFETY WARNING

Your INFORCE WILD1 is designed for use with destructive weapon systems. Improper operation or misuse of the INFORCE WILD1 with these weapons may lead to personal injury or death of the operator or others within the weapon's range. Safe firearms handling procedures must be practiced at all times.

Before handling a weapon with the INFORCE WILD1 attached, read and understand the entire contents of the weapon's manual and the INFORCE WILD1 instructions, especially the safety precautions and procedures for safe firearms handling. Always practice safe firearms handling techniques. Failure to comply with correct safety precautions and safe firearms handling techniques may result in serious injury, damage to property, or death.

- Never point the firearm at anything or anyone that you don't intend to shoot.
- Always keep your finger outside the trigger guard and off the trigger until you are ready to fire the weapon.
- Always verify that the chamber of the weapon is empty or "clear" before attempting to mount or dismount the INFORCE WILD1.

Follow the cleaning procedures as set forth in the manual of your firearm. Always remove the INFORCE WILD1 from the firearm when performing maintenance, cleaning, or replacing the battery. Do not operate the INFORCE WILD1 around flammable/combustible materials or in flammable atmospheres involving evaporated gasolines, or where paints, solvents, or other flammable liquids are stored.



For warranty information please visit www.inforce-mil.com

INFORCE.

**USER MANUAL:
WILD SERIES**

WILD1

INFORCE-MIL.COM

FUNCTIONS

WILD1 LIGHT OPERATION

 
 
The INFORCE WILD1 features a patented ambidextrous switching paddle system for easy operation. The paddles are positioned very naturally and facilitate transitional finger movements from pistol to paddle switch to the trigger.

Constant

Quickly press either paddle to turn the light on. Pressing either paddle again will turn the light off.

Momentary

Press and hold either paddle for more than ½ second. Release pressure off paddle to turn light off.

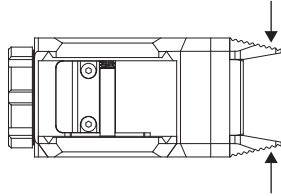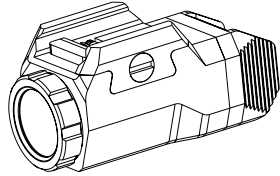


MAINTENANCE

CLEANING INSTRUCTIONS

INFORCE WILD1 requires minimal maintenance from time-to-time. See weapons handling safety instructions.

 
1. Clean contact surfaces (1, 2) of head and body with alcohol swab.
2. Apply thin coat of silicon-based lubricant to rubber o-ring (3) of head.
DO NOT USE A PETROLEUM-BASED LUBRICANT.

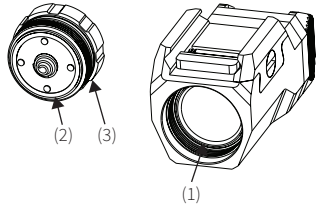


If light becomes dirty from dust, sand, etc... tighten head fully, rinse with water, and dry with a soft cloth.

OPERATION

 
MOUNTING WILD1 TO RAIL

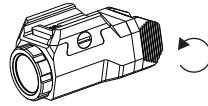

 1. Unscrew the clamp screw with a flathead screwdriver until the clamp is free from the body.

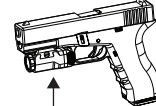

 2. Place INFORCE WILD1 rail into desired pistol groove.

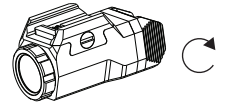


3. Using a flathead screwdriver, tighten the clamp screw until the clamp grabs the rail, firmly. Double check that the light is secure on the firearm.

To dismount, simply unscrew the clamp screw and remove the light from the firearm. Be sure to put the clamp back on the light when storing so that it is not lost or damaged.

UNIVERSAL RAIL

INFORCE WILD1 comes with interchangeable rail bar inserts that can be alternated for use with the Universal rail & MIL-STD-1913 rail. To change inserts:

 
- Use the included hex key to unscrew the two mounting screws that hold the insert in place on the body of the INFORCE WILD1.
- Remove the existing insert from the body, and replace it with the desired insert.
- Screw the mounting screws back into the body with the included hex key.

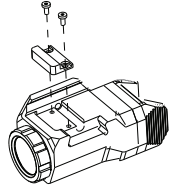

Finger tighten mounting screws with the hex key, over-tightening could result in stripping the hex key and/or screw head.

BATTERY REPLACEMENT

 1. Remove light from firearm before replacing battery.
2. Unscrew the head of the light by the bezel.
3. Insert one CR123 battery into the light.
4. Screw the head of the light back into place.

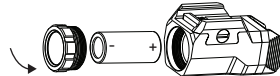

WARNING: Lithium batteries can explode or cause burns if recharged, shorted, disassembled, exposed to water or high temperatures of fire. Follow battery manufacturer's guidelines for safe storage, use and disposal. If light has been submerged, dry exterior of light prior to replacing batteries. Fresh and salt water will damage internal electronics and batteries.

Do not use counterfeit or inferior quality batteries, as they do not meet safety and performance standards and may cause personal and property damage. Ensure safety and performance by purchasing established brands, such as: Duracell, Energizer, or Panasonic.