
Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE. Prior to using the product, check that the product and all parts were not damaged during delivery. Do not use this product if it is damaged or broken.

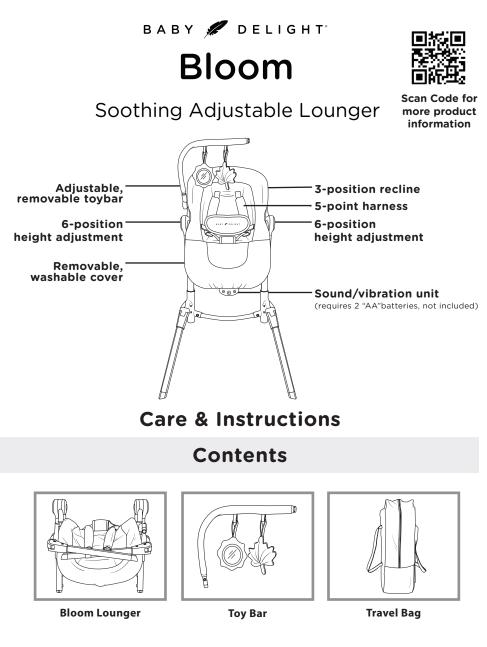

©2021 Baby Delight, Inc. 1-401-333-6800 www.babydelight.com

# WARNING: IMPORTANT! KEEP FOR FUTURE REFERENCE!

FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from chairs. Falls can happen suddenly if child is not restrained properly.

Always use restraints, and adjust to fit snugly.

**ONLY** use the seat in the upright position with a child capable of sitting upright unassisted. Otherwise keep child in the recline positions.

Stay near and watch child during use.

**NEVER** lift and/or carry child in product.

**STOP** using product when child has reached 20 lbs (9 kg.).

#### **Suffocation Hazard :**

**NEVER** allow child to sleep in product.


#### **Battery Warnings:**


Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickelcadmium) batteries.

Remove batteries before putting infant lounger seat into storage for a prolonged period of time.


# Assembly/Operating

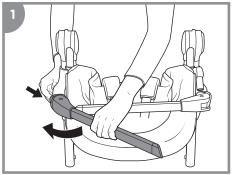


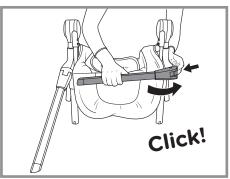


Remove BLOOM from TRAVEL BAG and unfold four LEGS outward and downward until you hear a "click" sound.

#### **Assembly/Operating - Continued**

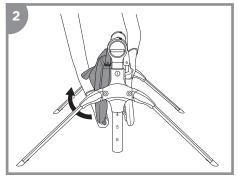


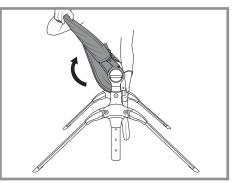


Pull SEAT LATCH under the top of the SEAT and rotate the SEAT up until you hear a "click" sound.

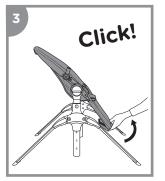


Pull bottom of SEAT upward until you hear a "click" sound.

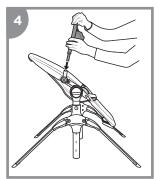


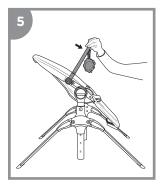

Plug TOYBAR into TOYBAR CONNECTER with TOYS oriented over SEAT.


To adjust the TOYBAR, pull the TOYBAR forward or push the TOYBAR back.

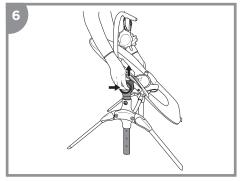

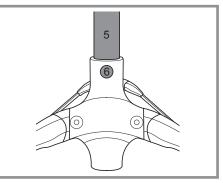


The BLOOM has 6 levels of height adjustment. To adjust height, squeeze the HEIGHT ADJUSTMENT LEVERS on each side of the FRAME and adjust the BLOOM up or down until you hear a "click" sound at desired height. NOTE: Please make sure the HEIGHT ADJUSTMENT NUMBERS on each side match each other.

### **Assembly/Operating - Continued**

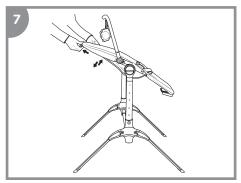


There are three adjustments to the angle of the SEAT. Pull SEAT LATCH on the back of the SEAT outward to adjust angle up or down.

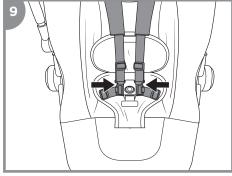


Buckle child into child RESTRAINT and tighten STRAPS for a snug and secure fit.

#### Sound/Vibration Unit:

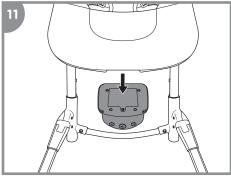


Slide SOUND/VIBRATION UNIT off the LOWER FRONT FRAME.


Using the 5-point harness:

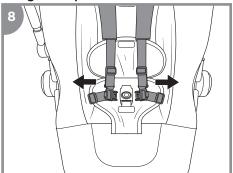

Unfasten the CROTCH RESTRAINT COVER up and unbuckle child RESTRAINT STRAPS and place child in SEAT.

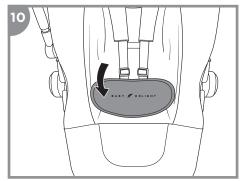


Refasten the CROTCH RESTRAINT COVER.

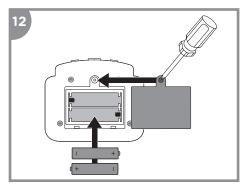


Unscrew BATTERY DOOR on back of UNIT and insert 2 "AA" batteries, in accordance with the +/- polarity shown, and replace BATTERY DOOR and secure with screw.


## **Assembly/Operating - Continued**

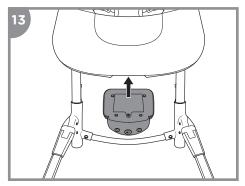


Slide SOUND/VIBRATION back onto LOWER FRONT FRAME.

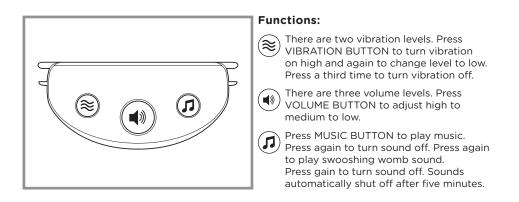


#### Folding the Bloom Lounger

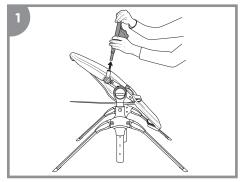

Remove the TOYBAR by lifting it straight up and out of TOYBAR CONNECTER

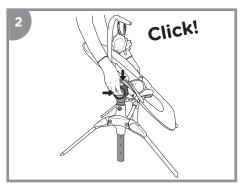


Squeeze the HEIGHT ADJUSTMENT LEVERS on each side of the FRAME and adjust the BLOOM down until you hear a "click" sound at height #1.

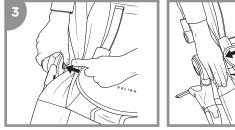







Press BUTTONS on the inside of FRAME KNUCKLES with thumbs and rotate bottom of SEAT down with fingers until it is facing down and you hear a "click" sound.

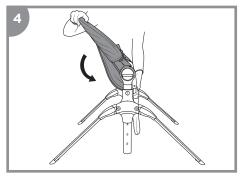

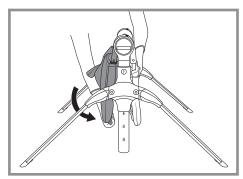


Hold BOTTOM of SEAT with one hand and pull SEAT LATCH and rotate TOP of SEAT down with the other hand until top SEAT is facing down.


#### Folding the Bloom Lounger - Continued

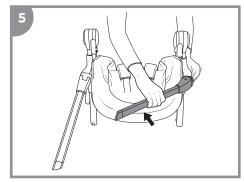


Press OUTSIDE LEG LOCK BUTTON on LEG and rotate LEG up.

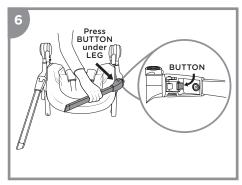

Press INSIDE LEG LOCK BUTTON on the underside of the LEG.

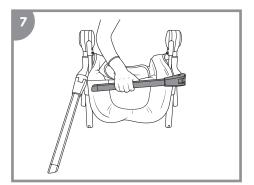

Fold LEG in. Repeat for the other three LEGS.

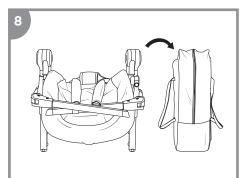

Place BLOOM and TOYBAR into TRAVEL BAG.

#### **Care & Cleaning**

Simply use a mild soap and damp cloth to wipe down the FRAME and SEAT COVER.

To machine wash the SEAT COVER:

Slide sound/vibration unit off the lower frame.

Unzip SEAT COVER on the back of the FRAME and top and bottom and remove COVER and wash on gentle cycle and hang to dry. Replace COVER over FRAME and zip COVER at TOP and BOTTOM of back of FRAME.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

#### **Limited Warranty**

At Baby Delight, Inc. we make innovative and high quality products for babies, children and their parents. We warrant this product to be free from defects in material and workmanship existing at the time of manufacture for a period of 90-days from the date of initial purchase (sales receipt is required for proof of purchase). If such a defect is discovered during the limited warranty period, we will, at our sole option, repair or replace your product at no cost to you. This limited warranty does not cover claims resulting from misuse, failure to follow the instructions on installation, maintenance and use, abuse, alteration, involvement in an accident, and normal wear and tear.

For warranty service or replacement part information:

USA: Please call 1-401-333-6800, email consumercare@babydelight.com, or write to Consumer Services: 30 Martin Street, Suite 3C, Cumberland, RI 02864 Some replacement parts may be available for purchase after this limited warranty expires. Please visit us at www.babydelight.com or call us at 1-401-333-6800 or details.



#### www.babydelight.com

© 2021 Baby Delight, Inc. | 30 Martin Street, Suite 3C, Cumberland, RI, 02864, USA 1-401-333-6800 | consumercare@babydelight.com BD06020