



MULTIFUNCTIONAL WIRELESS SCRUBBER

Instruction Manual



Please read the instruction manual carefully
before using the machine

 
CONTENT

Product Features.....	1
Product Structure.....	1
Packing List.....	2
Product Specification.....	2
Electrical Diagram	3
Usage Instruction.....	3
Precautions	4-5
Trouble shooting.....	5
Cleaning and Maintenance	6
Eco Standards	6
Product Warranty Card	9

Product Features

- Unique appearance is simple and exquisite, the handle is comfortable and easy to hold, and it's cordless and portable design.
- One button to start, easy operation.
- Equipped with multi functional cleaning brush, detachable and easy for changing components.

Product Structure

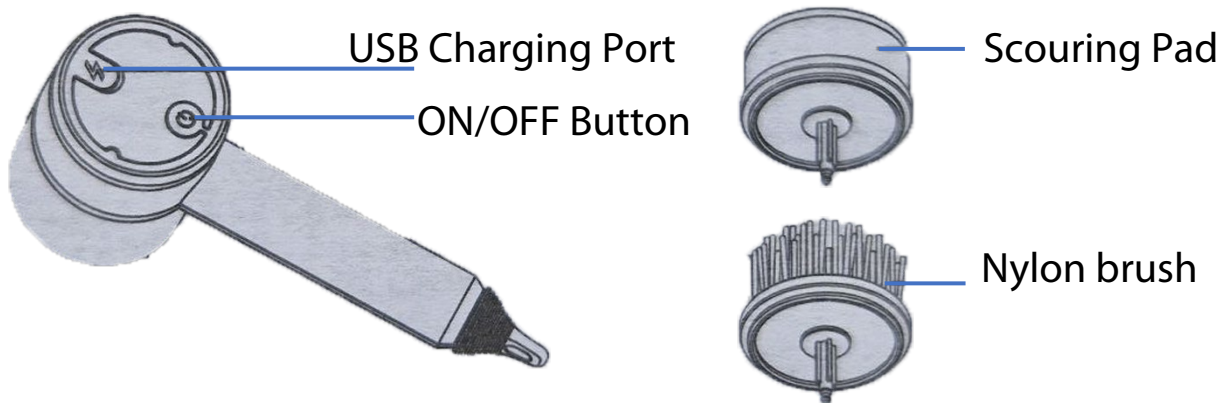

1. Double click ON/OFF Button, the machine start to work in Low speed.
2. Press the button again, it turns Middle Speed; press again, it turns to High Speed. When press the third time, it stops working.
3. Cyclic operation according to Step 1 and Step 2 above.

Packing List


No.	Part's Name	Unit	Qty
1	Main Machine	Pcs	1
2	Scouring Pad	Pcs	1
3	Sponge Brush	Pcs	1
4	Nylon Brush	Pcs	1
5	Cleaning Ball	Pcs	1
6	Bottle Brush	Pcs	1
7	Corner Brush	Pcs	1
8	USB Cable	Pcs	1
9	Instruction Manual	Pcs	1

Product Specifications

Electrical Specifications


Voltage	3.7 V _{DC}
Charging time	4 h
Rated Current	1.2 A
Rated Input Voltage	5 V _{DC}
Rated Power	20 W
Rated Input Current	1 A

 Electrical Diagram

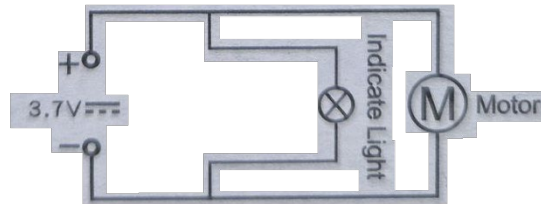

Usage Instructions

 
Preparation before using:

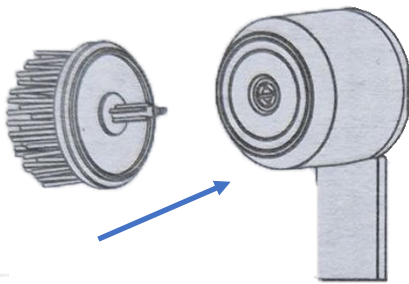

1. Install the cleaning brush on the main machine, there will be a sound of "Click" when it's installed well.



 2. Ensure that the machine is not in working status when you install the parts on the machine, the indicate light must be off. Start the machine with ON/OFF button and choose the proper speed for working.

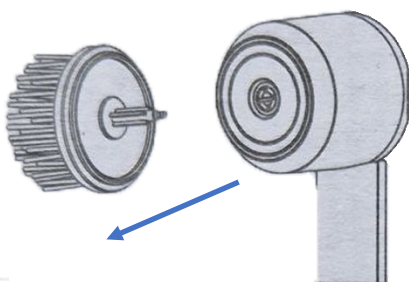

3. After finished the cleaning work, stop the machine with button till the light off, detach the brush and clean it.

Indicate light instruction:

Status	Light	Status	Light
Charging	Red light keeps on	Working	Blue light keeps on
Full charged	Blue light keeps on	Out of battery	Red light on 5s

Precautions

1. It's cordless machine, charge it full before the first time using it.
2. After continuously working 5 minutes, the machine must stop 15-20 minutes before using again, otherwise the main body will get hot and the service time would be shorter.
3. Don't use the metal brush, nylon brush, cleanser, thinner to clean the machine.
4. Don't disassemble, squeeze, puncture the machine, make it short-circuit or put it in water, fire or the environment with temperature higher than 60°C.
5. Use the machine in the environment with temperature 0~40°C. Charge the machine every three months if you don't use it for long time in case of the damage of battery. Charge the machine in time if it's out of battery.
6. Turn off the machine when you install or detach the brush. Turn off the machine before cleaning.
7. Please use the accessories attached to this machine, otherwise it will cause unnecessary damage.
8. Before using the machine, ensure the components are well installed and not loose.
9. Don't put this machine into dishwasher, microwave oven, disinfection cabinet, don't wash or disinfect it in hot water with temperature over 60°C in case of damage or deformed.

10. Keep the appliance and its cord out of the reach by children. This machine is not intended to be used or played by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
11. Do not allow fingers, clothing, hair, etc. to touch rotating parts when the machine is working.
12. This machine is for home use only, not for commercial use.
13. Do not repair or modify the machine by yourself if you're a non-professional maintenance person. Otherwise it may cause fire, leakage, and abnormal operation of the machine.

Trouble shooting

Failure	Indicator light	Reason analysis	Trouble shooting
<i>The machine doesn't work when double clicking the on/off button</i>	Red light keeps on	Out of battery	Charge the machine
	Blue light keeps on	The motor is damaged or blocked	Screw the motor shaft, if it cannot be moved, send the unit to a repair store.
<i>Can't be charged</i>	Lights are off when charging	Check if the charging port is loose or not connected correctly	Change the charging cable
<i>A bad smell comes from the motor after prolonged use of the machine</i>	Blue light keeps on	It's common for new machines	If the issue persists after multiple uses, send it to a repair store

Remarks: The above are common failure analysis and troubleshooting methods. For other failures, please contact the dealer or go directly to the repair point for inspection and repair. Please do not disassemble and repair by yourself.

Cleaning & Maintenance

1. Do not use water to wash the main machine; only use a soft cloth to clean it. The brush can be washed with water.
2. Do not clean the brush head with abrasive or corrosive detergents.
3. Disinfecting all parts of this product at high temperatures is prohibited.
4. After cleaning, dry the machine with a cloth, reinstall it, and then store it in the correct position.
5. Charge the machine at least once every 3 months if you do not use the machine for a long time.

Eco Standards

This chart is for the product: SpotLess Multifunctional Wireless Scrubber

Statement of Hazardous Substances According to the Marking

Requirements for Restricted Use of Hazardous Substances in Electronic and Electrical Products GB/T26572-2011 (also known as China RoHS20), the names and contents of hazardous substances that may be contained in this product are listed in the following part.

The form is compiled according to SJ/T11364.

O: indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T26572 (IEC62321).

X: indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T26572.

Remark: For the part marked with X in above, the content of hazardous substance exceeds the limit requirements, for there is no mature alternative technology in the industry.



Hazardous
Substance
Restriction
Sign

Environmental protection use period of 10 years: it means that the hazardous substances contained in this product will not leak or change, and the user will not cause serious pollution to the environment or cause serious damage to their personal or property under the conditions described in the product manual. It's the deadline of the machine using.

Arrow cycle symbol: indicates that this product can be recycled. After the expiry of the use limit or after maintenance and unable to work normally, it should not be thrown away at will, and should be handed over to a formal recycling company and a qualified enterprise for disposal of waste electrical and electronic products for disposal.

Hazardous Substance Restriction Sign

Environmental Protection List



Name	Toxic and Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated diphenyl ether (PBDE)
Main engine cover	0	0	0	0	0	0
Wires	0	0	0	0	0	0
PCB Board	0	0	0	0	0	0
Battery	0	0	0	0	0	0
Motor	0	0	0	0	0	0
Charging cable – white insulation	X	0	0	0	0	0
Charging cable - charging port insulation	X	0	0	0	0	0
Charging cable – soldering tin	X	0	0	0	0	0
Motor - soldering tin	X	0	0	0	0	0
PCB board - soldering tin	X	0	0	0	0	0
PCB board - chip resistor	X	0	0	0	0	0
PCB board - soldering tin for small PCB board	X	0	0	0	0	0

Warranty Card

User Information

Name _____

Phone number _____

Email _____

Postal code _____

Address _____

Product Information

 
Product name _____

Sale date _____

Email _____

Postal code _____

Warranty reason _____

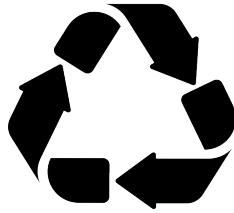

RECYCLABLE

Inspection Certificate

Inspector: _____

Date: _____

Result: _____

Special statement:

Due to ongoing product improvements and technical updates, the parameters may change without prior notice. Please refer to the actual product for the most current specifications.