

UW127



Unfinished Outdoor Rocker

(Parts Included)

- A. Chair Back
- B. Chair Seat
- C. Right Rocker Arm
- D. Left Rocker Arm
- E. 6 - 2 ½" square/Phillips screw
- F. 2 - 4 ¼" Lag Screw
- G. 2 - washers

(What you will need)


- Phillips or square screwdriver
- 1/2" socket

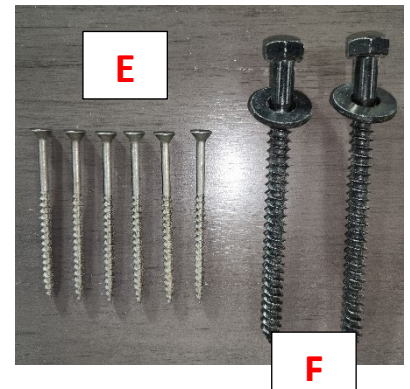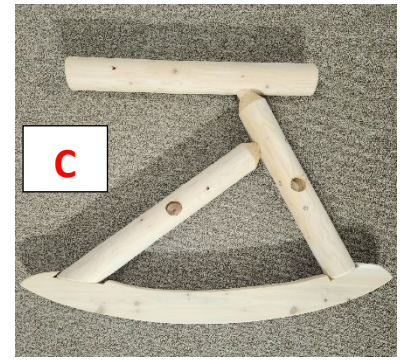

Step 1. Insert the tenons of the Chair Back (A) into the holes of the Chair Seat (B)

Step 2. Screw 1 (E) screw about ½" below the Chair Back Post at a 45° angle so that it hits the Chair Back Post Tenon


Step 3. Repeat Step 2 for the other Chair Back Post

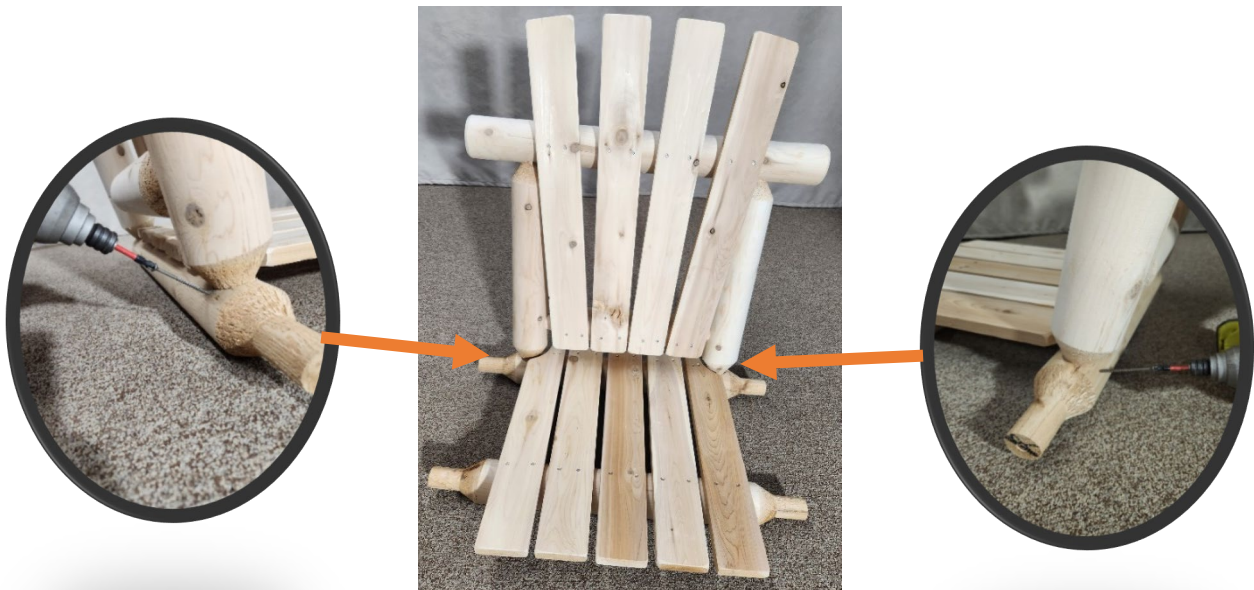

Step 4. Insert the 2 tenons from the Chair Seat (B) into the 2 holes in each Rocker leg (C) and (D)

Step 5. Screw the (E) screws $\frac{1}{2}$ " below the Leg holes at a 45° angle so that it hits the Chair Seat tenons

(Tip: attach BOTH Left and Right legs BEFORE securing with screws)

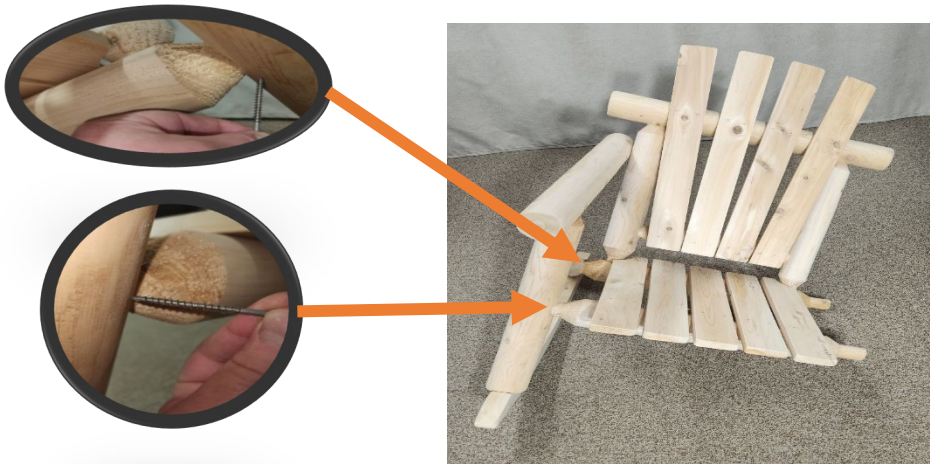

Step 6. Align the predrilled hole in the Arm with the Seat Back Post and put the washer (G) on the $4 \frac{1}{4}$ " Lag screw (F) and screw it with a $\frac{1}{2}$ " socket

