

TPMS QUICK INSTALLATION INSTRUCTIONS

These QUICK INSTALLATION INSTRUCTIONS will get you up and running. Please scan the QR Code for the TST-770 Full Line Manual with complete features and programming instructions, or visit www.TSTtruck.com/product-support and click on the 770 Manual icon for download and printing.



SCAN QR FOR
COMPLETE
770 MANUAL

Remove screen protector and Power ON the display using switch on the right side of display. **SET THE FOLLOWING BEFORE PAIRING SENSORS:**

COLD TIRE PRESSURE ALERT SETTINGS - TRAILER EXAMPLE


The following instructions will utilize the **Default** High/Low Pressure Alert thresholds. When inputting **Cold Tire Pressure** (CTP) with this option, **High Pressure Alert** will be set at 25% above CTP and **Low Pressure Alert** will automatically be set at 10% below CTP (for **Manual** High/Low Pressure Alert thresholds, go to page 13 of the manual).


STEP 1




To adjust default **Cold Tire Pressure** settings, touch  to enter into **Pressure Alert Settings**.


STEP 2

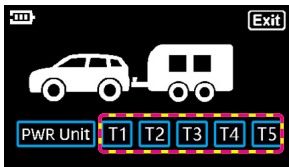

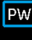Touch  to enter Trailer Cold Pressure screen for Trailer One. T2-T5 can be used for additional trailers.

 STEP 3

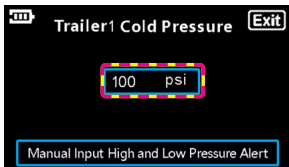

To set **Trailer Axle** cold tire pressure, touch  to enter the **Keyboard Input Screen**. Find the CTP value on the manufacturers placard, usually on the front drivers side of the trailer.

 
STEP 4




Enter your preferred Cold Tire Pressure.


STEP 5



Touch  to exit **Keyboard Input Screen** after **Trailer Axle** cold tire pressure settings are changed. **Trailer (1, 2, 3, 4 or 5) Axle Cold Pressure** screen will appear.

STEP 6

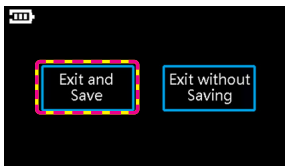

Touch  again to exit **Trailer Axle Cold Pressure** screen. To save your input, touch **Exit and Save**. To cancel, touch **Exit without Saving**. Selection returns you to the Power Unit/Trailer **Main Screen**.


AUTOMATIC CODE LEARNING - TRAILER EXAMPLE

STEP 1




Touch **Automatic Code Learning** to enter into **Automatic Code Learning** settings.

STEP 2

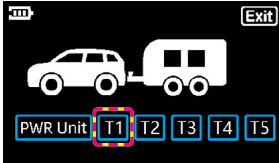


Touch **T1, T2, T3, T4** or **T5** to enter **Sensor Code Learning** settings for respective trailer.

STEP 3

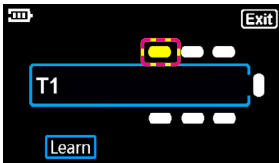


Touch **Learn** to select the tire you want to code to the sensor. Selected tire will flash white and yellow and the **Learn** icon will appear on the screen.

STEP 4

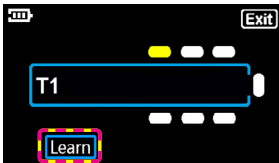


Touch **Learn** icon. Icon will change to **Learn**. Touch a sensor to the **Sensor Pairing Area** on back of the display (see images at right) to learn sensor ID code.

STEP 5

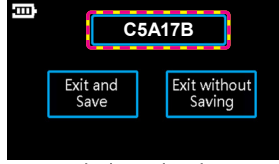

If sensor code learning is successful, sensor ID code (Example: C5A17B) will appear on **Sensor Code Capture** screen with options to **Exit and Save**. After successful code learning, touch **Exit and Save** to return to sensor code learning screen.

STEP 5

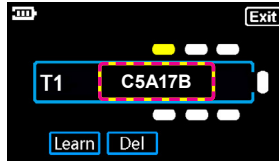


The programmed tire position will blink yellow and sensor code will show (Example: C5A17B) in power unit on **Sensor Code Learning** screen.

Repeat for remaining tire positions.

Touch **Exit** to finish and return to **Main Screen**. Learned code tire positions will blink yellow and will show pressure and temperature readings.

NOTE: For internal sensors hold the **Sensor Pairing Area** to the tire, at the sensor location, which is located 180° from the valve stem.

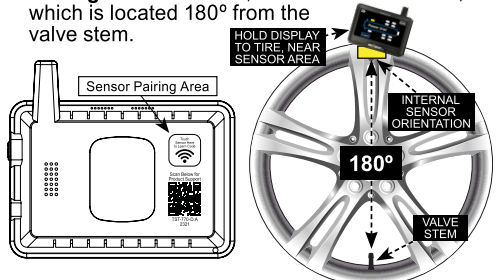

CUSTOMER SUPPORT INFORMATION:

WEB: www.TSTtruck.com
EMAIL: support@TSTtruck.com

PHONE: (770) 889-9102
HOURS: Monday-Friday 9am-8pm,
Saturday 9am-2pm (EST)



© 2022 Truck System Technologies and Pressure Systems International Inc.