# **USER MANUAL**

### **Dermalogic** Towel Warmer Cabinets

KDA-TWAPP-08 / KDA-TWAPP-20 / KDA-TWAPP-20-A







These new towel warmer cabinets come in stylish stainless steel finish or classical wood-grain with pull-down doors. While the metallic finish model can compliment any salon decor, the wood-grain finish is designed to blend into traditional wood cabinetry and furnishings. These warmers are also equipped with UV lights to ensure that your towels come out sterilized and at a steaming temperature for your needs (between 150-170 F).










## **Dermalogic** Towel Warmer Cabinets

Model	Dimension(mm)			INPUT	Frequency	Power (W)		Capacity	Weight
	L	W	Н	VOLTAGE: (V)	(Hz)	Heating	UV Lamp	(L)	(kg)
KDA-TWA PP-08	330	280	260	110/120	60	130	3	7	5
KDA-TW APP-20	450	285	330	110/120	60	180	3	20	7.5
KDA-TWA PP-20-A	450	285	330	110/120	60	180	3	20	7.5

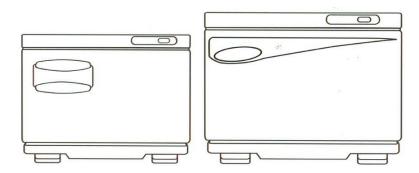

Thank you for purchasing our Dermalogic Towel Warmer. To use this product safely and effectively, please read this manual carefully and abide by all directions and notes.

#### **Precautions**


- Place this product in a stable, well-ventilated area with low ambient temperatures, away from water.
- To reduce the risk of electric shock, operate this unit only when it is properly grounded.
- Install the water tray securely, using both hands to insert it horizontally.

#### Operation

- 1. Turn the power switch to the "OFF" position.
- 2. Securely insert the plug into the power outlet.
- 3. Open the door and remove the shelves from the warmer.
- 4. Place towels on the shelves and put the shelves back into the warmer. Do not stack too many towels onto the shelves, in order to prevent direct contact between the towels and the body of the warmer itself.
- 5. Close the door securely.
- 6. Turn the power switch to the "ON" position.
- 7. Due to the high temperatures inside the unit, do not directly contact the interior of the warmer when removing towels.
- 8. Regularly empty the water tray before it overflows.

### Maintenance

- 1. Turn the power switch to the "OFF" position.
- 2. Remove the plug from the power outlet.
- 3. Allow the temperature of the warmer to decrease to a safe level, then remove all towels from the warmer and wipe the unit dry.
- 4. Empty the water tray.
- 5. Wipe the interior of the warmer with a dry towel to clean the unit. If you experience difficulty in removing stains from the unit, add a small amount of tableware cleaner to a piece of cloth to wipe the stains away. Do not use any kind of solvents (such as paint thinner) or polishing powders when cleaning this unit.
- The shelves can be cleaned by first removing the shelves from the warmer and then washing them with water.
- 7. After cleaning, leave the towel warmer door open, and allow the unit to dry.

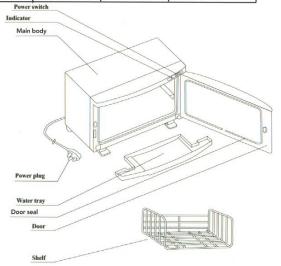

#### Safety

- Please read this entire section carefully before operating this product.
- All notes here have been included to help ensure the safe operation
  of this product, and to prevent unnecessary accidents. Additionally,
  these notes will help diagnose any issues you may experience.
   Please keep these notes within easy reach, in case of any issues.

Forbidden Do not crush, damage, twist, bend, stretch, tighten, or curl the

$\bigcirc$	)	electric cord. Weighting down the cord or inserting the plug into inappropriate areas may also cause damage to the cord.
0	Forbidden for outdoor service	This product is not suitable for outdoors use. If this product is used in an area affected by rain, there will be the risk of electric shock.
0	Forbidden for branch wires	Plug this unit into power outlets with a rated power of at least 15A. Do not plug this unit into any twin or branch sockets.
0	Forbidden	This unit is not suitable for use by children. Place this product out of reach of children to prevent the risk of accidental scalding or electrical shock.
•	Take out	When removing the plug, do not do so by grabbing the cord. This may cause damage to the interior wires, or deform the metal plug inserts.
0	Do not operate with wet hand	Do not operate this unit with excessive moisture. Touching the plug while your hands are wet may result in electric shock.
0	Attention	Do not drop this unit or cause it physical shock, as this may result in operational issues or breakdowns.
0	Attention	Do not place towels inside plastic bags or any other containers before placing them onto the shelves of the towel warmer.
0	Attention	Do not allow the towels to directly contact the interior of the warmer.
0	Attention	Do not leave towels inside the unit for over 24 hours, to reduce the risk of damage or odor.
0	Forbidden for decomposition	Disassembly, repair, or reassembly of this product without the permission of the manufacturer or other professional service personne may result in abnormal operations and an increased risk of accidents.
4	Ground wire	Plug this unit only into three-pronged outlets with proper grounding, to decrease the risk of electrical shock or other issues.