

FK-S|FADE KING Hair Trimmer

CONTENTS



Components	1
Parameters	2
How to Recharge	2
Fixed-Length Function	3
Cutter Assembly and Disassembly	4
Cutter Cleaning and Maintenance	5
Precautions For Use	6
Warranty Card	7

24h Customer Support
Email:support@fade-king.com



Components

1

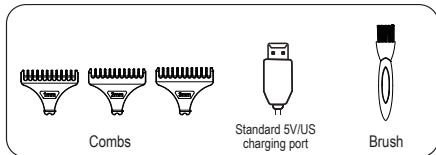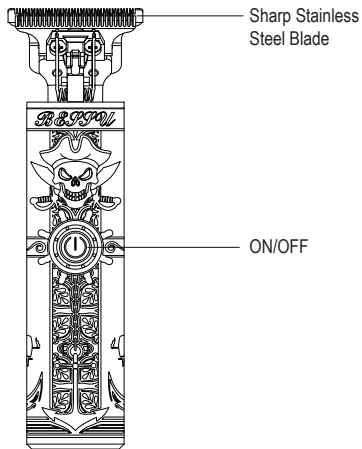


Parameters

2


Speed type	6500 RPM (±200)	Battery	1200mAh
Power	10W	Blade	5Cr13 T-blade
Voltage	3.0V	Material	Zinc Alloy
Charge time	2 hours	Charging method	USB Type-C
Use time	180 minutes	Input	5V 1A

How to Recharge

 1



2

 

1. Insert the charger into the tail of the clipper, connect to the power to start charging.
2. The liquid crystal indicator lights up, indicating that it start charging, when the red light changes to the green light fully charged.

Note: when the power is switched on after charging, the indicator lights up to indicate that the charging head is reversed or drawn to be replaced immediately.

A: Features(1、 2、 3mm) 3 lengths adjustment to control the hair length.


1. To determine the length of haircut.
2. To select the appropriate limit comb.




Mount the limit comb:

1. Align the limit comb with the blade edge.
2. Slightly forward push to mount it.

Disassemble the limit comb: Just pull hard the limit comb.

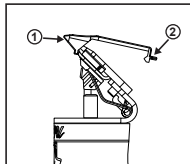

Blade Removal

 


Such as a screwdriver with the rotary cutter head under part, remove the cutter head




To prevent the knife from falling, use another hand to hold it

 The blade spring is aligned with the spring A on the knife head B. Then, put in two fixed screws, and hold down.




 Tighten the screw with a screwdriver to ensure, the head of the knife will not fall off.




Warm tip: do not disassemble the knife head without any skill.

Taper Blade Cleaning

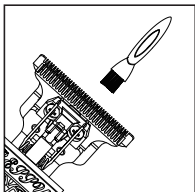


Clear up the blade with cleaning brush.


Taper Blade Maintenance

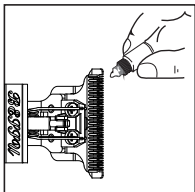

Before or after use, maintain the blade by dripping some oil on the red point places like the left picture.

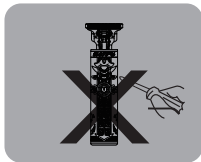

1. Please do not disassemble the product.
 2. The hair trimmer can not be washed.
- Please keep it away from wet conditions.

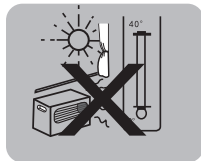

3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 40°C or below 0°C.

- ※ The product can produce little heat during using or charging, which is normal.
- ※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Product Name	Professional Hair Clipper	Warranty Period
Product Model		One year from the purchasing date
Purchasing Date	Month Date Year	To Month Date Year

Customer	Address		Name	
			Phone Number	
Point of Sale	Address		Name	
		Name	Phone Number	

Following Guarantees Provided For The Product

1.The product is produced through strict quality management and inspection.

2.If malfunction occurred in fair use, the consumer can enjoy free warranty service according to the warranty card in the purchasing store or our repair center.

(The battery and blade belong to consumables, not covered by warranty but provided with fee)

3.No free services for the following situations:

A.Damages caused by repair or reformation not approved by our company.

B. Damages caused by false or neglectful use, or by accidents.

C. Damages caused by natural disasters or abnormal voltage.

D. Damages caused by ignoring attentions provided with in the product specification.

4.The product is only guaranteed when provided the warranty card instead of the invoice.