BUTTON	FUNCTION
	TEMP
	JETS
	LIGHT
	BLOWER



Page 2.	SETTING THE TIME CLOCK 12HR TIME
Page 2.	SETTING THE MODE FOR HEATING ON DEMAND
Page 2.	HOW TO FILP SCREEN DISPLAY
Page 3.	SETTING FILTER CYCLE 1
Page 4.	SETTING FILTER CYCLE 2
Page 5.	ADJUST TEMPERATURE READING BETWEEN F/C
Page 5.	HOW TO LOCK & UNLOCK THE TEMPERATURE
Page 6.	HOW TO LOCK & UNLOCK THE TOUCHPAD
Page 7.	HOW TO ADJUST TEMPERATURE INTO LOW AND HIGH RANGE
Page 7.	ADJUST TEMPERATURE

### **SETTING THE CLOCK TIME 12 HOUR TIME**

Using the clock A or P will appear on the bottom right of the display to indicate A for am & P for pm.

Press temp until the temperature flashes.

Press the light button three times until 'TIME' appears.

Press the temp button to adjust the hour.



Press the light button to set the hour.



Press the temp button to adjust the minutes.



Press the light button to set the minutes.

Once the time has been set the spa will take you back to the current water temperature.

### SETTING THE MODE FOR HEATING ON DEMAND

Ready Mode allows the heater to run whenever heat is required to maintain a desired temperature.

Ready in Rest Mode allows the heater to run only while filter cycle 1 or filter cycle 2 is running, this will not maintain a desired temperature.



Press temp until the temperature flashes.



Press the light button twice until 'MODE' appears.



Press the temp button to adjust to 'READY or REST RANGE'



Press the light button to set.

Once the mode has been set the spa will take you back to the current water temperature.

### **HOW TO FLIP SCREEN DISPLAY**



Press temp until the temperature flashes.



Press the light button four times.

The word FLIP will appear on the display.



Press the temp button once to rotate the screen.



Press the light button to set.

Now the current water temperature will be displayed.

Flip allows the touchpad to be read from either inside or outside of the spa.

### **SETTING THE FILTER CYCLE 1**

Press temp until the temperature flashes.
riess temp until the temperature hashes.

Press the light button seven times until 'FLTR 1' appears.

Press the temp button once.

# BEGN will now display.

Press the temp button to adjust the hours.

Press the light button to set hour.

Press the temp button to adjust the minutes.

Press the light button to set minutes.

# The display will now show 'RUN HRS'

Press the temp button to adjust the hours.

# SET THE DURATION ONLY NOT THE TIME OF DAY, SO FOR 2 HOURS SELECT 2:00

Press the light button to set the hour.

 
Press the temp button to adjust the minutes.

Press the light button to set the minutes.

# This will now display what time of day the filter cycle will end.

Press the temp button once to go back to the current water temperature.

## **SETTING THE FILTER CYCLE 2**



Press the light button eight times until 'FLTR 2' appears.

Press temp until the word 'ON' appears on the touchpad.

Press the light button to set.

## The display will now show BEGN

Press the temp button once.

Press the temp button to adjust the hours.

Press the light button to set hour.

Press the temp button to adjust the minutes.

Press the light button to set minutes.

# The display will now show 'RUN HRS'

Press the temp button to adjust the hours.

# SET THE DURATION ONLY NOT THE TIME OF DAY, SO FOR 2 HOURS SELECT 2:00

Press the light button to set the hour.

Press the temp button to adjust the minutes.

Press the light button to set the minutes.

# This will now display what time of day the filter cycle will end.

Press the temp button once to go back to the current water temperature.

## ADJUST TEMPERATURE READING BETWEEN F/C

Press temp until the temperature flashes.

Press the light button nine times until 'PREF' appears.

Press the temp button once.

# The word "F/C" will appear on the display.

Press the temp button to adjust to Fahrenheit (F) or degrees Celsius

Press the light button to set.

Press the light button twice now the current water temperature will appear.

#### **HOW TO LOCK & UNLOCK THE TEMPERATURE**

### **LOCKING THE TEMPERATURE**



Press temp until the temperature flashes.



Press the light button five times until 'LOCK' appears.

# The word lock will appear on the display.



Press the temp button three times to turn the lock on.



Press the light button to set.

In lock mode it will not allow you to make changes to the temperature.

# **UNLOCKING THE TEMPERATURE**



Hold the temp button in.



Press the light button twice times until 'UNLOCK' appears.

The word unlock will appear on the display.

## **HOW TO LOCK AND UNLOCK TOUCHPAD**

### **LOCKING THE TOUCHPAD**

Press temp until the temperature flashes.

Press the light button five times until 'LOCK' appears.

# The word lock will appear on the display.

Press the temp button once.

Press the light button once.

Press the temp button once.

Press the temp button once.

Press the light button once.

In this mode the entire touchpad is locked.

# **UNLOCKING THE TOUCHPAD**

Hold the temp button in.

Press the light button twice times until 'UNLOCK' appears.

The word unlock will appear on the display.

## ADJUST TEMPERATURE BETWEEN LOW AND HIGH RANGE



Press the temp button until the temperature flashes



Press the light button once until 'TEMP' appears.

The word "TEMP" will appear on the display.



Press temp button to go into high or low range.



Press the light button to set.



Low range will keep the spa between 10 – 37 degrees.



High Range will keep the spa between 37-40 degrees.

# **ADJUST TEMPERATURE**



Press temp to increase or decrease the temperature.

If you want to heat the spa above 37 degrees make sure the spa is in high range with the arrow facing up.

If you want to heat the spa below 37 degrees make sure the spa is in low range with the arrow facing down.

To decrease the temperature, you will need to increase it first then it will go back down.