

Thank you for choosing our mobile phone! Please read this manual before use. Check out our website for video guides of how to use your phone

www.ttfone.com

TT170 User Manual



We reserve the right to upgrade the software and product and/or to make changes to this user manual without prior notice. The icons in this user manual may slightly differ from your phone, depending on the phone you purchased. All rights reserved.

TT fone www.ttfone.com

1. Safety Instructions

This user manual includes important safety information. Please read below instructions carefully. It may be dangerous or illegal if you do not follow these instructions.

Pay attention to Traffic Safety
Obey local traffic laws and do not use the phone while driving. Using a cell phone while driving is dangerous and it is illegal in some areas. Radio frequency (RF) signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer of your vehicle for any equipment that has been added. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area.

Pacemaker Interference
Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker in order to avoid potential interference with the pacemaker.

Turn Off Your Cell Phone in Medical and Health Care Facilities.
Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Switch Off on Airplanes
Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless

devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Accessories and Batteries
Use only the approved accessories and batteries. Please do not try to use with any product that was not manufactured for use with this phone. Please be sure the phone has been switched off before taking out the battery. Please dispose of scrap batteries properly according to the local regulations.
Cell Phone Should Be Turned Off Near Sites of Explosion.
Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations and in any area with a potentially explosive atmosphere and obey all signs and instructions. Observe restrictions on the use of radio equipment in fuel depots, storage, chemical plants or where blasting operations are in progress.

Using the Phone Correctly
Please use this phone in its normal intended position. Do not let children use the phone without supervision. Your phone contains small parts such as SIM card, which can be accidentally swallowed by a child.

Your Phone is Not Waterproof
This phone is not waterproof. Please do not expose your phone to wet weather or environment (such as rain, snow, seawater, etc.).

2. Your Phone



1. Navigation key: Press to navigate the menus, shortcuts can be set to this key.
2. Left Soft key: Hold down the Left Soft key for 3 seconds to lock the keypad. Hold down the Left Soft key again to unlock the keypad. Also use the Left Soft key to select menu options.
3. Call Key: Enter a number and Press the Call key. Select either "1. SIM1 " or "2. SIM2 " using the down key then press the Call key to call.
4. Right Soft key: Press to access the contacts.
5. End key: Press and hold to turn on and off the phone, press to end calls, press to exit menus.
6. Number keys: Press to input numbers, hold down for speed dial.
7. Star key: Press twice to input + symbol for international calls.
8. Hash key: Press and hold to activate Silent mode.
9. 0 key hold down to activate the torch, hold down again to deactivate

Headset	Bluetooth	Insert sim card
Network Signal Status	Unread Message	Silent mode
Battery Status	Memory Card installed	Meeting mode
Alarm	Missed Call	

3. Getting started



Remove the Back Cover

Open the battery cover carefully by prising open from the bottom right corner where you will find a small notch.

Install the SIM cards and battery
For availability and information about using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor. Note: The SIM card and its contacts are easily damaged by scratches or bending, so please be careful when handling, inserting, or removing the card.

Note: Keep all SIM cards out of the reach of small children.

1. Ensure the phone is switched off and the charger is disconnected before removing the battery.
2. With the back cover removed, install the SIM cards by sliding them into the nests (SIM1 and SIM2) and under the metal holding plates. Ensure the angled corner is on the lower right hand side. (To remove the SIM card, gently press on it and slide it out of its nest.) Please note you can only use a standard SIM card not a Micro or Nano SIM. You can also install a microSD memory card into the slot below the SIM slots.
3. Install the battery into the battery slot, ensuring that the three metallic stripes on the battery align with the three metallic prongs in the battery slot.
4. Put on the battery cover. Ensure the cover is completely closed and the matching sound (click) could be heard.
5. Plug the phone in to charge it fully.

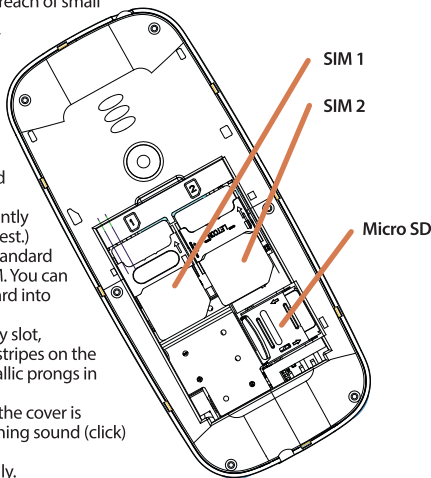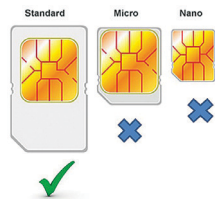

Turning the Phone On

To turn the phone on, press and hold the end call key until the screen lights up.

If you switch on the mobile phone before inserting the SIM card, it prompts you to insert the SIM card. The mobile phone checks whether the SIM cards are valid automatically after it is inserted. When you first switch on your phone it will ask you to set the language and set the date, do this by typing in the date and press the Left Soft key to confirm, now set the time and again press the Left Soft key to confirm.

The following prompts appear on the screen in sequence when the mobile phone is just switching on:

- Input phone password - If the password of the phone has been set.
- Input PIN - If the password of the SIM card has been set.
- Searching - The mobile phone is searching for available network.

Turning the Phone Off

To turn the phone off, press and hold the end call key until the screen turns blank.

Charging the Battery

The battery can be charged when the phone is either on or off. Please ensure the battery is inserted into the phone before charging. The charging time is three hours.

To connect the charger:

1. Insert the cord into its port on the bottom panel of the phone
2. Plug the other end of the cable into either a computer USB socket or use any USB mains charger that runs at 240V.

To disconnect the charger:

1. Unplug the wall charger.
2. Remove the cord from the phone.

Battery Level Indication



EMPTY FULL

Low Battery Alert

The phone will sound an alert when the battery is low and display a message of low battery on the screen.

PLEASE NOTE: The Ttfone TT170 does not come with a charger, you can use any USB mains plug or plug the cable into your PC or Laptop to charge the phone. If you do not have one of these you can purchase a charger from www.ttfone.com

4. Making and Receiving Phone Calls

To Make Calls

1. Enter a number and Press the call key. Select either "1. SIM1" or "2. SIM2" using the down key then press the call key to call.
- To delete a digit, press the Right Soft key.
- To clear the screen, press the end call key.

To Answer Calls

When your phone rings, press the call key once to answer the call.

Accessing the Menu during a Call

To access the menu, press the Left Soft key. Scroll using the Navigation key to the desired command then press the Left Soft key again to select.

To End a Call

To end a call, press the end call key.

To Reject a Call

To reject a call without answering, press the end call key when your phone rings.

To Redial a Number

1. Press the call key, this will take you to all your recently dialed call list
2. Select the number you want to dial then

press the call key to call.

Making International Calls

1. Press the star key twice until a "+" character appears on the screen.
2. Enter the country code, area code and phone number as instructed by your long distance network service carrier.
3. Press the call key to call.

Changing the Volume during a Call

To change the volume during a call:

- Press the up or down navigation key.

To Lock and Unlock the Keypad

In order to prevent accidental dialling, the phone is set to auto lock the keypad after 60 seconds of no use.

To unlock the keypad press and hold down the Left Soft key for 3 seconds.

If you wish to lock the keypad manually press and hold the Left Soft key for 3 seconds.

5. Messages (SMS)

Writing and Sending a Message

1. Press the Left Soft key to access the menu.
2. Press Up or Down navigation key until "Messages" appears. Press the Left Soft key.
3. Press Up or Down navigation key until "Write message" appears. Press the Middle of the Navigation key, choose the recipients of the text then press the down Navigation key to start writing your text.
4. Press the middle navigation key and select either SIM1 or SIM2 using the up and down navigation and press the left soft key to Send. Other options include: Insert template, Add contact info, Add emoji, Save as draft. You can also access a stored message in your inbox and reply to it by selecting the option "Inbox" instead of "Write Message" and following the same commands.

Receiving/Reply to a Message

When you receive a new text message, your phone will display an envelope icon and "1 New Message".

1. Unlock your phone, then select read.
2. Press the Left Soft key again to see a list of available commands such as "Delete", "Reply" etc..

Actions	Description
Reply	To reply the message
Delete	To delete the message
Call	To call the sender
Lock	To lock the message so it can't be deleted
Move	To move the message
Copy	To copy the message
Mark	To mark the message as read/unread
Sort	To sort messages in a different order
Add sender to	To add the sender to your phone book
Delete repeated numbers	Delete all messages from one number
Add to blacklist	No longer allow messages from this sender

Letters and Numbers Input

Text Message Letters
English letters are set on number keys from "2" to "9". You can input numbers, upper or lower case letters and punctuation symbols. Pressing the # key while typing lets you switch between the different types of input modes. Each number key is set for three or four letters. Press the number key one time to

