

MANUAL
of
ALX13RC
TO REPLACE SEALS & OIL



1. Prepare the tools:

(Sharp screw driver/ knife / 15# and 43# wrench / measuring cup /rag /replace parts /special tool*2)




2. Loosen the top cap assembly from the outer tube.



3. Drain all oil from the forks.



4. Remove the top cap from the shaft.

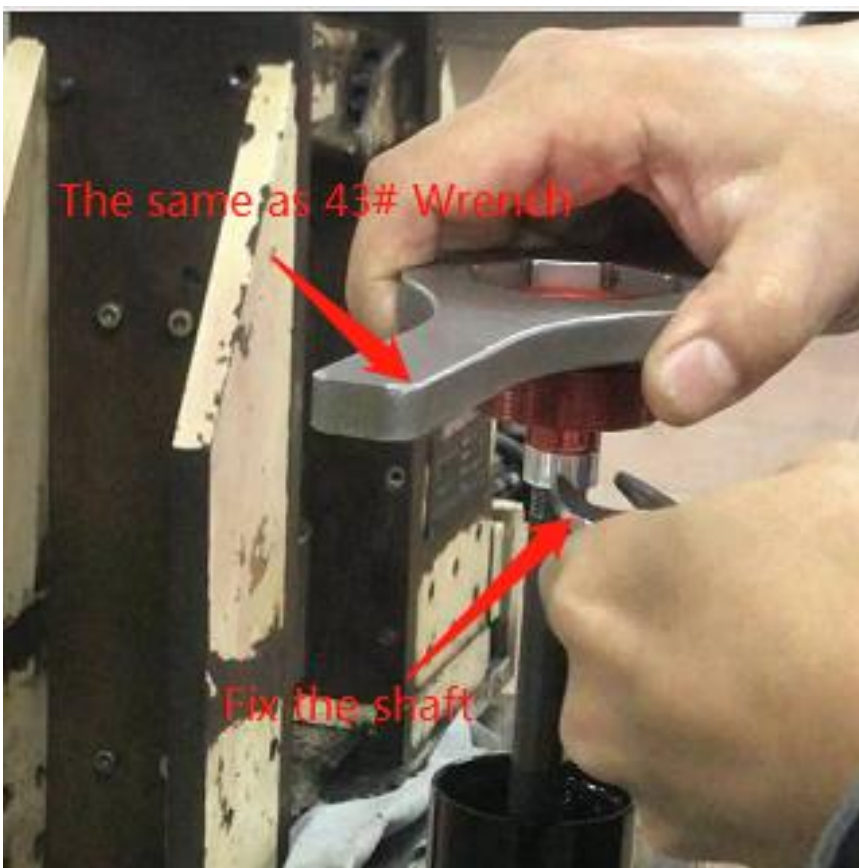

5. Fasten back the adjust screw nut



6. Remove the outer tube.




7. Remove the dust seal/ circlip/ oil seal/ washer.



8. Clean inside of the tube.




9. Mount the washer and a new oil seal.

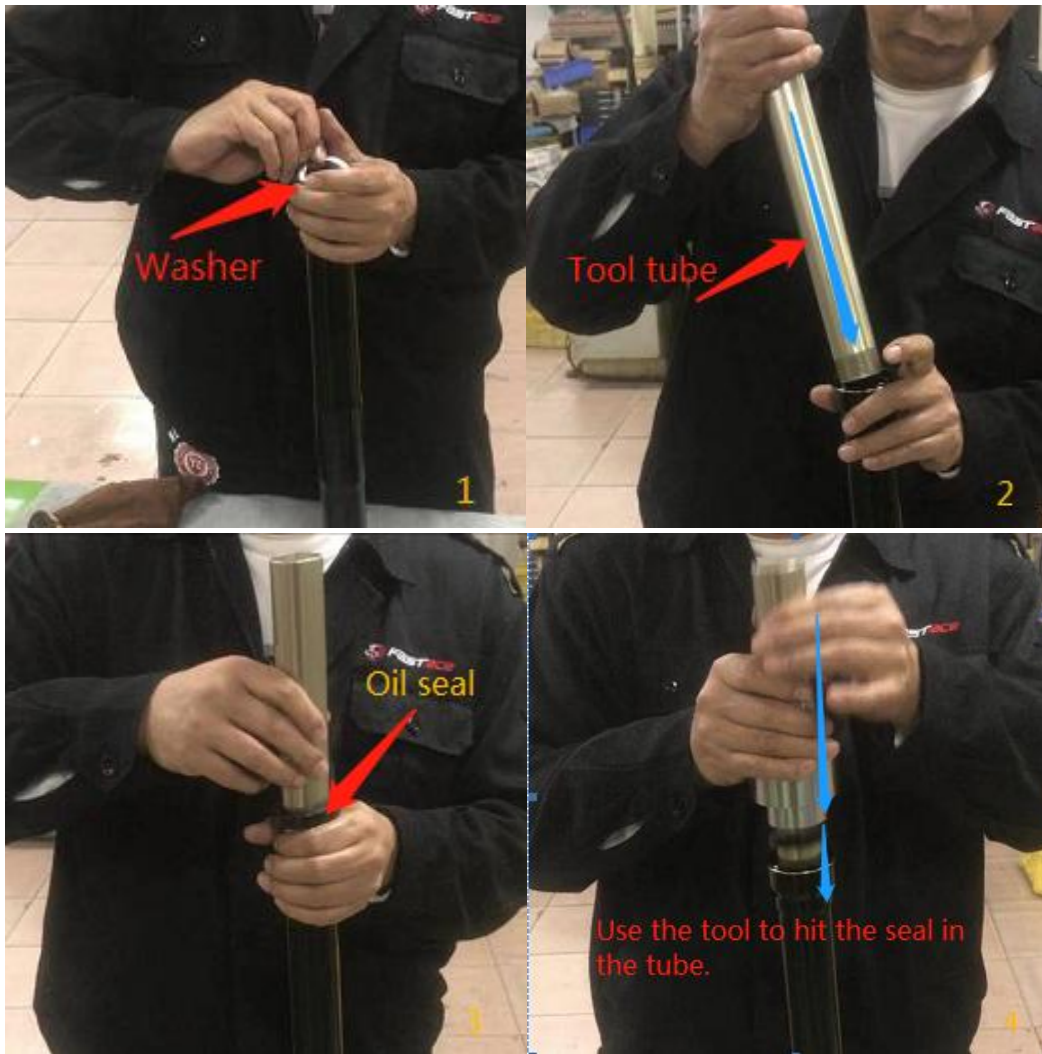

*** In figure 2: Use the tape to cover the thread to prevent to hurt the seals.**

10. Mount the circlip in groove, and mount a new dust seal.

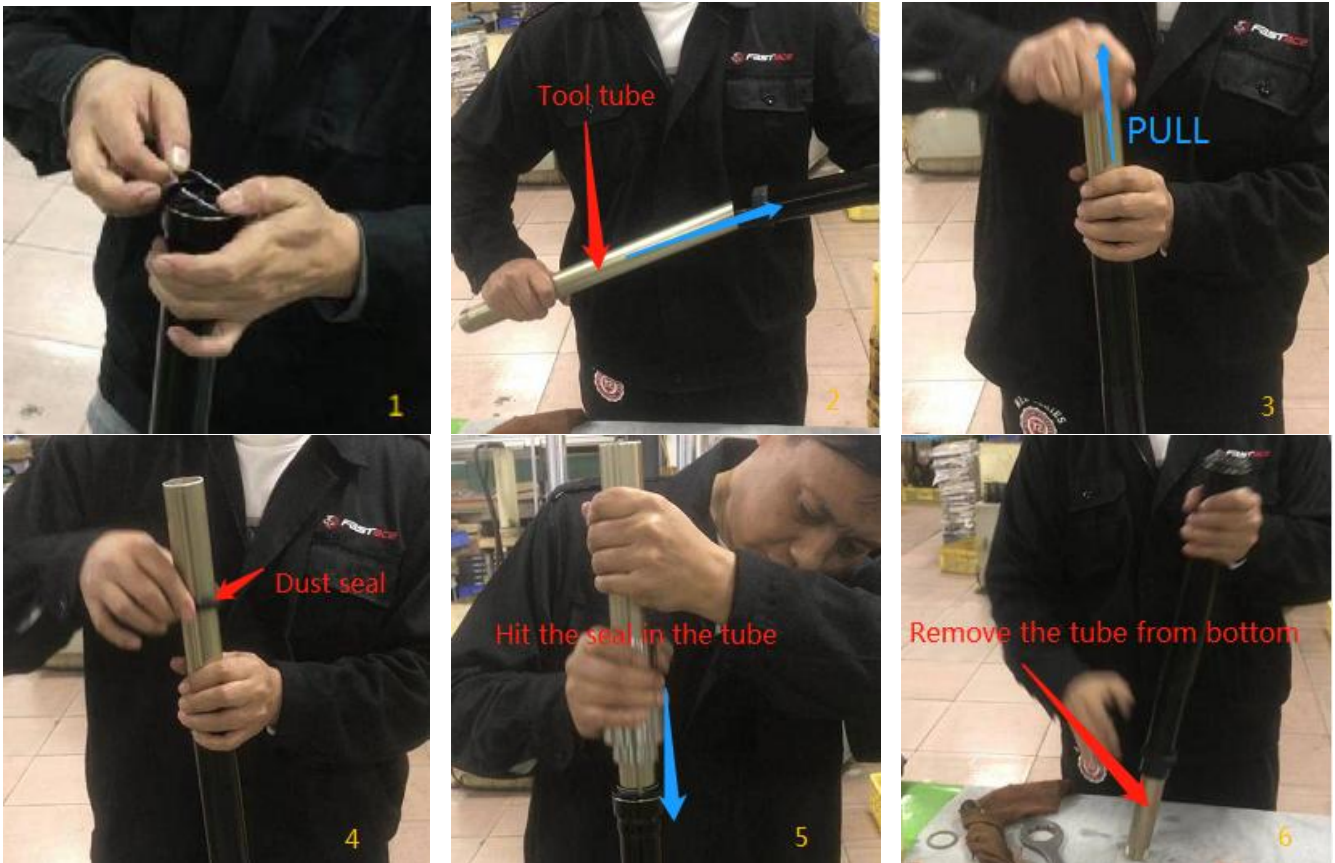

11. Slide the outer tube on to the stanchion tube carefully.

***Use the tape to cover the thread to prevent to hurt the seals..**



12. Remount the top cap on the shaft.



13. Tighten the adjuster screw nut



14. Add new oil in tubes.(Right tube: 5w 300ml. Left tube: 32w 150ml)



15. Remount the top cap into the outer tube.



16. COMPLETE!