



Serviceable Single Classic Waffle Maker  
**WWD180X**




Date Code Location  
WWYY  
(week week year year)




**038511**  
WWD180X Unit Assembly  
(without Drip Tray)



**032364**  
Cup

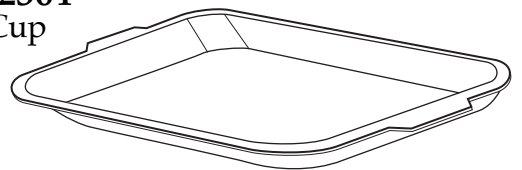

**032350**  
Drip Pan

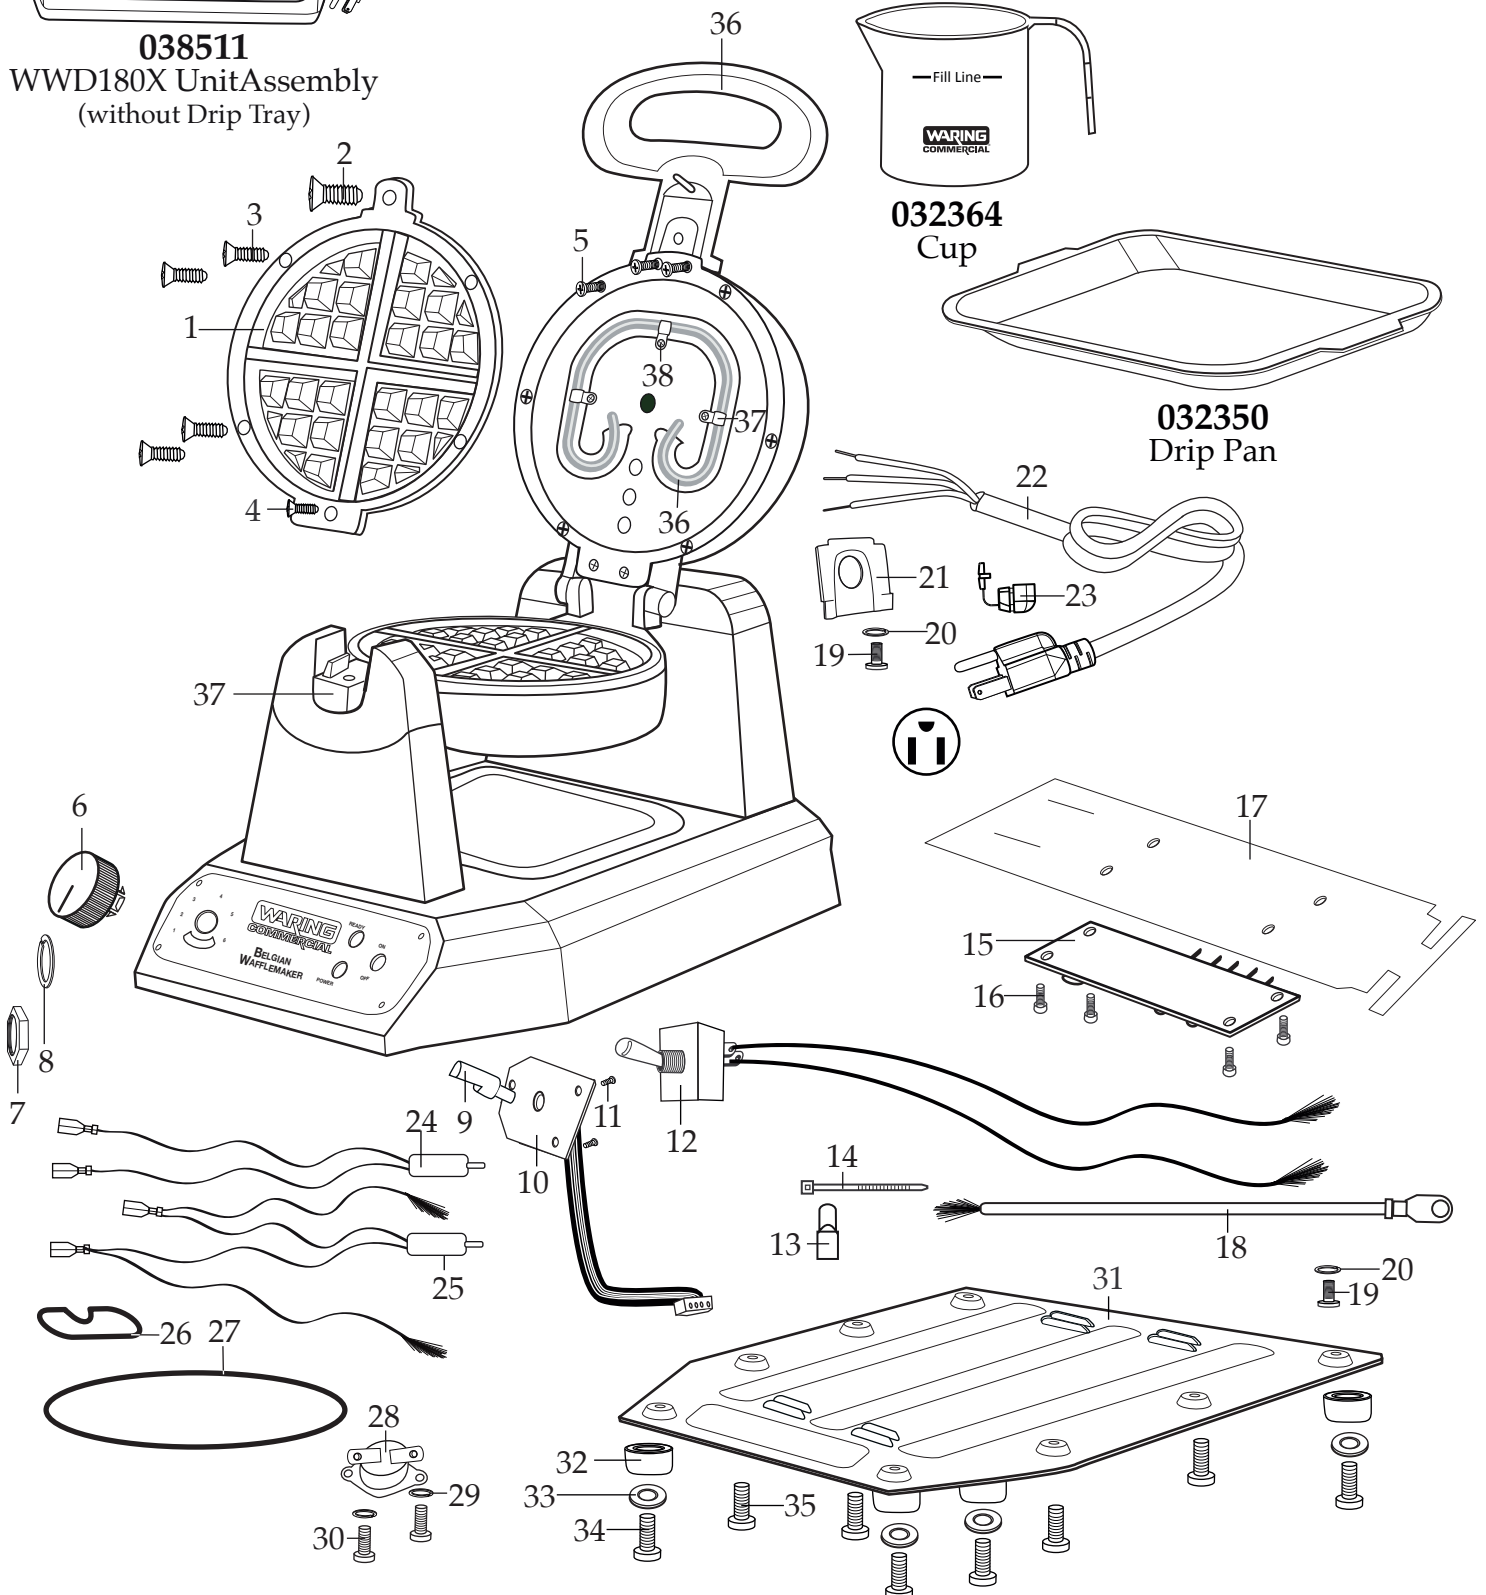

| <b>Illustration#</b> | <b>Part#</b> | <b>Description</b>  |
|----------------------|--------------|---|
| 1                    | 038638       | Belgian Waffle Plate (1 top - 1 bottom)                       |
| 2                    | 037357       | Screw / top of waffle plate (1 top plate - 1 bottom plate)    |
| 3                    | 037356       | Screw / sides of waffle plate (4 top plate - 4 bottom plate)  |
| 4                    | 038513       | Screw / bottom of waffle plate (1 top plate - 1 bottom plate) |
| 5                    | 037493       | Screw (10 top inner plate - 10 bottom inner plate)            |
| 6                    | 032352       | Knob  |
| 7                    | 016236       | Hex Nut   |
| 8                    | 032356       | Washer  |
| 9                    | 036241       | Connector Pole  |
| 10                   | 035316       | Darkness Control Board (short tape)                           |
| 11                   | 032359       | Screw (3 required)  |
| 12                   | 038512       | Toggle Switch with Leads                                      |
| 13                   | 012409       | Small Crimp Connector (4 required)                            |
|                      | 019123       | Large Crimp Connector (2 required)                            |
| 14                   | 013731       | Wire Tie (7 required)   |
| 15                   | 037490       | PCB Board   |
| 16                   | 032359       | Screw (4 required)  |
| 17                   | 030638       | Power Board Shield  |
| 18                   | 037491       | 8" Green Lead Assembly  |
| 19                   | 035298       | Ground Screw (2 required)                                     |
| 20                   | 032751       | Ground Spring Washer (2 required)                             |
| 21                   | 032371       | Cord Plate  |
| 22                   | 032363       | Cord Set  |
| 23                   | 035476       | Strain Relief   |
| 24                   | 037928       | Red Light with Leads  |
| 25                   | 037929       | Green Light with Leads  |
| 26                   | 038131       | Small Rubber Gasket   |
| 27                   | 038132       | Round Rubber Gasket   |
| 28                   | 038133       | Thermostat  |
| 29                   | 037504       | Spring Washer (2 required)                                    |
| 30                   | 032359       | Screw (2 required)  |

| Illustration# | Part#            | Description  |
|---------------|------------------|--|
| 31            | 032351           | Bottom Plate   |
| 32            | 032353           | Foot (4 required)  |
| 33            | 032354           | Foot Washer (4 required)   |
| 34            | 032355           | Foot Screw (4 required)  |
| 35            | 032750           | Bottom Plate Screw (4 required)  |
| 36            | 037502           | Heating Element (1 top - 1 bottom)   |
| 37            | 037503           | Clamp (3 top heating element - 3 bottom heating element)                                 |
| 38            | 032359<br>037504 | Screw (3 top clamps - 3 bottom clamps)<br>Spring Washer (3 top clamps - 3 bottom clamps) |
| 39            | 037488           | Top Handle   |
| 40            | 037489           | Bottom Handle  |
| 41            | 037493           | Screw (2 top handle - 2 bottom handle)   |
| 42            | 037505           | Screw (2 top heating element - 2 bottom heating element)                                 |
| 43            | 032751           | Spring Washer (2 top heating element - 2 bottom heating element)                         |
| 44            | 037506           | Insulated Sleeve (2 top heating element - 2 bottom heating element)                      |

