



MIMOSA CITY TRAVELLER STROLLER User Manual



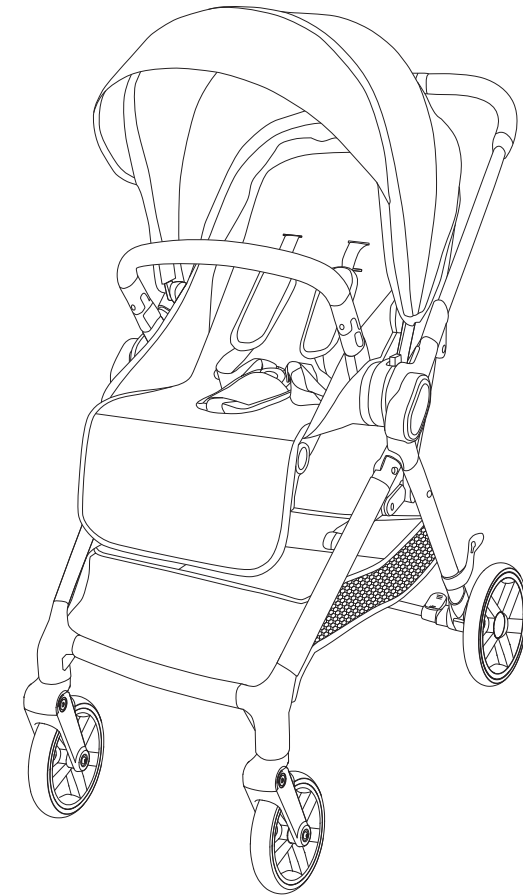
Singapore Importer/Distributor:
Kim Hin Innovation Labs Private Ltd
601 Sims Drive, Pan-I Complex,
Singapore 387382
Email: kil.cs@khi.global

Hong Kong Importer/Distributor:
Trade Solutions Ltd
Unit D, 13A/F, Gemstar Tower,
23 Man Lok Street, Hunghom,
Kowloon, Hong Kong
Email: sales@khi.global

Malaysia Importer/Distributor:
Global Retail Network Sdn Bhd
201001037475 (921399-V)
Wisma Pang Cheng Yean, Lot 5205C,
Jalan Perindustrian Balakong Jaya 1/3,
Kawasan Perindustrian Balakong Jaya,
43300 Seri Kembangan,
Selangor Darul Ehsan, Malaysia
Email: sales.support@khi.global

MMS17060

<https://mimosa-online.com>



This stroller is suitable for children from birth to 22kg/48 months (whichever is earlier). The maximum load is 22kg. The stroller is approved to European safety standards EN1888-2:2018.

IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

CONTENTS

1. Safety information.....	1
2. Stroller parts and components.....	3
3. Assembling the stroller.....	4
4. Operating the harness system.....	6
5. Adjusting the back rest.....	7
6. Adjusting the back window.....	7
7. Adjusting the foot rest.....	8
8. Operating the brake system.....	8
9. Changing the seat direction.....	9
10. Assembling the infant car seat.....	10
11. Folding the stroller.....	11
12. Cleaning and maintenance.....	12

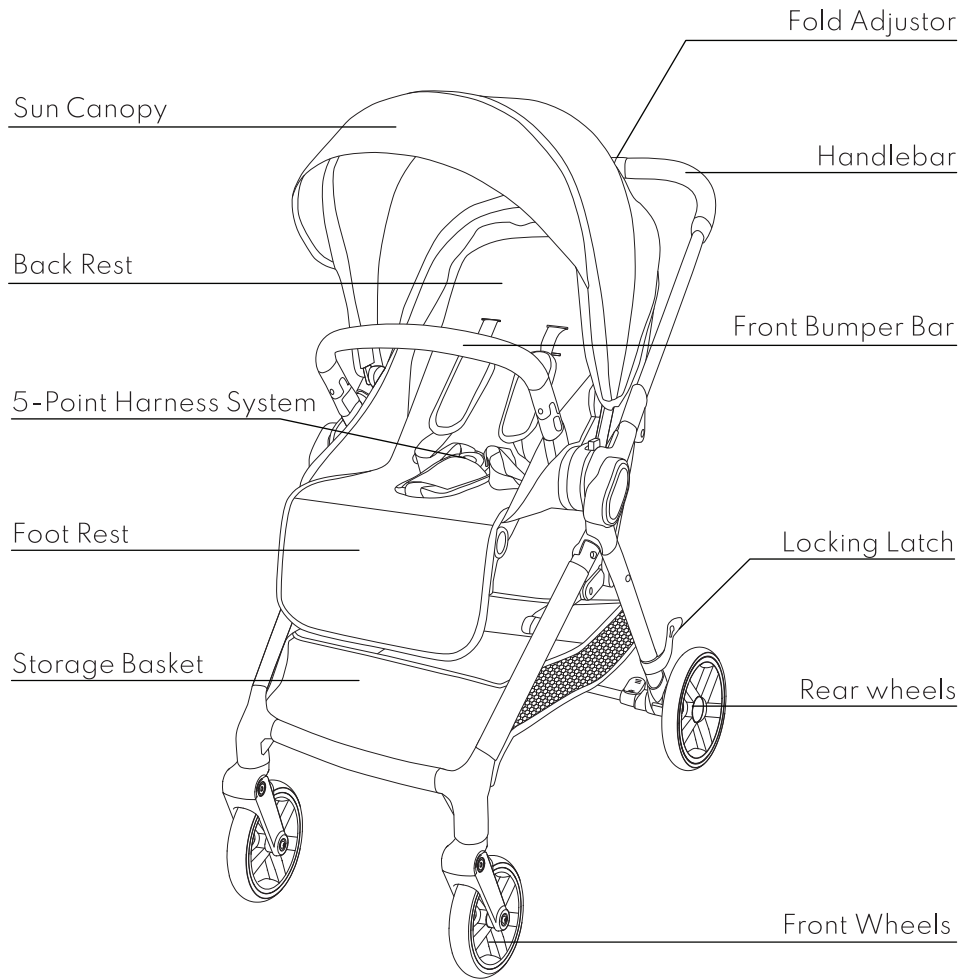
1. SAFETY INFORMATION

IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- **WARNING** Never leave the child unattended.
- **WARNING** Ensure that all the locking devices are engaged before use.
- **WARNING** To avoid injury ensure that the child is kept away when unfolding and folding this product.
- **WARNING** Do not let the child play with this product.
- **WARNING** Avoid serious injury from falling or sliding out. Always use the restraint system.
- **WARNING** Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- **WARNING** This product is not suitable for running or skating.
- **WARNING** This product is suitable for children from birth to 22kg/48 months (whichever is earlier). The maximum load of this product is 22kg. Never overload. Overloading and excessive weight may lead to instability of the stroller.
- **WARNING** For children 6 months and below, the backrest should be adjusted to the most reclined position for use. For children between 7-48 months, the backrest should be adjusted to a seating position.

- **WARNING** The maximum permissible loading for the storage basket is 5kg. Overloading and excessive weight in the shopping basket may lead to instability of the stroller.
- **WARNING** Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- **WARNING** Use this product for only one child at a time.
- **WARNING** Accessories which are not approved by the manufacturer or distributor shall not be used.
- **WARNING** Only replacement parts supplied or recommended by the manufacturer or distributor shall be used.
- **WARNING** The brake system must be engaged while placing your child into or when taking your child out of this product.
- **WARNING** Do not use if any part is broken, torn or missing.
- **WARNING** Avoid placing this product near naked heat sources such as electric bar fires, gas fires etc., or where a child could gain access to any other kinds of hazards.
- **WARNING** Always use the crotch strap in combination with the waist belt.
- **WARNING** Always use the harness provided and ensure that the harness is correctly fitted.
- **WARNING** Do not allow your child to stand on the seat unit or the car seat.
- **WARNING** Do not pull this product by bike, motorbike, car, or any vehicle.
- **WARNING** Child may slip into leg openings and strangle. Never use in a reclined carriage position unless waist and shoulder straps have been fastened.
- **WARNING** For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.

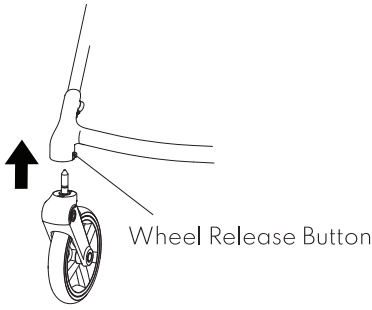
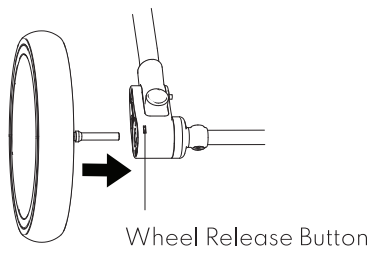
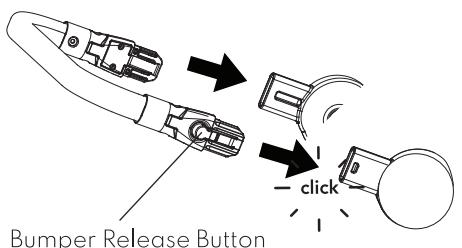
2. STROLLER PARTS AND COMPONENTS

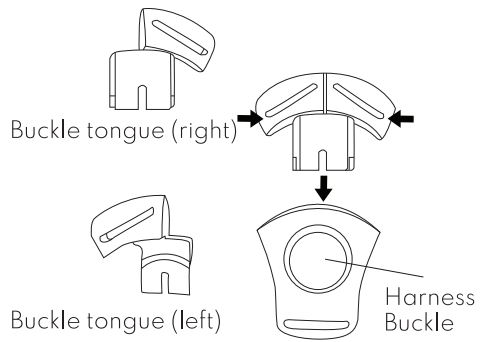
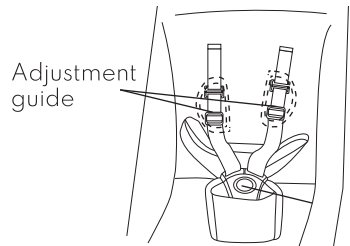
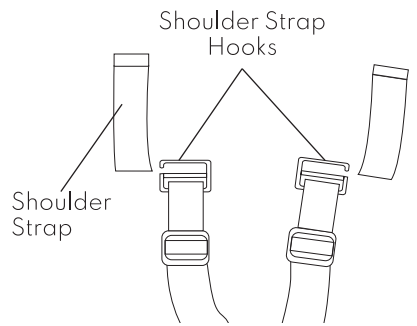


3. ASSEMBLING THE STROLLER

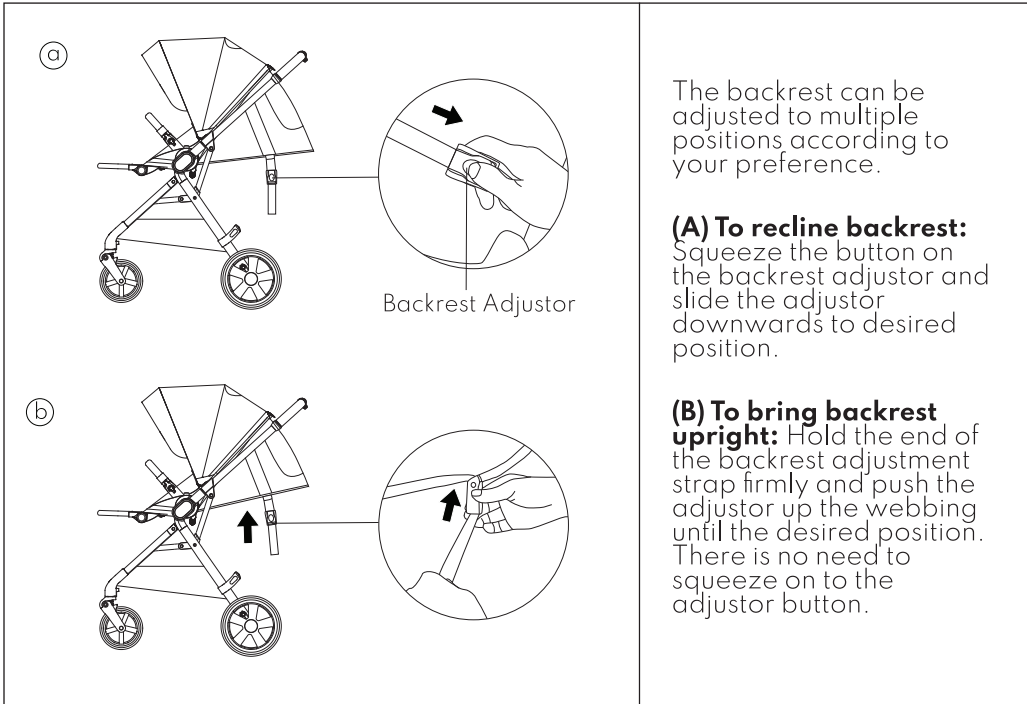
<p>A hand is shown pulling a lever labeled "Locking Latch" on the side of the stroller's frame.</p>	<p>1. Release the locking latch at the side of the stroller.</p>
<p>The handlebar is being lifted upwards. A curved arrow indicates the direction of movement. A "click" sound is indicated by a starburst symbol at the pivot point.</p>	<p>2. Lift the handlebar upwards until you hear a "click" sound.</p>
<p>The foot rest is being pushed down towards the ground. A curved arrow indicates the direction of movement. The handlebar is held steady.</p>	<p>3. Hold on to the handlebar firmly, and push foot rest down in the direction of the arrow until it cannot be pushed any further.</p> <p>Note: The fold lever behind the seat unit is used only in the folding of the stroller. Do not use the fold lever under normal use.</p>

4. OPERATING THE 5-POINT HARNESS SYSTEM

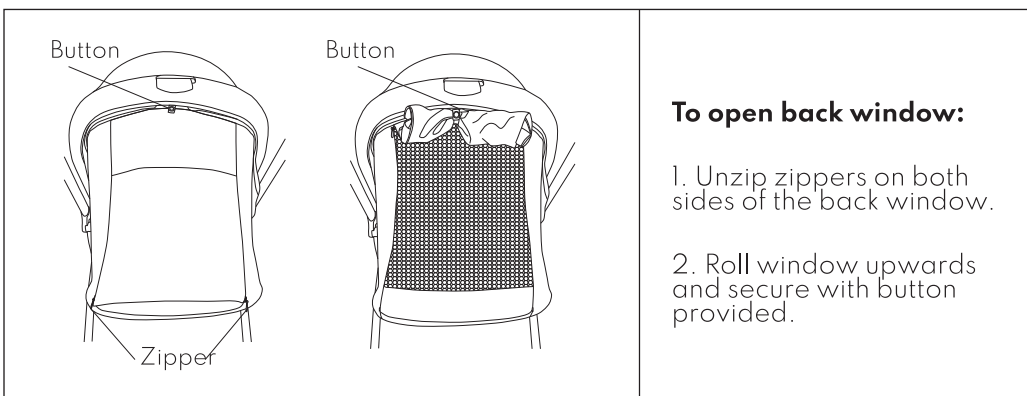
	<p>4. Front wheels assembly/disassembly</p> <p>Align and attach the front wheels into the slots by following the direction of the arrows in the diagram, until you hear a “click” sound.</p> <p>To disassemble the wheel, push the wheel release button inwards and remove the wheels.</p>
	<p>5. Rear wheels assembly/disassembly</p> <p>Align and attach the rear wheels into the slots by following the direction of the arrows in the diagram, until you hear a “click” sound.</p> <p>To disassemble the wheel, push the wheel release button inwards and remove the wheels.</p>
	<p>6. Bumper bar assembly/disassembly</p> <p>To insert the bumper bar: Align the bumper bar to the slots and push in until you hear a “click” sound. Pull on the bumper bar to ensure that it is securely attached.</p> <p>To remove the bumper bar: Press the bumper release button on both sides of the bumper bar and pull it outwards.</p>

	<p>1. Operating the buckle</p> <p>To fasten the buckle: Put the left and right tongues of the buckle together, and ensure that they are firmly joined together. Insert the joined buckle tongues into the harness buckle until you hear a “click” sound. Pull on the harness straps to ensure that they have been securely fastened.</p> <p>To release the buckle: Press the middle release button to release the buckle.</p>
	<p>2. Adjusting the shoulder strap length</p> <p>Unbuckle the shoulder pads from the shoulder straps and adjust the adjustment guides to the required length.</p>
	<p>3. Adjusting the shoulder strap height</p> <p>The shoulder straps can be adjusted to 2 positions to suit your child's height.</p> <p>To adjust: Unbutton the shoulder pads and unhook the shoulder straps. Thread the top piece of shoulder strap into the most suitable shoulder belt slot, hook the straps together and button the shoulder pads back in place.</p> <p>Please ensure that both shoulder straps are at the same height setting.</p>

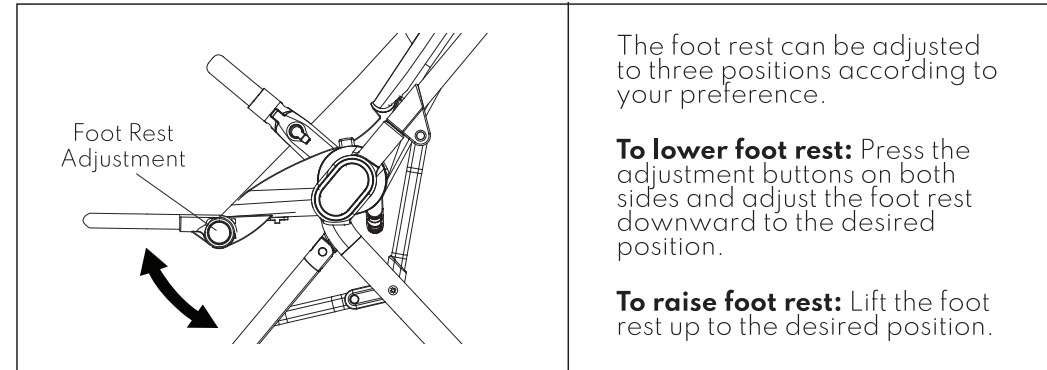
5. ADJUSTING THE BACK REST



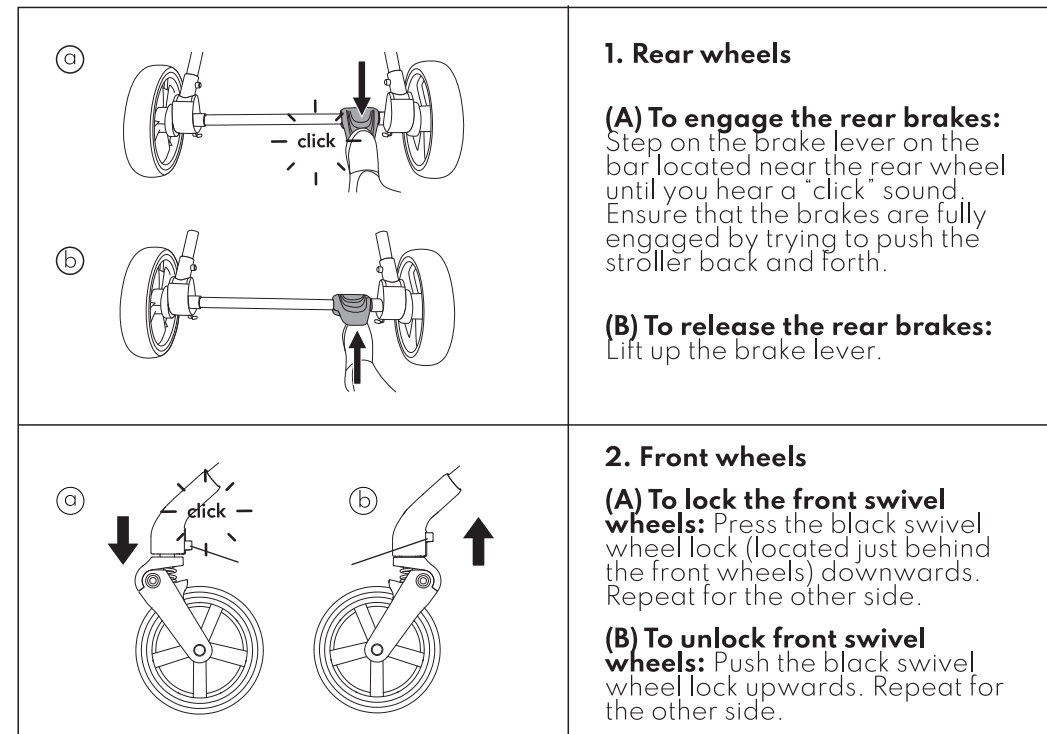
6. ADJUSTING THE BACK WINDOW



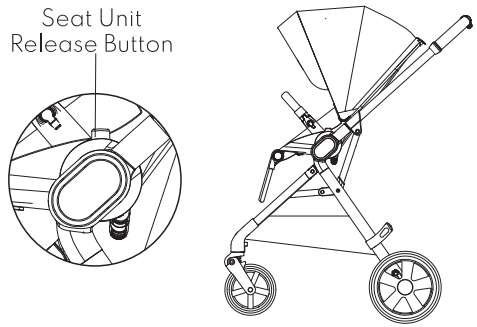
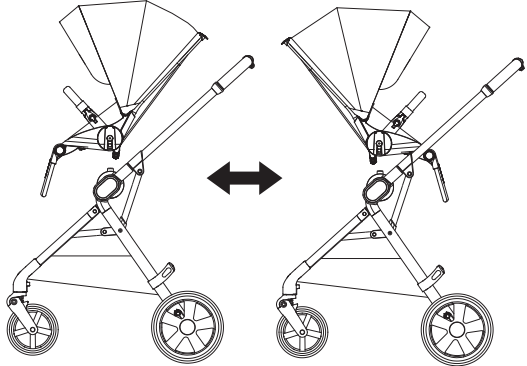
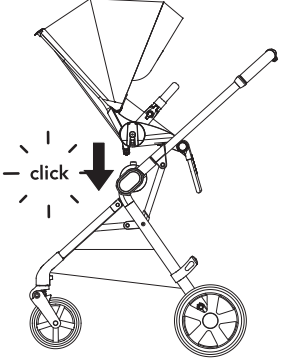
7. ADJUSTING THE FOOT REST



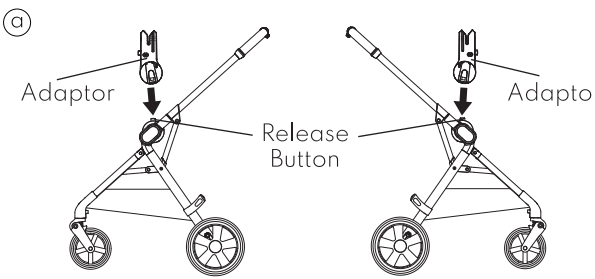
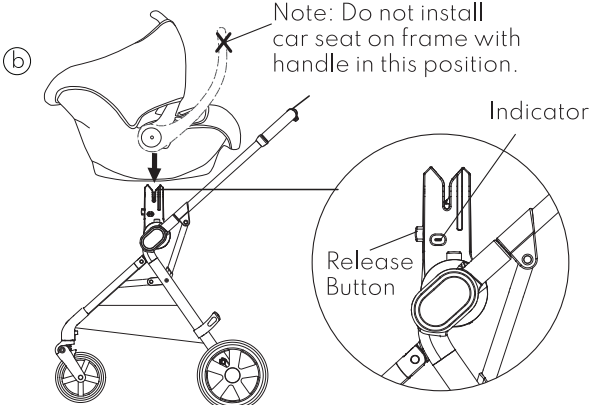
8. OPERATING THE BRAKE SYSTEM



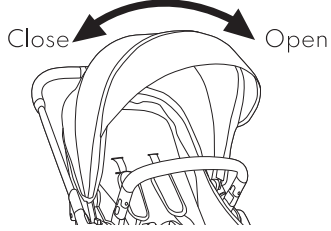
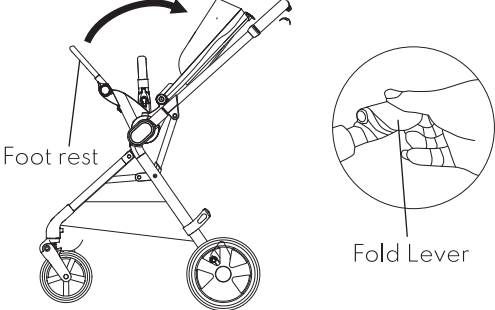
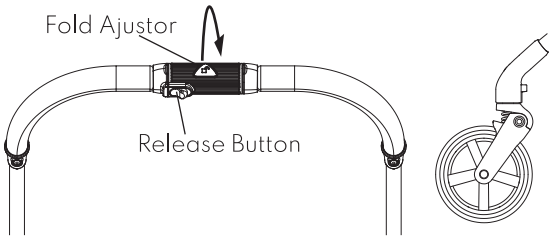
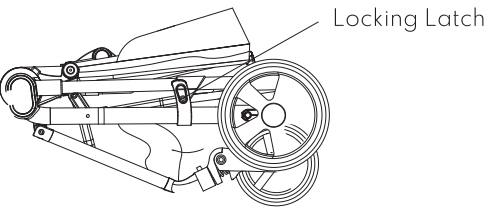
9. CHANGING THE SEAT DIRECTION

 <p>Seat Unit Release Button</p>	<p>1. Holding both sides of the bumper bar, push the release buttons on both sides downwards with your thumbs. At the same time, lift the seat unit upwards to release it from the frame.</p>
	<p>2. Rotate the seat unit to the desired direction.</p>
	<p>3. Attach the connectors on both sides of the seat unit into the attachment slots on both sides of the frame until you hear a "click" sound.</p>

10. ASSEMBLING THE CAR SEAT

 <p>(a)</p> <p>Adaptor</p> <p>Release Button</p> <p>Adaptor</p> <p>Note: Do not install car seat on frame with handle in this position.</p>	<p>1. To install</p> <p>(A) Remove seat unit from the frame following instructions in Section 9 of the stroller's user manual.</p> <p>Insert the left and right car seat adaptors into the attachment slots on both sides of the stroller frame until you hear a "click" sound. (The release buttons on the adaptors should face the front.)</p> <p>(B) Position the infant car seat in the parent-facing direction and place it on to the adaptors until you hear a "click" sound. The colour indicator on the adaptor should turn green when the car seat is securely fitted.</p> <p>Note: The infant car seat must be installed only in the parent-facing direction. Remove the car seat before folding the stroller. When the car seat is installed on the stroller frame, do not adjust the car seat's handle to the direction shown in (B)</p>
 <p>(b)</p> <p>Indicator</p> <p>Release Button</p>	<p>2. To detach</p> <p>Push the adjustment buttons on both sides of the stroller downwards. At the same time, lift the car seat perpendicularly upward off the frame.</p>

11. FOLDING THE STROLLER

	<p>The stroller can only be folded when it is attached with the seat unit, or when empty. Do not attempt to fold the stroller when the infant car seat is installed.</p> <p>1. Close the sun canopy by retracting it fully to the rear of the stroller.</p>
	<p>2. Lift the seat fold lever at the back of the seat unit and align both the foot rest and back rest to the handlebar.</p>
	<p>3. Slide the release button towards the right with your thumb, then gently push handlebar downward while rotating the fold adjustor forward.</p> <p>Note: Ensure that the front wheels are pointing towards the front prior to folding.</p>
	<p>4. Secure the stroller with the locking latch by the side of the frame.</p>

12. CLEANING AND MAINTENANCE

Maintenance Tips

These tips will help you take care of your Mimosa stroller and ensure a smooth ride.

- Periodically check the stroller for damaged or worn parts. Do not use this stroller if any part is damaged or worn.
- Periodically remove the swivel wheels and brush off any dirt or sand. Use a brush and water to clean dirt off the wheels. Do not submerge the wheel bearings in water.
- Use a soft brush to clean sand and dirt off the frame. Take care to brush dirt away from rotating or sliding parts.
- Clean the frame with a soft towel and lukewarm water and wipe off any remaining water with a dry cloth.
- Use a sponge, warm water and liquid soap to gently rub off any dirt on the handlebar foam. Wipe clean any soap residue left on the handlebar.
- Use a clean, damp cloth to wipe clean the seat unit.
- Store your Mimosa stroller and its accessories in a dry place and leave them unfolded when wet to prevent mould.

Cleaning the fabrics

- The fabric of the sun canopy and seat unit cannot be removed from their frames for machine wash.
- You can use a sponge, warm water and mild liquid soap to gently rub off any dirt on the fabric.

