

X3说明书 (英文-葡语双语版)
 说明书材质: 105g铜版纸
 双面印刷
 尺寸: 80*200mm

Tranya

X3

Tranya Sports Open Earbuds


User Manual

V2020916


15-MONTH WARRANTY

ACTIVATE WITHIN 14 DAYS
tranya.com/pages/register-product
 Email: support@tranya.com


PACKAGE LIST

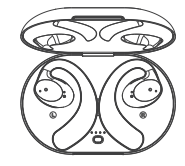


Wireless Earbud * 2

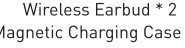

Magnetic Charging Case * 1




User Manual * 1

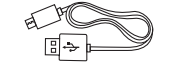

Type-C Charging Cable * 1

IMPORTANT NOTES

- Register your product on tranya.com to get an EXTRA three-month warranty for free.
- Before using the X3 wireless earbuds, please charge both the case and earbuds.
- If both earbuds don't sync together, please reset the earbuds.
- If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.

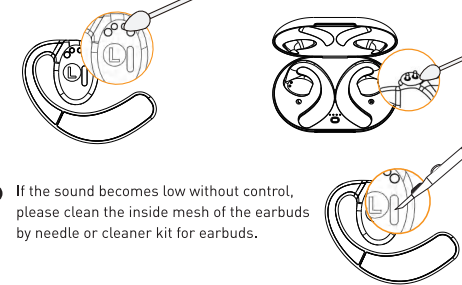

If the sound becomes low without control, please clean the inside mesh of the earbuds by needle or cleaner kit for earbuds.


SMART TOUCH CONTROL

Play/Pause		Tap one time(L/R)
Previous/Next track		Tap 3 times(L/R)
Volume down/up		Tap twice(L/R)
Activate Siri/other voice control software		Press and hold for 1 second(L/R)
Answer a call		Tap one time(L/R)
Reject/End a call		Press and hold for 1 second(L/R)
Game Mode (Automatically return to normal mode after power off)		Tap 4 times(L/R)

POWER ON




Automatically




Manually
(Long press and hold BOTH earbuds for 4 seconds)

POWER OFF

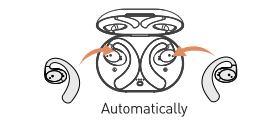

Automatically

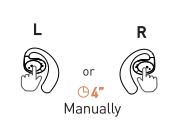

Manually
(Long press and hold EACH earbuds for 4 seconds)

Note: When the charging case is at low battery or out of power, the earbuds will not automatically power on/off, please turn them on/off manually.

WEARING


- Put the earbuds into your ears.
- Rotate the earbuds till the end of the ear hook is inserted behind the ear.

CONNECT THE EARBUDS

- Power on the earbuds and turn on the Bluetooth in your phone.
- Select "X3" and confirm.


CHARGING

1 Case Power Display

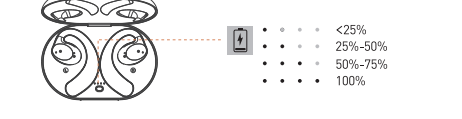


Charging: White indicator light is on.
Fully charged: White indicator is off.

2 Charging the Earbuds

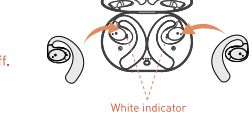

Charging: White indicator light is on.
Fully charged: White indicator light is off.

3 Charging the Case

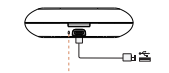

Charge it with the included Type-C cable.
Charging: Red indicator light is on.
Fully charged: Green indicator light will be on, indicator light

HOW TO RESET THE EARBUDS

If your earbuds stop syncing with each other, please follow below steps to reset the earbuds:

- Turn off the earbuds and put them back to the charging case, then you will see both indicators light.
- Press and hold the button on the case up to 8-10s until the white lights on the earbuds and case flash 3 times at the same time.
- The earbuds will sync together and enter the pairing mode automatically.

FAQ

Q: Why does signal interruption occur in some places, such as along the railway and the airport?

A: There are usually lots of underground cable lines along the places mentioned above, which might cause electromagnetic interference and result in the signal interruption.

Q: My earbuds don't charge, what can I do?


A: Please try to follow below steps:
 1. Clean the charging slot on charging case.
 2. Clean the charging connector on earbuds.

Q: Why won't my earbuds power on/off automatically?

A: The earbuds would not power off automatically when the case is at low battery or out of power. Please recharge the case. And you can long press for four seconds to power on and long press for four seconds to power off the earbuds.

Q: Will the Bluetooth mouse cause the signal interference?

A: Perhaps, When your Bluetooth mouse and earbuds are connected to the same device, it might happen.



For more information, please visit:
tranya.com

For any assistance, email us:
support@tranya.com

Made in China
 FC CE RoHS

Tranya

Manufacturer: Cheerstar Technology Co., Ltd
 Address: 3F,Block B,Jiuwei 3rd Industrial Park,Hangcheng Street, Baoan District,Shenzhen,China

EC REP: www.cheerstar.com
 UK AR: www.cheerstar.com

Tranya

X3

Fone de Ouvido Tranya Sport


Manual do Usuário

V20220922


15 MESES GARANTIA ATIVAR DENTRO DE 14 DIAS

tranya.com/pages/register-product
 Email: sua@tranya.com


CONTEÚDO DA CAIXA

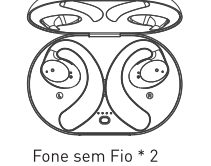


Fone sem Fio * 2



Estojo de Carregamento * 1




Manual do Usuário * 1

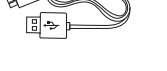

Cabo de Carregamento Type-C * 1

INFORMAÇÕES IMPORTANTES

- Registre o seu produto em tranya.com para ganhar três meses de garantia EXTRA.
- Antes de usar os fones X3, carregue o estojo e os fones.
- Se os fones não sincronizarem, por favor resete os fones.
- Se os fones não carregarem, por favor limpe o slot no estojo de carregamento e a superfície de contato dos fones com um cotonete.

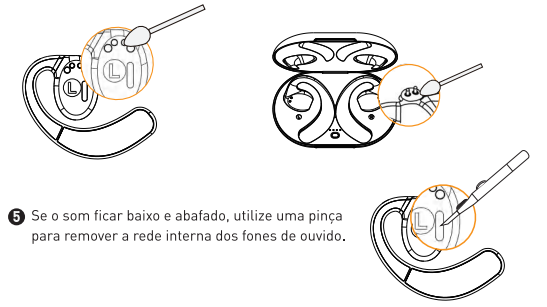


Se o som ficar baixo e abafado, utilize uma pinça para remover a rede interna dos fones de ouvido.


CONTROLE DE TOQUE

Play/Pause		Clique 1 vez (L/R)
Anterior/Faixa Próxma		Clique 3 vezes (L/R)
Diminuir/Aumentar Volume		Clique 2 vezes (L/R)
Ativar Siri/outra assistente de voz		Clique e segure por 1 segundo (L/R)
Atender Chamada		Clique 1 vez (L/R)
Rejeitar/Encerrar chamada		Clique e segure por 1 segundo (L/R)
Modo Jogo (Retorna automaticamente ao modo normal após desligar)		Clique 4 vezes (L/R)

LIGANDO

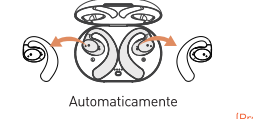

Automaticamente

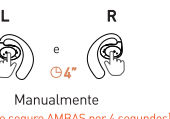


Manualmente
(Pressione e segure AMBAS por 4 segundos)

DESLIGANDO



Automaticamente



Manualmente
(Pressione e segure CADA por 4 segundos)

Nota: Quando o estojo de carregamento estiver com pouca ou nenhuma carga os fones não ligam/desligam automaticamente. Por favor, desligue-os manualmente.

USANDO

- Coloque os fones dentro dos ouvidos.
- Gire os fones de ouvido até que a extremidade do gancho de fixação fique atrás da orelha.

CONECTANDO OS FONES

- Ligue os fones e ligue o Bluetooth no seu celular.
- Selecione "X3" e confirme.

CARREGANDO

1 Carregando o estojo




Carregando o estojo: O indicador branco está aceso.
Totalmente carregado: O indicador branco está desligado.

2 Carregando os fones



Carregando os fones: O indicador branco está aceso.
Totalmente carregado: O indicador branco está desligado.

3 Carregando o estojo

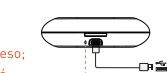

Carregue-o com o cabo Tipo C incluso.
Carregamento: O indicador vermelho está aceso.
Totalmente carregado: O indicador verde está aceso. Luz Indicadora

COMO RESETAR OS FONES

Se os fones pararem de sincronizar um com o outro, por favor siga os passos abaixo para resetá-los:

- Desligue os fones e coloque-os de volta na case, então o LED indicador de bateria dos fones acenderá.
- Pressione e segure o botão da case de 8-10s até que o LED pisque 3 vezes na cor branca de forma sincronizada, nos fones e na case.
- Os fones serão sincronizados e entrarão em modo de pareamento automaticamente.

FAQ

Q: Por que a interrupção do sinal ocorre em alguns lugares, como ao longo da metrô ou aeroporto?

A: Geralmente, há muitos cabos subterrâneos nos lugares mencionados acima, portanto são mais propensos a produzir interferência eletromagnética que resulta na interrupção do sinal.

Q: Meus fones não carregam, o que posso fazer?

A: Por favor, tente os seguintes passos abaixo:
 1. Limpe o slot de carregamento do estojo.
 2. Limpe o conector de carregamento dos fones.

Q: Por que meus fones não ligam ou desligam automaticamente?

A: Os fones podem não desligar automaticamente quando o estojo está com pouca ou nenhuma carga. Por favor, recarregue o estojo. Você também pode pressionar por quatro segundos para ligar ou desligar.

Q: Mouses Bluetooth podem causar interferência no sinal?

A: Talvez, se o mouse Bluetooth e os fones estiverem conectados no mesmo dispositivo, isso poderá ocorrer.



Para mais informações, por favor visite:
tranya.com

Para qualquer assistência, envie-nos um e-mail:
bra@tranya.com

Made in China
 FC CE RoHS

Tranya

Manufacturer: Cheerstar Technology Co., Ltd
 Address: 3F,Block B,Jiuwei 3rd Industrial Park,Hangcheng Street, Baoan District,Shenzhen,China